 


Original User's Instructions

18-inch Chrome Floor Fan

SKU:31613

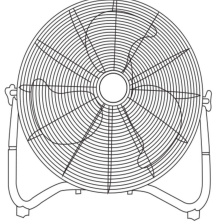


READ BEFORE USE
PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

CONTENT

• WHAT'S IN THE BOX	3
• TOOLS REQUIRED	4
• SPECIFICATIONS	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS	4
• IMPORTANT SAFETY WARNINGS	5
• PRODUCT DESCRIPTION AND IDENTIFICATIONS	7
• ASSEMBLY AND OPERATING INSTRUCTIONS	8
• CARE AND CLEANING	9
• TROUBLE SHOOTING	9
• DECLARATION OF CONFORMITY / PERFORMANCE	10
• ENVIRONMENTAL INFORMATION	11
• GUARANTEE	12
• CUSTOMER SUPPORT	12

1

 WHAT'S IN THE BOX

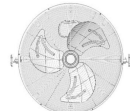

Main fan body and grilles



Fixing legs



Fan stand

TOOLS REQUIRED

SPECIFICATION

- 220-240V~ 50-60Hz
- AC copper clad aluminum motor
- 3 speed settings
- TB function

If you do not have all these items, please contact:
[www.toolstation.com/contact](mailto:info@toolstation.com)
Telephone 0330 333 3303 Mobile Friendly 0330 333 3303
Email info@toolstation.com

2

TECHNICAL DATA

Model	FSD-18
Rated Voltage	220-240V~ 50-60Hz
Rated Power Rate	180W
Plug	BS plug, non-reversible 3A fuse
Power Cord Length(mm)	1800
Power Cord Spec	H05VV-F 3x0.75mm ²
Dimensions (H x L x W-mm)	545x220x360
TB function	Yes

Information to identify the models to which the information relates to (if not necessary)			
Description	Symbol	Value	Unit
Maximum fan flow rate	F	73.95	m ³ /min
Fan power input	P	31.5	W
Service Value	SV	0.87	(m ³ /hwyW)
Standby power consumption	P _{stb}	—	W
Fan sound power level	L _{wa}	54.7	dB(A)
Maximum air velocity	c	4.9	Meters/sec
Seasonal electricity consumption	Q	29.28	kWh/a
Measurement standard for service value	EN IEC 60335-2-19 - Conform (test and regulation) for household and similar purposes - Methods for measuring performance		
Contacts details for obtaining more information	Toolstation (company number 04371231)		

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



UK Conformity Assessed



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



Earthing connection

3

IMPORTANT SAFETY WARNINGS

- Read rules for safe operation and instructions carefully.
- The product is for household use only.
- Indoor use only.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a suitably qualified person in order to avoid a hazard.
- Connect the appliance to single-phase AC supply of the voltage specified on the rating plate.
- This product must be connected to Earth.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- **DO NOT** use fan in window, rain may create electrical hazard.
- **DO NOT** place anything on top of unit.
- **DO NOT** run the cable under carpeting. Do not cover the appliance or the cable. Arrange the cable away from walkways to where it can be tripped over.
- Use the fan in a well-ventilated area. While using, distance of no less than 20cm should be kept away from wall or corner to ensure the air intakes or exhaust openings should not be blocked unexpectedly.
- The fan must not be located immediately below or besides a curtain or the likes.
- Never leave the fan unattended while it is in use. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Extreme caution is necessary when any fan is used by or near children, invalids or elderly person and whenever the fan is left operating and unattended.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision

 
4

or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- To avoid the risk of accidental strangulation from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.
- Cleaning and user maintenance shall not be made by children without supervision.
- **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

5

PRODUCT DESCRIPTION AND IDENTIFICATIONS

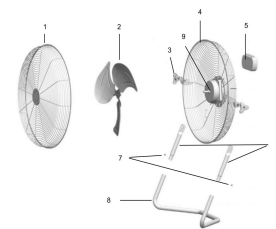

1. Front grille
2. Fan blade with locking screw
3. Mounting screws
4. Rear grille
5. Speed control box
6. Fixing leg
7. Fixing screw
8. Fan stand
9. Motor

6

 
ASSEMBLY AND OPERATING INSTRUCTIONS

The fan is packaged with some parts unattached and requiring a little, simple assembly.

WARNING: Do not operate until fully assembled and with all parts correctly attached. The fan blade may have sharp edges. Handle with extreme care.

Assembly

- Unpack the fan and remove all the parts from the package. Retain the packaging until assembly is complete.
- Attach the fan body and the accessory parts from the box.
- Insert the two stand fixing legs into the fan supports by both sides and fix them with the fixing screw provided on the frame.
- Install the main fan body on the fan stand and secure with the mounting screws.
- Adjust the fan tilt angle and tighten the mounting screws in place.

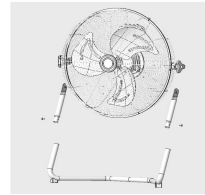

Operating instructions

- Set the fan on a dry, level and sturdy surface.
- Plug the fan in the main.
- The speed is controlled by the speed key box on the rear grille on the fan body.
- To turn the fan On, press down the key either in "I", "II", or "III". To change the speed of the fan by selecting the speed controls keys, i.e. "I" is the low speed, "II" is the medium speed, "III" is the high speed.
- To turn the fan OFF, press down the key "0".
- To adjust the tilt angle of fan, loosen the mounting screws slightly and simply move the fan body unit up or down then tighten them back in position.

Caution: The fan should always be switched off when making this adjustment.

7

CARE AND CLEANING

- Disconnect the power and allow the fan rotation to stop.
- Clean the exterior only of this fan with a soft dry cloth.
- Do not use any chemical or abrasive cleaners.
- When the fan is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean the fan blade and grilles with a soft damp cloth.
- **CAUTION:** The fan blade may have sharp edges. Handle with extreme care.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The fan is not operating	- The plug is not fully inserted into the wall outlet - The wall outlet experienced an overload - Fuse in plug fails	- Make sure that the plug is fully inserted into the basic AC wall outlet - Unplug the fan, tripped the main electrical breaker box. If you have a tripped breaker, reset it. If the problem persists, contact a qualified, licensed electrician - Remove and inspect the fuse located in the plug. If the fuse is tripped, replace with the appropriate 3 Amp fuse. If the problem persists, contact a qualified, licensed electrician
The fan is rattling	- The grilles are not secured properly - Screws are not securely fastened	- Tighten screws

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR APPLIANCE, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE APPLIANCE YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

8

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: 31613 (FSD-18)
Product Description: 18-inch Chrome Floor Fan

1. Toolstation (company number 04372131)
This declaration of conformity is issued under the sole responsibility of Toolstation
2. Object of the declaration
The object of the declaration described above is in conformity with the relevant Community harmonization legislation:
 - Electrical Equipment (Safety) Regulations 2016 (LVD 2014/30/EU)
 - Electromagnetic Compatibility Regulations 2016 (EMC 2014/30/EU)
 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS 2011/65/EU & 2015/863/EU)
 - REACH (EC) No 1907/2006
3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):
 - BS EN 60223
 - BS EN 60335-2-80
 - BS EN 60335-1
 - BS EN 55014-1
 - BS EN 55014-2
 - BS EN 61000-3-2
 - BS EN 61000-3-3
4. Additional information:
Signed for and on behalf of Toolstation Limited

9

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

10

GUARANTEE

Toolstation products deliver reliable service for normal household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, the Toolstation Guarantee will cover repair or - at the discretion of Toolstation - replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in its manual.
- It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by improper repair.
- Specifications are subject to change without notice.
- The manufacturer declares any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact
Call us 0800 100 7211
Mobile friendly 0330 333 3303
Email: info@toolstation.com

Notes in Blue

11