 




Original User's Instructions

Auto Rewind Hose Reel 30m

SKU: 14207

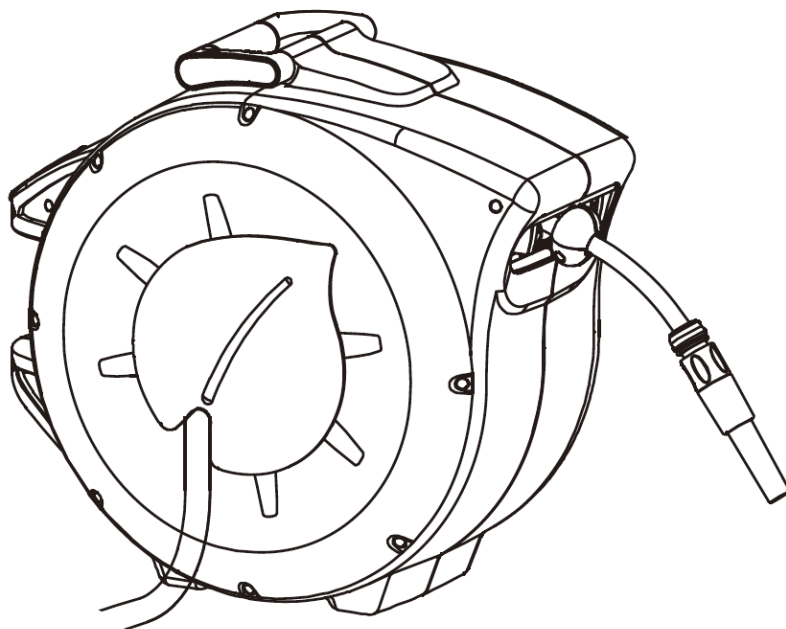


READ BEFORE USE
PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


CONTENT

- **WHAT’S IN THE BOX----- 3**
- **TOOLS REQUIRED----- 5**
- **SPECIFICATIONS----- 5**
- **IMPORTANT SAFETY WARNINGS----- 5**
- **ASSEMBLY AND OPERATING INSTRUCTIONS----- 6**
- **CARE AND CLEANING----- 10**
- **GUARANTEE----- 10**
- **CUSTOMER SUPPORT----- 10**

WHAT'S IN THE BOX

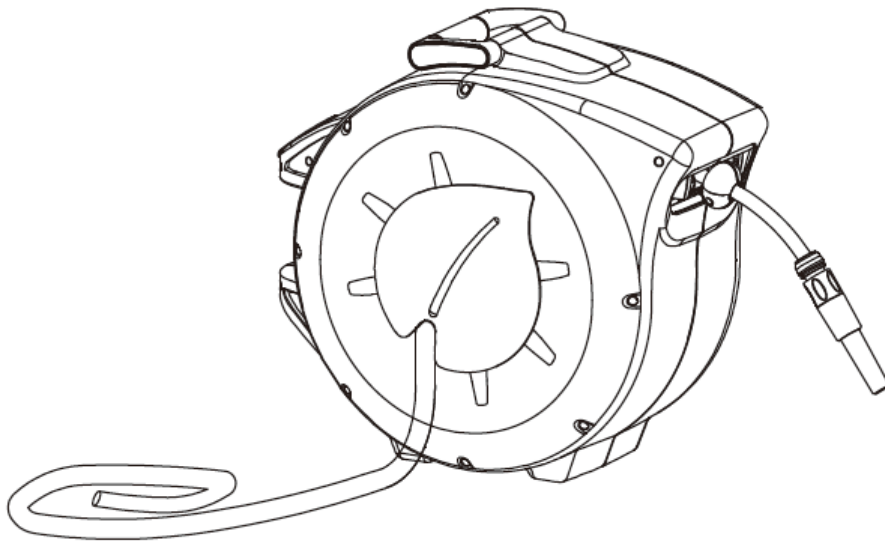

Auto rewind hose reel

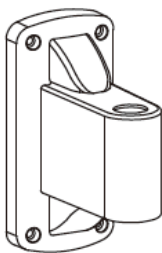 

Wall mounting bracket



Securing pin



Universal tap adaptor
Pre-assembled



1/2" hose connector
Pre-assembled



1/2" water stop hose connector
Pre-assembled



Adjustable nozzle
Pre-assembled



Wall plug x4



Screw x4

If you do not have all these items, please contact:
www.toolstation.com/contact
Telephone 0808 100 7211 Mobile friendly 0330 333 3303
Email info@toolstation.com

TOOLS REQUIRED

PH2 Screwdriver, impact drill and masonry drill bit

SPECIFICATIONS

- High water flow
- Optimal performance with an adjustable nozzle
- Quick and easy rewinding of the hose without any kinks and twists.
- 30m reinforced 3-layered hose
- Hose diameter: Approx.: Inner 11mm, outer 15mm
- Wall-mounted for 180° pivot
- Max operating pressure: 6 bar
- Weight approx.: 10.8kg
- Dimensions (H x W x D-mm) approx.: 535*265*470

IMPORTANT SAFETY WARNINGS

- The auto rewind hose reel is designed for home watering application using cold water only. It's not intended for commercial applications.
- Before use, ensure the reel is securely attached to the wall and free of obstructions.
- **Do not** place undue force on the reel casing. Undue force may damage the casing or the bracket.
- **WARNING:** This product shall not be used by children. Children should be supervised to ensure that they do not operate or play with the auto rewind hose reel. Ensure children are clear of the hose and reel casing when unwinding and rewinding.
- This product can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved.
- Always walk the hose back to the reel when rewinding.
- Regularly inspect the bracket and securing pin for signs of wear.
- Always close the water source (water tap) after use of the garden watering products.
- **Do not** direct the water jet towards persons, animals or electrical equipment.

- **Do not** let go of the hose while rewinding. Always walk back to the reel holding the hose.
- **Do not** place fingers or objects in the hose aperture of the reel during operation.
- **Do not** attempt to remove the screws from any part of the product. **This product contains a pre-tensioned spring.**
- **Do not** remove the ball stop from the watering hose.
- Remove the reel from the wall in winter to prevent frost damage.
- Keep the floor/ground below the reel as clear as possible from water to minimise any risk of slipping. Turn the tap off and depressurise the hose when not in use.
- To prevent damage being caused to your auto reel over winter months, it is advisable that the excess water be dispelled from the hose. This can be done by completing the following steps:
 1. Disconnect the feeder hose from the tap.
 2. Place the end of the feeder hose on the ground.
 3. Pull out all of the hose ensuring the hose end connection is “closed” and then completely retract it.
 4. Excess water will dispel from the feeder hose.
 5. Repeat step 3 several times.

By dispelling the excess water from your auto reel, it will not only become lighter to transport inside during winter, but will reduce the risk of water freezing inside the reel.

ASSEMBLY AND OPERATING INSTRUCTIONS

WARNING! The product and the packaging are not children's toys! Children must not play with plastic small parts! There is a danger of choking and suffocation!


Assemble the pressure washer auto rewind hose reel.

- Unpack all parts and lay them on a flat, stable surface.
- Remove all packing materials and shipping devices, if applicable.
- Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
- Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.


- This auto rewind hose reel comes pre-assembled and complete with 30 meters of reinforced garden hose, fittings and wall mounting bracket.
- The auto rewind hose reel has a unique 180° swivel mechanism that allows the hose to be pulled out in any direction.

Installation


- Select a suitable position to mount your auto rewind hose reel. The hose reel should be mounted at approximately waist height. Allow 50cm of clearance on both sides of the wall bracket.
- Using the bracket as a template, mark the location of the screws. Ensure that the wall bracket is vertical using a spirit level. Drill the 4 holes (10mm diameter and 55mm deep) and insert the wall plugs, before aligning bracket and fixing with the 4 screws. The plugs and screws supplied are designed for use on standard brick and concrete walls. To fix the bracket to any other surface, you should use screws and plugs appropriate for that surface.

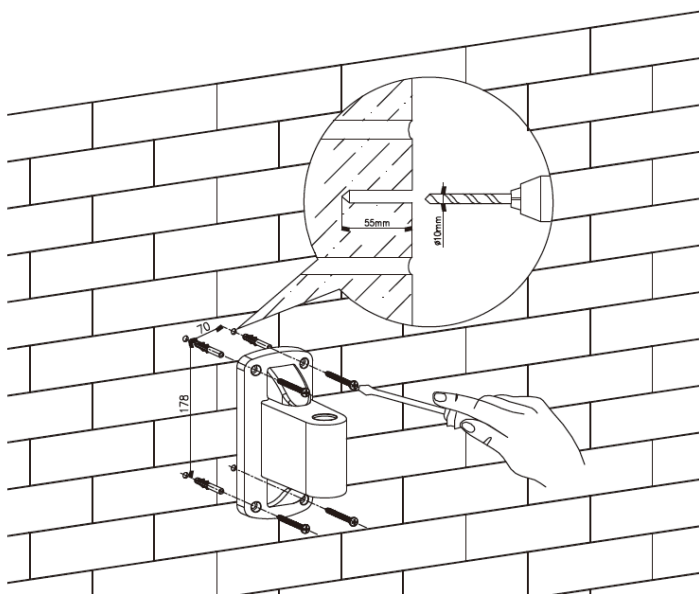

- Align the back of the reel with the wall bracket and insert the securing pin through the join.

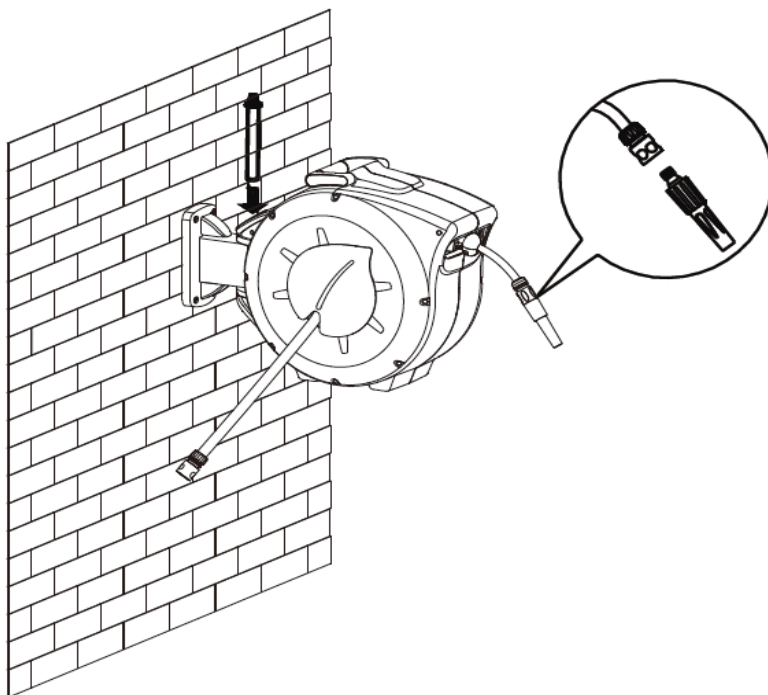


- Attach the 2m tap to reel feeder hose (pre-assembled with tap connector) to your tap using the universal tap adaptor. Test to ensure the reel rotates freely through 180° with the tap adaptor connected.

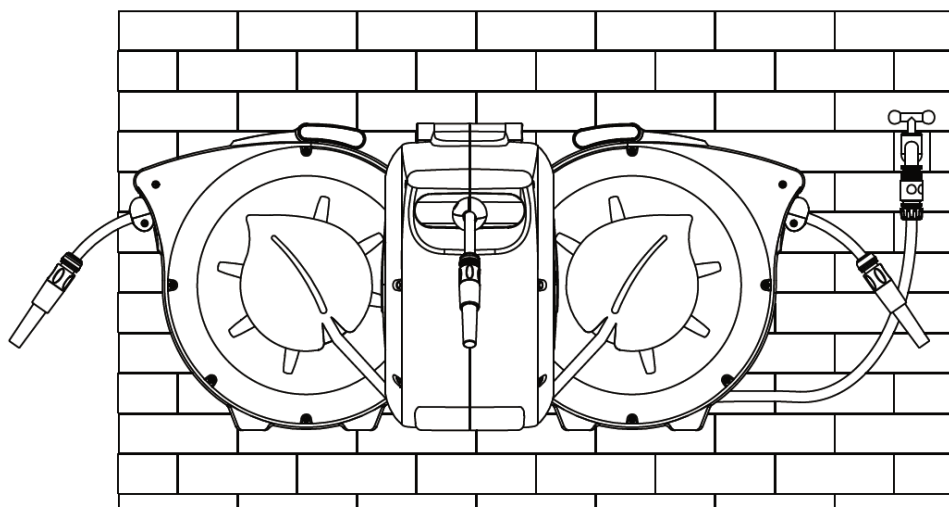

Operation

- Now that your auto rewind hose reel is securely mounted and connected to the tap, it is ready for use.
 - To pull out the hose, take hold of the hose end and walk away from the reel in any direction.
 - The reel has an automatic locking ratchet to hold the hose in place for use at any required length. The stop function of the hose reel can be activated with hose length goes back within 20cm and can be noticed by clicking sound. The hose may be placed on the ground and will not rewind. If more hose is required, pull out as necessary.
 - To rewind the hose gently pull the hose about 20cm away from the reel to release the locking mechanism. Walk back towards the reel. Always hold the hose end whilst it rewinds. If you are struggling to do so, please try actions below:
 1. Turn off the tap and let the water out of the hose by opening the hose nozzle/gun.
 2. Walk back to the reel with the end of the hose and trigger the rewind mechanism by taking hold of the hose near to the reel, and gently pull the hose about 20cm to release the locking ratchet.
- **Note: Do not simply let go of the hose. The hose end must be walked back to the reel.** See pic below.
 - Before first use, turn the water on at the top and unwind the hose. The hose will unwind by simply taking hold of the hose and walking away from the reel. This will allow water to flow freely through the hose and reel.
 - When finished, turn the water off at the top.

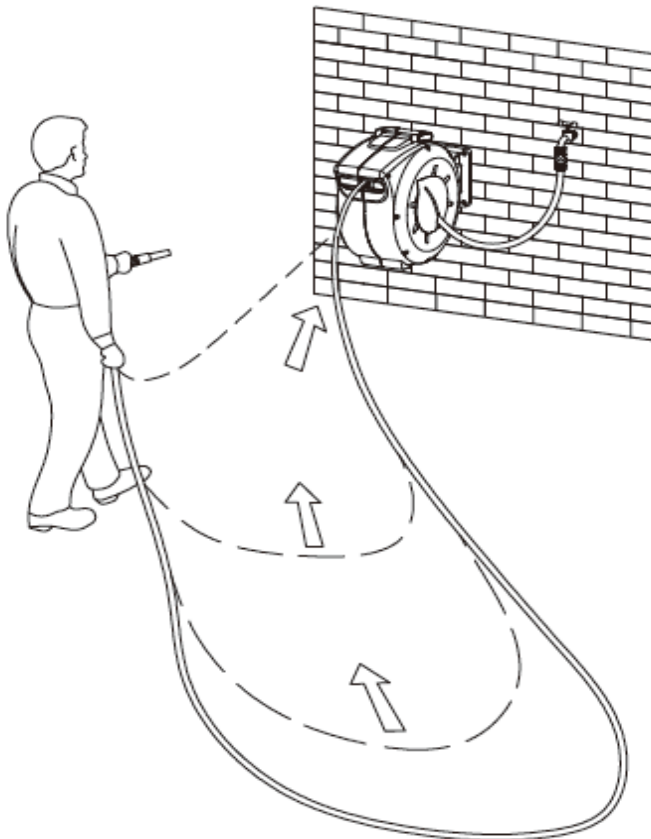

CARE AND CLEANING

- Always clean the housing using a slightly moist, fluff-free cloth.

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation – replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 2 years from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, fair wear and tear, cosmetic damage or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- Any modifications made to the appliance shall render the guarantee null and void and relieve the manufacturer of all liability.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email: info@toolstation.com

Made in China

