

Dismantling



Ensure that the system is depressurized. Hold the pipe firmly and push the pipe inward toward the joint. Place the demounting tool against the collet.



Press the demounting tool against the collet and then pull the pipe releasing it from the joint.

Do not pull the pipe prior to applying the correct inward pressure on the collet.



If the pipe is damaged (grab ring mark) while dismantling the fitting, then cut the pipe behind the grab ring mark to ensure the piece of pipe with the initial insertion is not reused.