

Easy User Guide

TS710

Single Channel Timer

BC337370550705en-000104 | 087R1005

www.danfoss.com

What is the TS710 Timer?

The TS710 is used to switch your gas boiler either directly or via a motorised valve. The TS710 has made setting your on/off times easier than ever before.

Setting time and Date

- Press and hold the OK button for 3 seconds, the screen will change to show the current year.
- Adjust using < or > to set the correct year. Press OK to accept. Repeat step b to set month, day, hour and minute settings.

Timer Schedule Setup


The Advanced Programmable Timer Function allows to set a timer-controlled program for automatic scheduled event changes.
Example below for 5/2 day setup

- Press ≡ button to access schedule setup.
- Set CH flashes, press OK to confirm.
- Mo. Tu. We. Th. Fr. will flash on the display.
- You can select weekdays (Mo. Tu. We. Th. Fr.) or weekend (Sa. Su.) with ^ or v buttons.
- Press OK button to confirm days selected (e.g. Mon-Fri) The chosen day and 1st ON time is displayed.
- Use < or > to select ON hour, press OK to confirm.
- Use < or > to select ON minute, press OK to confirm.
- Now the display changes to show the "OFF" time
- Use < or > to select OFF hour, press OK to confirm.
- Use < or > to select OFF minute, press OK to confirm.
- Repeat steps f. to j. above to set 2nd ON, 2nd OFF, 3rd ON & 3rd OFF events. Note: the number of events is changed in user settings menu P2 (see table)
- After the last event time is set, if you were setting Mo. to Fr. the display will display Sa. Su.
- Repeat steps f. to k. to set Sa. Su times.
- After accepting Sa. Su. final event your TS710 will return to normal operation.

If your TS710 is set for 7 day operation, the option will be given to select each day separately. In 24 hr mode, the option will only be given to select Mo. to Su. together. To change this setting. See user settings P1 in User Settings table.

Where the TS710 is set for 3 periods, options will be given to select period 3 times. In 1 Period mode, option will be only given for one ON/OFF time. See User Settings P2.

Display and Navigation Details

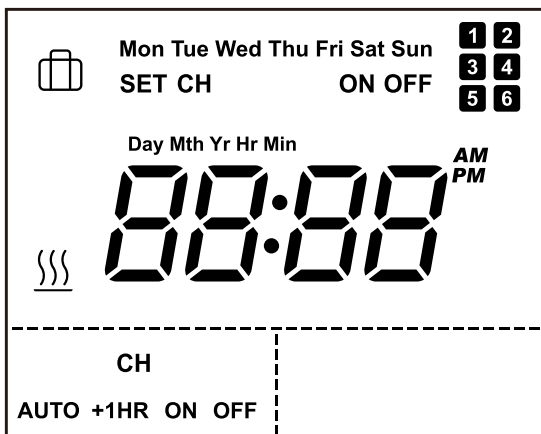

Display & Navigations

Symbols	Function description	Symbols	Function description
Mon-Sun	Current set day		Holiday mode
	Current on/off period		Schedule setup (menu access*)
SET CH	Schedule setup	OK	Confirm settings (Date and time setup*) (Reset**)
	Current set time / parameter setup	^ v	Menu navigation / day selection (AUTO+1HR function*)
Day Mth Yr Hr Min	Time and date setup	< >	Time and setting changes / channel mode selection
	Heating active	PR	Program selection (Holiday mode selection*) (Reset**)
CH AUTO +1HR ON OFF	Heating channel current mode	-	-

* To access additional feature press and hold button for 3 seconds.
To reset the timer, press and hold the PR and OK buttons for 10 seconds. The reset is complete after **ConF text appear on the display.
(*Note: This does not reset service due timer or date and time settings.)

Holiday Mode

Holiday Mode temporarily disables the timing functions when away or out for a period of time.

- Press PR button for 3 seconds to enter Holiday mode. icon will be shown on the display.
- Press PR button again to resume normal timings.

Channel Override

You can override the timing between AUTO, AUTO+1HR, ON and OFF.

- Press PR button. CH will flash and current timer function, e.g. CH – AUTO.
- With channel flashing press < or > buttons to change between AUTO, AUTO+1HR, ON and OFF
- AUTO = the system will follow programmed schedule settings.
- ON = the system will remain constant ON until the user changes the setting.
- OFF = the system will remain constant OFF until the user changes the setting.
- a. AUTO+1HR = To boost the system for 1 hour press and hold the ^ button for 3 seconds.
- b. With this selected, the system will remain ON for an extra hour. If it is selected while the programme is OFF, the system will switch ON immediately for 1 hour then resume programmed times(AUTO mode) again.

User Settings

- Press ≡ button for 3 seconds to enter the parameter setting mode. set the parameter range via < or > and press OK.
- To exit parameter setup press ≡, or after 20 seconds if no button is pressed unit will return to main screen.

No.	Parameter settings	Settings range	Default
P1	Working mode	01: Schedule timer 7 day 02: Schedule timer 5/2 day 03: Schedule timer 24hr	02
P2	Schedule periods	01: 1 period (2 events) 02: 2 periods (4 events) 03: 3 periods (6 events)	02
P4	Timer display	01: 24hr 02: 12hr	01
P5	Auto daylight saving	01: On 02: Off	01
P7	Service due setup	Installer setting only	

EU Danfoss A/S 6430 Nordborg, Denmark GB Danfoss Ltd. 22 Wycombe End, HP9 1NB, GB

Danfoss A/S Heating Segment • danfoss.com • +45 7488 2222 • E-mail: heating@danfoss.com

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.