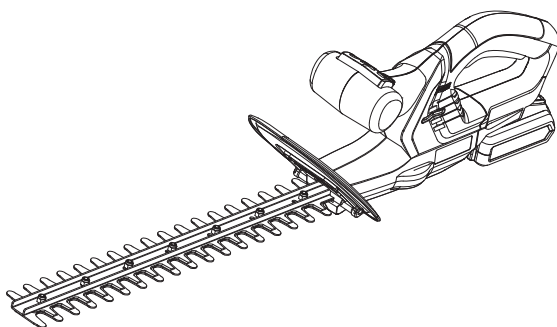
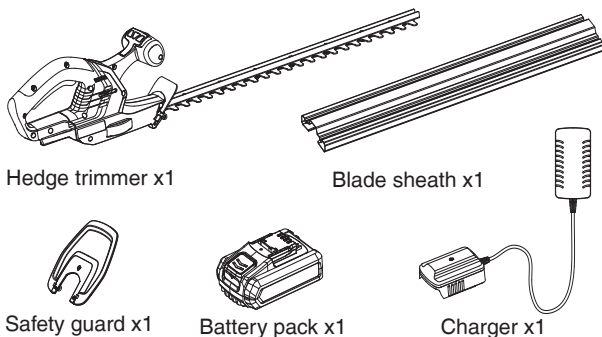


**Original User's Instructions****18V Cordless Hedge Trimmer**

SKU: 86605 / 72598

**WHAT'S IN THE BOX**

Hedge trimmer x1

Blade sheath x1

Safety guard x1

Battery pack x1

Charger x1




If you do not have all these items, please contact:  
[www.toolstation.com/contact](http://www.toolstation.com/contact)  
Telephone 0345 6460997  
Email [info@toolstation.com](mailto:info@toolstation.com)

**PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE**

# SPECIFICATION

- Dual action cutting blades provide less vibration for fast clean cuts
- Dual safety switch
- Rubber overmould rear handle
- Ergonomic grip handle design

## TECHNICAL DATA

|                              |  |                 |
|------------------------------|--|-----------------|
| Sku/Model                    | 86605/CHT18LW.1  | 72598/CHT18LW.9 |
| Voltage                      | 18 V          |                 |
| No Load Speed                | 2800 /min  |                 |
| Cutting Diameter             | 16 mm  |                 |
| Cutting Length               | 510 mm   |                 |
| Protection Class             |  /II          |                 |
| Battery Capacity (ABP1820SW) | 2.0 Ah   | /               |
| Charger Input (ACG118W3)     | 100-240V ~ 50/60Hz, 55W  | /               |
| Charger Output (ACG118W3)    | 20 V  , 2.0 A | /               |
| Charging Time                | 1 hr   | /               |
| Machine Weight               | 2.23 kg  | 1.88 kg         |

## ACCESSORIES

|              |           |           |
|--------------|-----------|-----------|
|              | CHT18LW.1 | CHT18LW.9 |
| Battery pack | 1         | /         |
| Charger      | 1         | /         |
| Blade sheath | 1         | 1         |
| Safety guard | 1         | 1         |

## NOISE INFORMATION

A weighted sound pressure  $L_{pA} = 61.3 \text{ dB(A)}$

$K_{pA} = 3.0 \text{ dB(A)}$

A weighted sound power  $L_{wA} = 80.3 \text{ dB(A)}$

$K_{wA} = 3.0 \text{ dB(A)}$

**Wear ear protection.**

## VIBRATION INFORMATION

Vibration total values (triax vector sum) determined according to EN 62841:

Vibration emission value:

Rear handle  $a_h = 0.690 \text{ m/s}^2$

Front handle  $a_h = 0.811 \text{ m/s}^2$

Uncertainty  $K = 1.5 \text{ m/s}^2$

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another.

The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



**WARNING:** The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used especially what kind of workpiece is processed dependant on the following examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained.

The use of the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration and noise accessories are used.

And the tool is being used as intended by its design and these instructions.

**This tool may cause hand-arm vibration syndrome if its use is not adequately managed.**



**WARNING:** To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Helping to minimise your vibration and noise exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

## EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read instruction manual



Warning!



Wear eye protection



Wear ear protection



Wear dust mask



Do not expose to rain



Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn



**Li-Ion battery** This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Keep hands away from blade



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.



Double insulation (Only for charger)



Indoor use only (Only for charger)



 
Read the user's manual (Only for charger)



Positive terminal (Only for charger)



Negative terminal (Only for charger)



Fuse (Only for charger)



CE marking



UKCA marking

### GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

#### 1) WORK AREA SAFETY

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

#### 2) ELECTRICAL SAFETY

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

### **3) PERSONAL SAFETY**

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.**
- d) Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.**
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

### **4) POWER TOOL USE AND CARE**

- a) Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of*

*starting the power tool accidentally.*

- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

## **5) BATTERY TOOL USE AND CARE**

- a) Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
- e) Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit*



*unpredictable behaviour resulting in fire, explosion or risk of injury.*

- f) Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

## **6) SERVICE**

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b) Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*

## **HEDGE TRIMMER SAFETY WARNINGS:**

- a) Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** *Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.*
- b) Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.** *Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.*
- c) When transporting or storing the hedge trimmer, always fit the blade cover.** *Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.*
- d) When clearing jammed material or servicing the unit, make sure all power switches are off and the battery back is removed or disconnected.** *Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.*
- e) Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring.** *Blades contacting a "live" wire may make exposed metal parts of the hedge trimmer "live" and could give the operator an electric*

*shock.*


- f) Keep all power cords and cables away from cutting area.**  
*Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.*
- g) Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*
- h) Check the hedges and bushes for foreign objects, e.g. wire fences and hidden wiring.**
- i) Hold the hedge trimmer properly, e.g. with both hands if two handles are provided.**
- j) The hedge trimmer is intended to be used by the operator at ground level and not on ladders or any other unstable support.**
- k) Before operating the hedge trimmer, the user should make sure the locking device(s) of any moving elements (e.g. the extended shaft and pivoting element), if any, are in the locked position.**

## **SAFETY WARNINGS FOR BATTERY PACK**

- a) Do not dismantle, open or shred cells or battery pack.**
- b) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** *When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.*
- c) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) Do not subject battery pack to mechanical shock.**
- e) In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) Keep battery pack clean and dry.**
- h) Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**

- j) Do not maintain battery pack on charge when not in use.
- k) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- l) Battery pack gives its best performance when it is operated at normal room temperature ( $20^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ).
- m) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.
- n) Recharge only with the charger specified by manufacturer. Do not use any charger other than that specifically provided for use with the equipment. *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- o) Do not use any battery pack which is not designed for use with the equipment.
- p) Keep battery pack out of the reach of children.
- q) Retain the original product literature for future reference.
- r) Remove the battery from the equipment when not in use.
- s) Dispose of properly.
- t) Do not mix cells of different manufacture, capacity, size or type within a device.
- u) Do not remove battery pack from its original packaging until required for use.
- v) Observe the plus (+) and minus (–) marks on the battery and ensure correct use.

## GENERAL SAFETY WARNINGS

 **WARNING! Read all safety warnings and all instructions.**  
*Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

### **Save all warnings and instructions for future reference.**


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## **Additional safety instructions for your Battery Charger**


1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger is matching the local AC supply.
5. For indoor use, or do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity “+/-“ when charging.
10. Do not open the unit and keep it out of the reach of children.
11. Do not charge the batteries of other manufactures or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.

## COMPONENT LIST

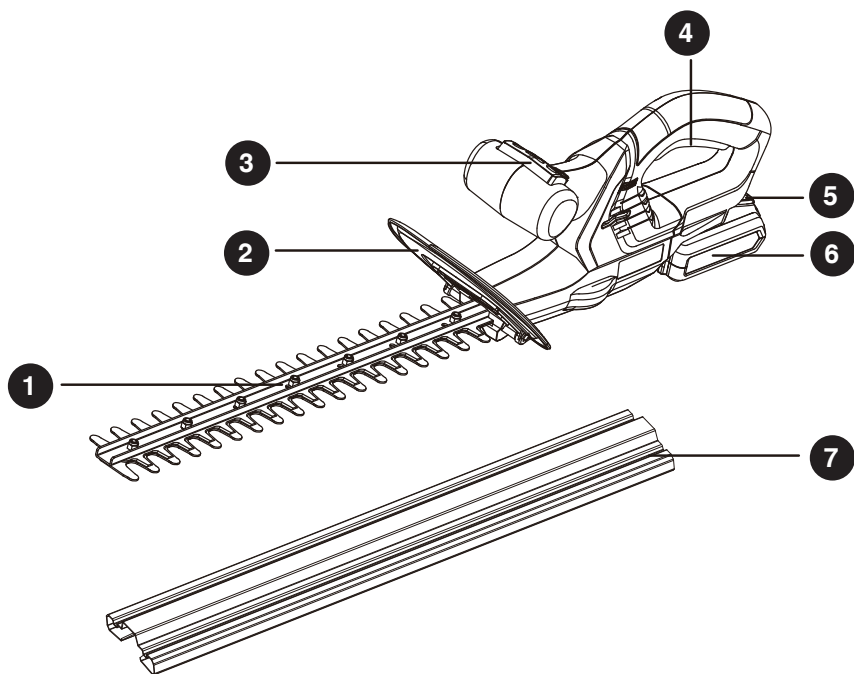

1. Blade
2. Safety guard
3. Front handle with safety switch
4. On/off switch
5. Battery pack release button
6. Battery pack
7. Blade sheath

## ASSEMBLY AND USE

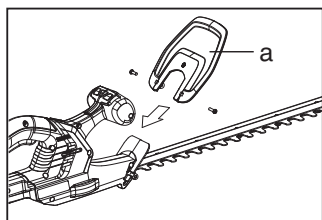

A



To reduce the risk of injury, user must read instruction manual

### Intended Use

The machine is intended for cutting and trimming hedges and bushes in domestic use.

### 1. GUARD ASSEMBLY (SEE FIG.A)

Insert the safety guard (a) into the slot as illustrated in Fig A; making sure it is securely attached.

Use two screws to fix the safety guard (a) securely.



**Warning!** Do not use the product without fitting the guard.

### BEFORE OPERATION



**Warning:** The charger (b) and battery pack (c) are specially designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.

### NOTE:


- Do not use any charger other than that specifically provided for use with the equipment.
- If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.
- The battery in your new tool is not charged when it leaves the plant. Therefore it must be full charged before using the first time
- Please charge the battery to reach full or no less than half charge before storage. If the tool will not be used for long periods of time, charge the battery every 3-6 months.

### 1. CHARGING PROCEDURE (SEE FIG. B)


- Connect the battery charger to the power supply and the indicator light should turn green.
- Slide the charger base on the battery pack make connections and the indicator light (d) will turn red to show that the charging has started.
- When charging is completed, the light will turn green. The pack is now fully charged, unplug the charger and remove the battery pack.




**WARNING!** When battery charge runs out after continuously use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full charge.

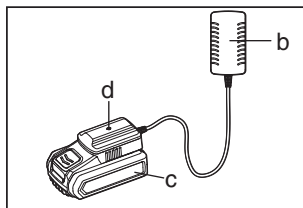


B

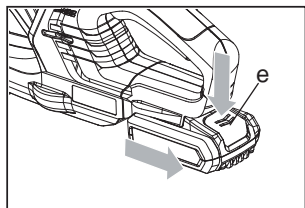


C1

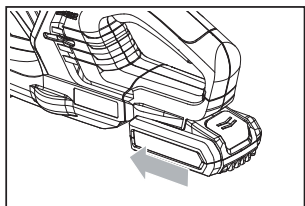

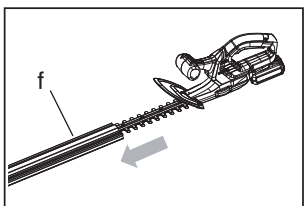

C2

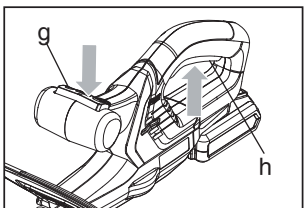

D



E

| Light  | Status        |
|--|---------------|
| Red on ●    | Charging      |
| Green on ●  | Fully Charged |

## 2. TO REMOVE OR INSTALL BATTERY PACK (SEE FIG.C1, C2)

Depress the battery pack release button (e) to release battery pack from your hedge trimmer. (See Fig. C1) After recharging, insert the battery pack into hedge trimmer's battery port. A simple push and slight pressure will be sufficient. (See Fig. C2)

**NOTE:** When removing the battery pack, hold it firmly to avoid potential accidents.

## OPERATION

### 1. STARTING AND STOPPING (SEE FIG.D)

**Note:** before starting your hedge trimmer, remove blade sheath (f).

### TO START YOUR HEDGE TRIMMER (SEE FIG.E)

Your trimmer is equipped with two switch levers. Both switch levers need to be pressed for the hedge trimmer to start.

Depress and hold safety handle switch (g) and press on/off switch (h).

### TO STOP YOUR HEDGE TRIMMER (SEE FIG.E)

Move hedge trimmer away from cutting area before stopping.

To stop, release either the safety handle switch (g) or on/off switch (h), the Trimmer will stop almost immediately.



**Warning:** If any parts are missing, damaged or broken, do not operate your hedge trimmer until all damaged parts have been replaced or repaired. Failure to do so could result in serious personal injury.

## IMPORTANT TIPS FOR TRIMMING HEDGES


- Assume secure posture and hold Trimmer with both hands. If using a step ladder make sure it is securely located and if working high tie the ladder to the thicker inner branches of the hedge.
- Ensure no people or animals are in the work area.

## PAY ATTENTION TO USE YOUR HEDGE TRIMMER

- Inspect the area to be cut before each use, remove objects which can be thrown or become entangled in the cutting blades.
- Always hold the Hedge trimmer with both hands and with the blade away from you before turning it on.
- When trimming new growth, use a wide sweeping action so that the stems are fed directly into the blade.
- Allow the cutting blades to reach full speed before entering the material to be cut.
- Always work in the direction going away from people and solid objects such as walls ,large stones, trees, vehicles etc.
- If the blade jam, immediately stop the Hedge trimmer.

Remove the battery pack and clear the jammed things from the cutting blade.


- Wear gloves when trimming thorny or prickly growth.
- Move the Hedge trimmer to feed the branched directly into the blade cutting edges.
- Do not try to cut stems that are too large to feed into the cutting blades.

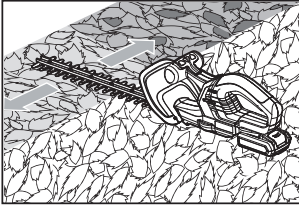

F

## 2. TOP CUTTING (SEE FIG.F)

Use a wide sweeping motion. A slight downward tilt of the cutting blades in the direction of motion gives the best cutting results.

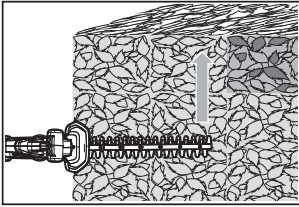


G

## 3. SIDE CUTTING(SEE FIG.G)

When trimming the sides of the hedge, begin at the bottom and cut upwards, tapering the hedge inward at the top. This shape will expose more of the hedge, resulting in a more uniform growth.



## CARE AND CLEANING

 **WARNING! Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.**

- 1) Never use water to cleaning the unit.
- 2) Always clean the hedge trimmer immediately after use. Brush the blade using a stiff nylon brush to remove any debris.
- 3) Always store the unit in a dry place.
- 4) Inspect the hedge trimmer before each use.
- 5) Have the unit professionally repaired if any damage occurs.
- 6) The blade rail should be cleaned and treated with fine oil after each use.
- 7) Use the blade guard for transportation and storage.

## TROUBLE SHOOTING

Use this section to help you to try and solve any problems you may have:

| PROBLEM                           | POSSIBLE CAUSE         | CORRECTIVE ACTION   |
|-----------------------------------|------------------------|---|
| Trimmer fails to operate.         | Out of battery.        | Check battery pack assembly.<br>Charge the battery pack.                                |
| Battery fails to charge.          | Wrong assembly         | Insert battery into the charger base.<br>Check the plug and fuse connected with supply. |
| Trimmer does not cutting properly | Blunt or damaged blade | Contact service agent.  |
| Suspected fault                   | Damaged machine        | Return the trimmer to an authorized dealer for repair.                                  |

**NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.**

# DECLARATION OF CONFORMITY / PERFORMANCE



**Product Code: 86605 / 72598 (CHT18LW.1 CHT18LW.9)**

**Product Description: 18V Cordless Hedge Trimmer**

1. Toolstation Limited, Express Park, Bristol Road, Bridgwater, Somerset TA6 4RN

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:

Supply of Machinery (Safety) Regulations 2008  
2006/42/EC

Electromagnetic Compatibility Regulations 2016  
2014/30/EU

Electrical Equipment (Safety) Regulations 2016  
2014/35/EU

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012  
2011/65/EU&(EU)2015/863

Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001  
2000/14/EC amended by 2005/88/EC

2000/14/EC amended by 2005/88/EC:

|  |          |
|--|----------|
| - Conformity Assessment Procedure as per | Annex V  |
| - Measured Sound Power Level             | 95 dB(A) |
| - Declared Guaranteed Sound Power Level  | 98 dB(A) |

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared:

BS EN 60335-1, BS EN 50636-2-91, BS EN 62233, BS EN ISO 3744, BS EN 55014-1,  
BS EN 55014-2, BS EN 60335-2-29, BS EN 62233, BS EN 61000-3-2, BS EN 61000-3-3


4. Additional information:

Signed for and on behalf of Toolstation Limited

Paul Field 01/01/2021

## ENVIRONMENTAL INFORMATION



When your heater comes to the end of its life or you choose to update or upgrade it by replacing it, please do not dispose of it with your normal household waste. Please recycle  where facilities exist. When you need to dispose of this heater, check with your retailer or local authority for suitable options. Regulations encourage the recycling of Waste from Electrical and Electronic Equipment (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)).

## **GUARANTEE**

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation – replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 2 years from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

## **CUSTOMER SUPPORT**

[www.toolstation.com/contact](http://www.toolstation.com/contact)  
Telephone 0345 6460997  
Email: [info@toolstation.com](mailto:info@toolstation.com)

Made in China