



Original User's Instructions

# 36V (2x18V) 34cm Cordless Lawnmower


SKU: 44788

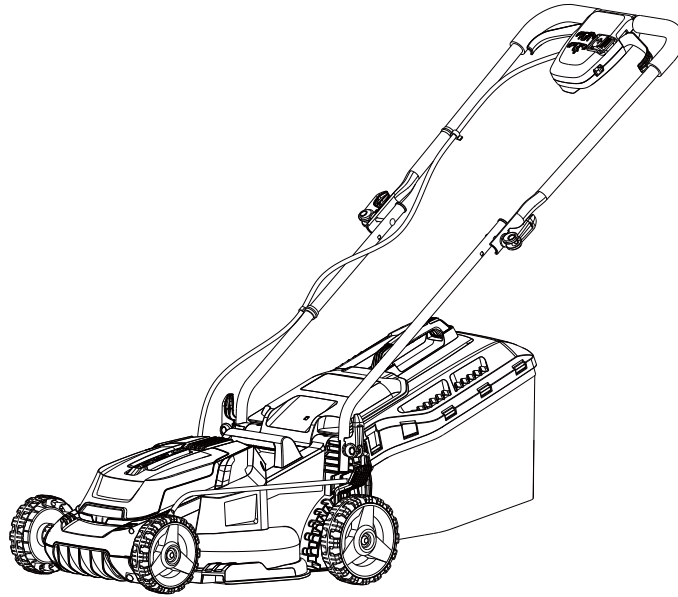

## WHAT'S IN THE BOX

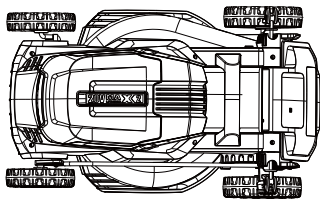


Mower x 1

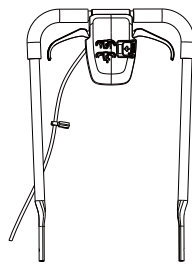

Upper handle x 1



 Lower handle locking knob with washer x 2




Charger x 1



Upper handle locking knob with washer x 2



Battery pack x 2

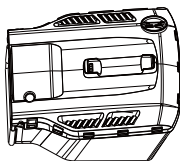

Grass collection bag x 1



Grip handle for grass collection bag x 1





Lower handle x 2

If you do not have all these items, please contact:  
[www.toolstation.com/contact](http://www.toolstation.com/contact)  
 Telephone 0345 6460997  
 Email [info@toolstation.com](mailto:info@toolstation.com)

## SPECIFICATION

- Single lever cutting height adjustment
- Removable battery for convenient storage and charging
- Carry handle for easy transport
- Foldable handles for compact storage
- Bagging and rear discharge

### TECHNICAL DATA

SKU/Model	44788/CLM36LW
Voltage	36V (2x18V) 
No Load Speed	4200 /min
Cutting Diameter	34 cm
Cutting height	25-75mm
Cutting height positions	6
Grass collection capacity	30L
Battery Capacity (ABP1820SW )	2.0 Ah
Charger Input (ACG218W2)	100-240V ~ 50/60Hz, 50W
Charger Output (ACG218W2)	18 V  , 2.0 A
Charging Time	2hr for 2*18V 2.0Ah 1hr for 1*18V 2.0Ah
Machine Weight	11 kg

Battery pack	2
Charger	1
Grass collection bag	1

### Noise Information

A weighted sound pressure  $L_{pA} = 97$  dB(A)

$K_{pA} = 3.0$  dB(A)

A weighted sound power  $L_{wA} = 92.6$  dB(A)

$K_{wA} = 1.9$  dB(A)

### Wear ear protection.

### Vibration Information

Typical weighted vibration  $a_h = 3.6$  m/s<sup>2</sup>, uncertainty  $K = 1.8$  m/s<sup>2</sup>



**WARNING:** The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used dependant on the following examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained

Using the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration accessories are used.

And the tool is being used as intended by its design and these instructions.

### This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



**WARNING:** To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Helping to minimise your vibration exposure risk.

ALWAYS use sharp chisels, drills and blades

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate)

If the tool is to be used regularly then invest in anti vibration accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

## EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



**Read instruction handbook before operation this machine**




**Keep bystanders away**



**Warning!**



**Wear eye and ear protection**

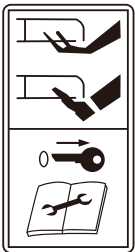

**Beware of sharp blades. Blades continue to rotate after the motor is switched off-  
Remove disabling device before maintenance.**



**Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.**




**Do not burn**



**Li-Ion battery** This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.




**Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.**

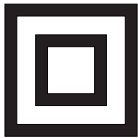

**Double insulation (Only for charger)**



 
**Indoor use only (Only for charger)**



**Positive terminal (Only for charger)**



 **Negative terminal (Only for charger)**



**Fuse (Only for charger)**



**CE marking**



**UKCA marking**

### ORIGINAL INSTRUCTIONS PRODUCT SAFETY GENERAL SAFETY WARNINGS



**WARNING!** Read all safety warnings and all instructions.

*Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

**Carefully read the instructions for the safe operation of the machine.**

**Save all warnings and instructions for future reference.**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.

**IMPORTANT  
READ CAREFULLY BEFORE USE  
KEEP FOR FUTURE REFERENCE**

### SAFE OPERATING PRACTICES

#### 1. TRAINING

- a) Read the instructions carefully. Be familiar with the controls and the proper use of the equipment.
- b) Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations can restrict the age of the operator.
- c) Never mow while people, especially children, or pets are nearby;
- d) Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

#### 2. PREPARATION

- a) While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- b) Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown by the machine;

- c) Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance. Replace damaged and unreadable labels.

### **3. OPERATION**

- a) Mow only in daylight or in good artificial light;
- b) Avoid operating the equipment in wet grass, where feasible;
- c) Always be sure of your footing on slopes;
- d) Walk, never run;
- e) For wheeled rotary machines, mow across the face of slopes, never up and down; mow across the face of slopes, never up and down.
- f) Exercise extreme caution when changing direction on slopes;
- g) Do not mow excessively steep slopes;
- h) Use extreme caution when reversing or pulling the lawnmower towards you;
- i) Stop the blade(s) if the lawnmower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be mowed;
- j) Never operate the lawnmower with defective guards , or without safety devices, for example deflectors and/or grass catchers, in place;
- k) Switch on the motor carefully according to instructions and with feet well away from the blade(s);
- l) Do not tilt the lawnmower when switching on the motor, except if the lawnmower has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator;
- m) Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times;
- n) Not to touch the blades before the disabling device has been removed and the blades have come to a complete stop;
- o) Do not start the lawnmower when standing in front of the discharge opening.
- p) Do not transport the lawnmower while the power source is running.
- q) Stop the lawnmower, and remove the disabling device. Make sure that all moving parts have come to a complete stop.
  - whenever leaving the machine unattended,
  - before clearing a blockage,
  - before checking, cleaning or working on the machine,
  - after striking a foreign object. Inspect the machine for

damage and make repairs before restarting and operating the lawnmower if the lawnmower starts to vibrate abnormally (check immediately)

- inspect for damage.
- replace or repair any damaged parts.
- check and tighten any loose parts.

#### **4. MAINTENANCE AND STORAGE**

- a) Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition;
- b) Check the grass catcher frequently for wear or deterioration;
- c) Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.
- d) Be careful during adjusting of the lawnmower to prevent entrapment of the fingers between moving blades and fixed parts of the lawnmower.
- e) Always allow the lawnmower to cool down before storing.
- f) When servicing the blades be aware that, even though the power source is switched off, the blades can still be moved.

#### **SAFETY WARNINGS FOR BATTERY PACK**


- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** *When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.*
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Seek medical advice immediately if a cell or battery pack has been swallowed.**
- g) **Keep battery pack clean and dry.**
- h) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- i) **Battery pack needs to be charged before use. Always refer to**



this instruction and use the correct charging procedure.

- j) Do not maintain battery pack on charge when not in use.
- k) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- l) Battery pack gives its best performance when it is operated at normal room temperature (20 °C ± 5 °C).
- m) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.
- n) Recharge only with the charger specified by manufacturer. Do not use any charger other than that specifically provided for use with the equipment. *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- o) Do not use any battery pack which is not designed for use with the equipment.
- p) Keep battery pack out of the reach of children.
- q) Retain the original product literature for future reference.
- r) Remove the battery from the equipment when not in use.
- s) Dispose of properly.
- t) Do not mix cells of different manufacture, capacity, size or type within a device.
- u) Do not remove battery pack from its original packaging until required for use.
- v) Observe the plus (+) and minus (–) marks on the battery and ensure correct use.

## GENERAL SAFETY WARNINGS FOR BATTERY CHARGER

 **WARNING!** Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## **Additional safety instructions for your battery charger**


1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger is matching the local AC supply.
5. For indoor use, or do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity “+/-“ when charging.
10. Do not open the unit and keep it out of the reach of children.
11. Do not charge the batteries of other manufactures or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.
13. Keep battery charger’s slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.

## COMPONENT LIST

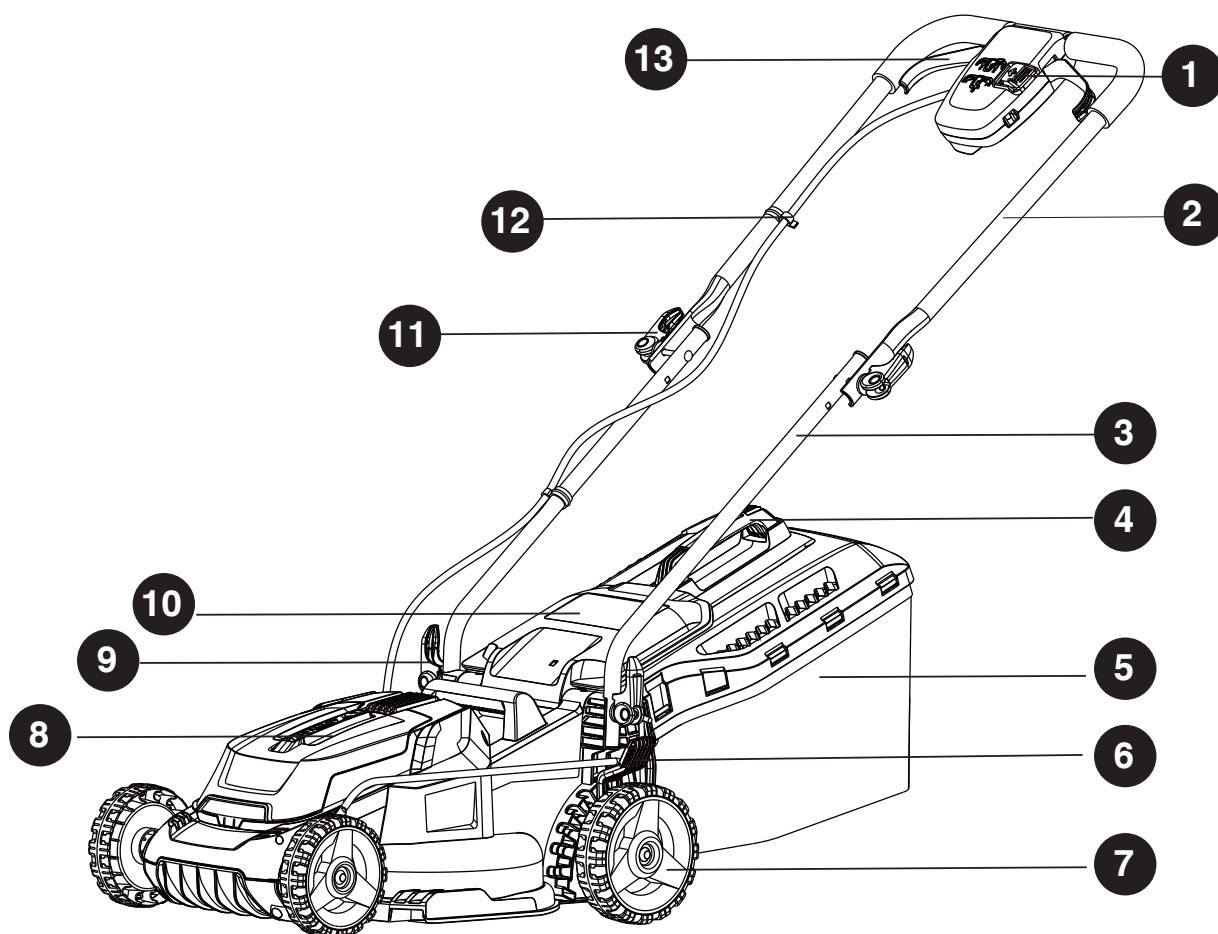


- |   |                                      |    |                              |
|---|--------------------------------------|----|------------------------------|
| 1 | Safety key                           | 10 | Safety flap                  |
| 2 | Upper handle                         | 11 | Upper handle locking knob    |
| 3 | Lower handle                         | 12 | Cable clip                   |
| 4 | Grip handle for grass collection bag | 13 | Switch lever                 |
| 5 | Grass collection bag                 | 14 | Battery pack (See Fig. E)    |
| 6 | Cutting height adjusting lever       | 15 | Battery charger (See Fig. E) |
| 7 | Wheel                                | 16 | Blade (See Fig. I1)          |
| 8 | Battery housing cover                | 17 | Blade bolt (See Fig. I2)     |
| 9 | Lower handle locking knob            |    |                              |


# ASSEMBLY AND USE

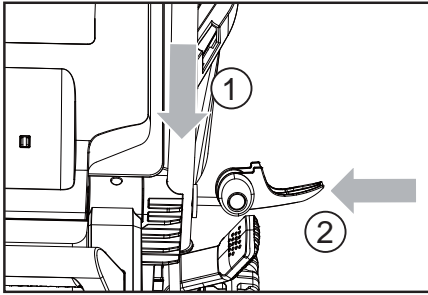


A1

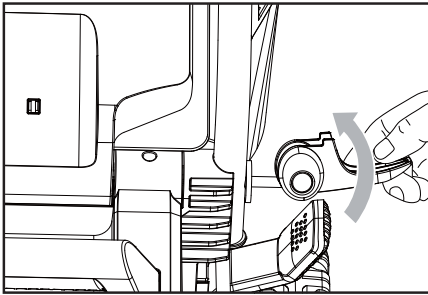


A2

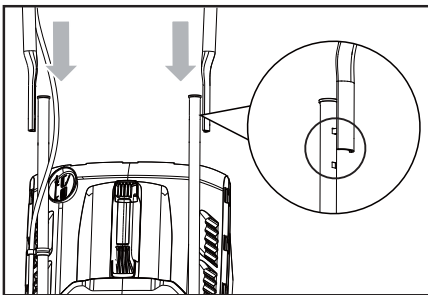

A3

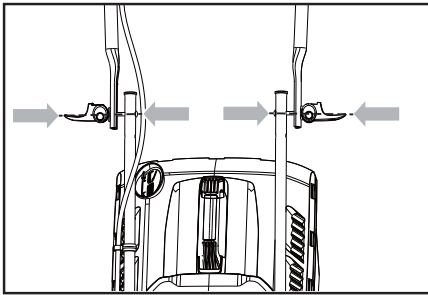

A4

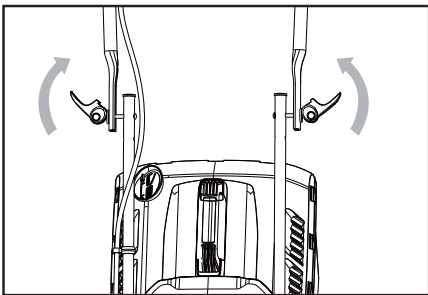

A5



**NOTE:** To reduce the risk of injury, user must read instruction manual.

## Intended Use


This product is intended for domestic lawn mowing.




**WARNING:** Before assembly and adjusting to the mower, ensure the mower is turned off and the battery pack is removed.

## 1. FITTING THE HANDLE


- 1) Remove the lower handle locking knobs with the washers on both side of the deck.
- 2) Insert the lower handle into the holes on the deck. Insert the lower handle locking knob with its washer into the hole on the lower handle. Be sure to carefully align the holes found on the lower handles and the deck. (See Fig. A1)
- 3) Tighten the lower handle locking knob by pressing the knob onto the lower handle as shown in Fig. A2.
- 4) Repeat the same steps to the other side of the lower handle. Now the lower handle is locked in place.
- 5) Attach the upper handle onto the lower handle from outside of the lower handle. There are two holes on the lower handle for different height to choose. Select a proper hole as required and align the holes on the upper handle and lower handle. (See Fig. A3)
- 6) Align the upper handle locking knob from outside of the upper handle, align and insert the locking bolt and the washer through the hole from inside of the lower handle. Then insert the locking bolt with washer into the upper handle locking knob. (See Fig. A4)
- 7) Tighten the upper handle locking knob by pressing the knob onto the lower handle as shown in Fig. A5. Repeat the same steps to the other side of the upper handle. Check that the handles are FULLY secured.

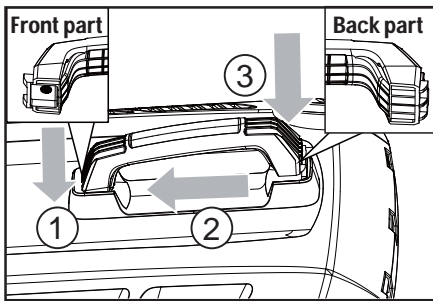


B1

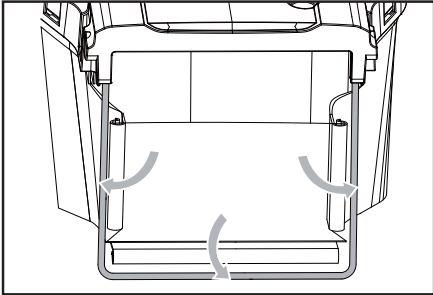


B2

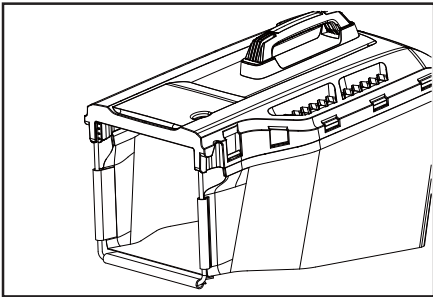


B3

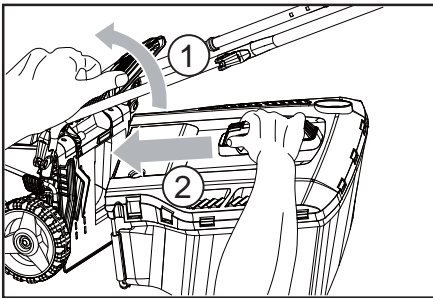

C1

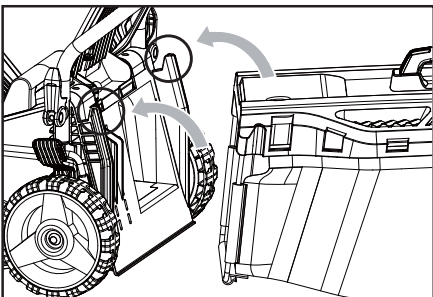

C2

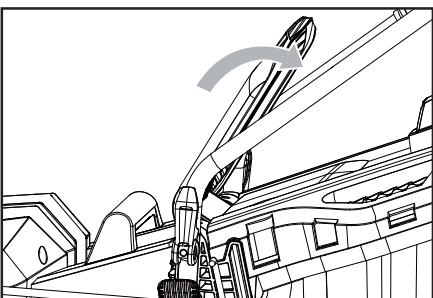

C3

## 2. GRASS COLLECTION BAG ASSEMBLY

- 1) Align the front and back parts of the grip handle for grass collection bag with the front and rear slots on the grass collection bag. (See Fig. B1)
- 2) Press the front part of the grip handle down, then push the handle forward a little. Press down the back of the handle. (See Fig. B1)
- 3) Clip the plastic clips over the metal frame at the bag opening. (See Fig. B2)
- 4) Now the grass collection bag is ready. (See Fig. B3)



**WARNING! Don't fit the handle in reversed direction. Fit the handle as shown in Fig. B1.**

## 3. FITTING THE GRASS COLLECTION BAG TO THE MOWER

- 1) Open the safety flap at the back of the mower and hold it. Pick up the grass collection bag by the grip handle, and position the grass collection bag onto the upper hooks as shown in Fig. C2. (See Fig. C1, C2)
- 2) Release the safety flap. Ensure the grass collection bag is installed securely. (See Fig. C3)

**NOTE:** Pull the grass collection bag slightly to ensure that it is completely installed.


## 4. REMOVING/EMPTYING THE GRASS COLLECTION BAG

Open the safety flap at the back of the mower and hold it. Lift the grass collection bag and remove it from the mower.

Empty the grass collection bag before it has reached its maximum capacity, otherwise it will decrease the performance of the lawn mower.



**WARNING! Always check the safety flap can close the discharge outlet tightly before using. Never lift the safety flap when the lawn mower is being used without fitted grass collection bag.**

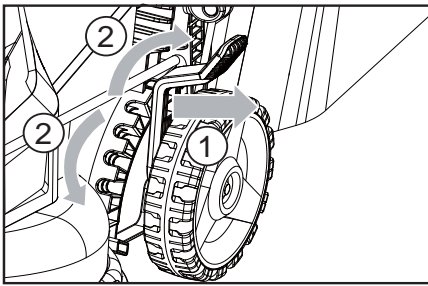

D

## 5. ADJUSTING THE CUTTING HEIGHT (SEE FIG. D)

**WARNING!** Stop, release switch lever and wait until the motor stops before adjusting cutting height. The blades continue to rotate after the machine is switched off, a rotating blade can cause injury.

**CAUTION:** Do not touch rotating blades.

For the first cutting of the season, a high cutting adjustment should be selected. The lawnmower can be set to 6 cutting heights between 25mm and 75mm.


- 1) Grip the cutting height adjustment lever and pull it outwards, then move it up a notch, towards the rear of the lawn mower to increase the cutting height.
- 2) Grip the cutting height adjustment lever and pull it outwards, then move it down a notch, towards the motor to decrease the cutting height.
- 3) Press the adjustment lever inwards again, until it engages in the desired level.

## BEFORE OPERATION

**WARNING:** The charger and battery pack are specially designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because of an electrical failure and hazard will occur.

### NOTE:

- a) Do not use any charger other than that specifically provided for use with the equipment.
- b) If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.
- c) The battery in your new tool is not charged when it leaves the plant. Therefore it must be full charged before using the first time
- d) Please charge the battery to reach full or no less than half charge before storage. If the tool will not be used for long periods of time, charge the battery every 3-6 months.

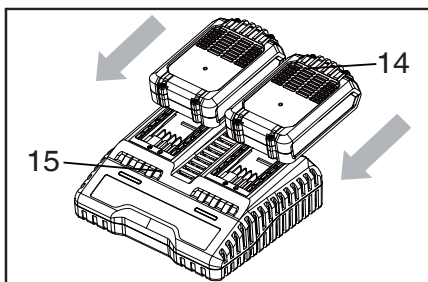


E


## 1. CHARGING PROCEDURE (SEE FIG. E)

- 1) Connect the battery charger to the power supply and the indicator light should be green.
- 2) Slide the battery pack into the charger base to make connections, and the indicator light will be red to show that the charging has started.
- 3) When charging is completed, the light will turn to green. The pack is now fully charged, unplug the charger and remove the battery pack.

**WARNING:** When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full charge.

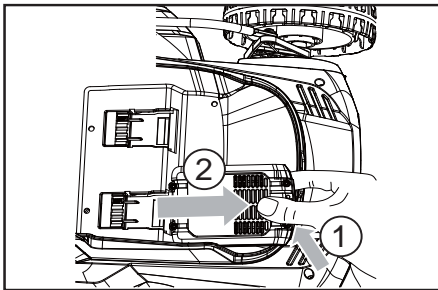

F1

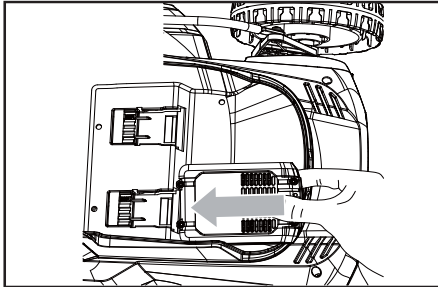

F2

Light	Status
Red on ●	Charging
Green on ●	Fully Charged

## 2. TO REMOVE OR INSTALL BATTERY PACK

- 1) Open the battery housing cover. Depress the battery release button and remove the battery pack from the mower. (See Fig. F1)
- 2) After recharging, insert the battery pack into the mower's battery port with sufficient force until it clicks into position. (See Fig. F2)

**NOTE:** When removing the battery pack, hold it firmly to avoid potential accidents.

## OPERATION

### 1. STARTING AND STOPPING


**⚠ WARNING!** The blade continues to rotate for a few seconds after the machine is switched off. Allow the motor/blade to stop rotating before switching "on" again. Do not rapidly switch off and on.

**NOTE:** Only start the appliance on level ground and not in long grass. The ground must be free of foreign bodies such as stones. Do not lift or tilt the appliance for starting.


### STARTING (SEE FIG G1, G2)

- 1) Insert the safety key into the motor switch on the handle.
- 2) Push the key inwards and hold it in position. Pull the switch lever towards the handle and the mower will start.
- 3) Release the safety key while holding the switch lever.

**NOTE:** The switch lever do not engage. Hold them tight against the handlebar during the entire working period.

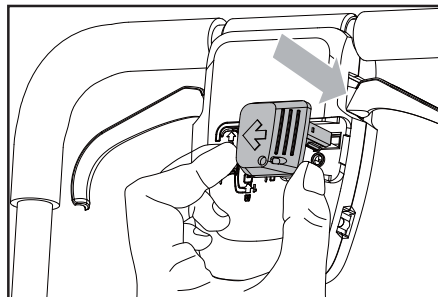

G1

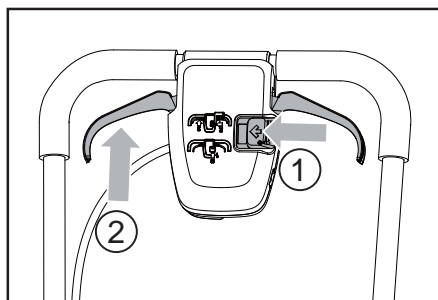

G2

### STOPPING

- 1) Release the switch lever.
- 2) Wait for the mower to come to a standstill.
- 3) Remove the safety key.


### 2. CHECKING THE FILL LEVEL (SEE FIG. H)

To remind you immediately to empty when the grass collection bag is full, the mower provides an indicator on the top of bag to show the collection status. And you can follow as below:

- Empty status: flap floats (a)



- Fully status: flap falls down (b)

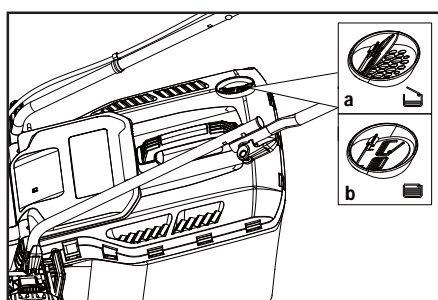

H

### 3. CUTTING AREA

The cutting area can be affected by several factors, such as cutting height, lawn humidity, grass length and density.

#### TIPS:

- 1) It is recommended to mow your lawn more frequently, walk at normal pace, and not to start/stop the mower too often during

operation.

- 2) For best performance, please ensure use a fully charged battery pack and always cut off 1/3 or less of the grass height.
- 3) Walk slowly when cutting long grass, so as to have more effective cutting and properly discharge the clippings.
- 4) Avoid cutting wet grass, otherwise it will stick to the underside of the deck and the clippings cannot be collected or discharged properly.
- 5) A higher cutting height shall be applied to new or thick grass and it will extend the battery duration.

#### **4. MOWING TIPS**

**NOTE:** Always inspect area where mower is to be used and remove all stones, sticks, wire, metal and other debris which might be thrown by the rotating blade.

- 1) Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always maintain good footing.
- 2) Release switch lever to turn mower "OFF" when crossing any graveled area (stones can be thrown by the blade).
- 3) Set mower at highest cutting height when mowing in rough ground or in tall weeds. Removing too much grass at one time can cause circuit breaker to trip, which stops mower.
- 4) If a grass bag is used during the fast growing season, the grass may tend to clog up at the discharge opening. Release switch lever to turn mower "OFF" and remove the safety key. Remove the grass bag and shake the grass down to the back end of the bag. Also clean out any grass or debris which may be packed around the discharge opening. Replace the grass collection bag.
- 5) If mower should start to vibrate abnormally, release switch lever to turn mower "OFF" and remove safety key. Check immediately for cause. Vibration is a warning of trouble. Do not operate mower until a service check has been made.
- 6) ALWAYS RELEASE SWITCH LEVER TO TURN MOWER "OFF" AND REMOVE SAFETY KEY WHEN LEAVING IT UNATTENDED EVEN FOR A SHORT PERIOD OF TIME.





**WARNING!** Before all maintenance and care work: Switch off the mower and wait until the mower has stopped. Remove the safety key, and remove the battery packs.



**WARNING:** Wear protective gloves.

**NOTE:** To ensure long and reliable service, perform the following maintenance procedures regularly. Check for obvious defects such as a loose, dislodged or a damaged blade, loose fittings, and worn or damaged components. Check that the covers and guards are all undamaged and are correctly attached to mower. Carry out any necessary maintenance or repairs before operating mower. If the mower should happen to fail despite regular maintenance, please call our customer helpline for advice.

### REGULAR MAINTENANCE WORK

- Make sure that all nuts, bolts and screws are tightened and the appliance is in a safe working condition.
- Check the grass collection bag regularly for correct operation and wear.

### CLEANING THE MOWER



**WARNING:** Water in the appliance causes short-circuits and destroys electrical components. Do not spray the appliance with water.


Only use a broom or a brush or cloth for cleaning.

### CHECKING AND RENEWING THE CUTTING BLADE




**WARNING:**

- Severe injuries can be caused due to blade parts being flung out. A worn, cracked or damaged cutting blade can break, and its parts can become dangerous projectiles.
- Regularly check the cutting blade for damage.
- Do not use the lawnmower if the cutting blade is worn or damaged.
- Have dull or damaged blades sharpened or replaced only by an authorized specialist.
- Renew your metal blade after 50 hours mowing or 2 years, whichever is the sooner-regardless of condition.
- To avoid vibrations, the cutting blade and blade bolt must always be replaced together.
- Resharpened cutting blades must be balanced. Unbalanced cutting blades cause strong vibrations and damage the mower.
- Wear proper eye protection while removing, sharpening, and installing blade. Ensure that safety key is removed.

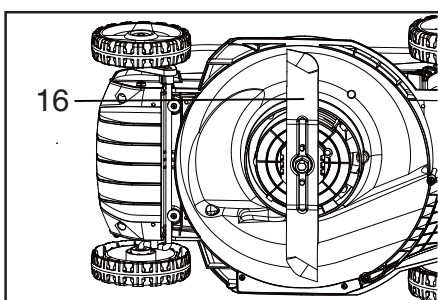


Follow these procedures to remove and replace the blade.

- 1) Switch off the mower, remove the safety key and the battery packs.
- 2) Turn the mower over to expose the blade. (See Fig. I1)

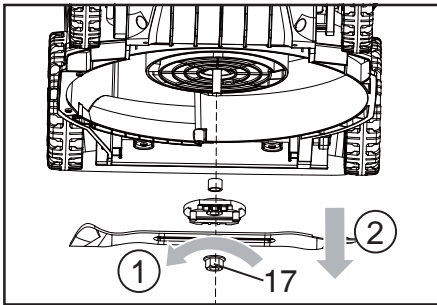

I2

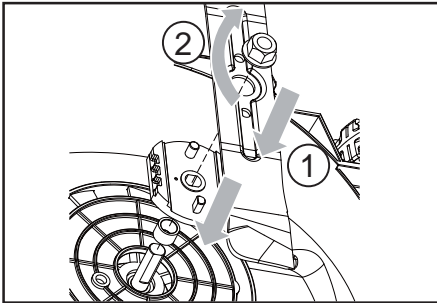

I3

- 3) Unscrew and remove the blade bolt (17) using a spanner (not supplied) by turning it in an anti-clockwise direction.
- 4) Remove the blade. (See Fig. I2)
- 5) To re-assemble, position the blade with the cutting edges towards the ground. Then securely tighten the blade bolt (17) using a spanner (not supplied) by turning it in a clockwise direction. (See Fig. I3)

### BLADE SHARPENING

**⚠ WARNING: Replace bent or damaged blade immediately.**

**NOTE:** Keep blade sharp for best mower performance.

Sharpening the blade twice during a mowing season is usually sufficient under normal circumstances. Sand causes the blade to dull quickly. If your lawn has sandy soil, more frequent sharpening may be required.


When sharpening the blade:

- 1) Make sure blade remains balanced.
- 2) Sharpen blade at the original cutting angle.
- 3) Sharpen cutting edges on both ends of blade, removing equal amounts of material from both ends.


### STORAGE

**⚠ WARNING: If the appliance is accessible to children and unauthorized persons during storage, this can result in injury. Store the appliance out of the reach of children and unauthorised persons.**

**⚠ WARNING: Store the battery packs in cool and dry conditions, but not exposed to naked flames or heat sources.**

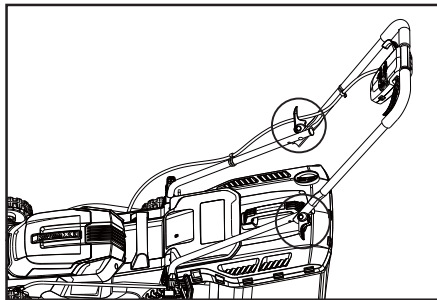

J1

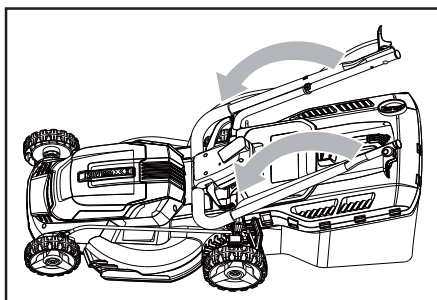

J2


1. Switch off the appliance: remove the safety key.
2. Pull out the rechargeable batteries.
3. Allow the engine to cool down.
4. Thoroughly clean the appliance.
5. Rub a thin coat of oil or silicon onto all metal parts for corrosion protection.
6. Loosen the upper handle locking knob and fold the handlebar as shown in Fig. J1, J2.
7. Store the appliance in a dry, clean location protected from frost. Cover with a breathable tarpaulin to protect against dust. Do not use plastic film in order to avoid the accumulation of moisture.

## TROUBLE SHOOTING

Problem	Possible Cause	Corrective Action
The machine does not work, or stop suddenly	Possible clogging	Check underneath the machine and clear out as necessary (always wear gardening gloves).
	Battery not fully charged	Charge the battery.
	Battery not inserted (properly)	Inserting the Battery properly.
	Grass too long	Increase the cutting height and tilt machine to reduce starting load.
	Safety key damage	Contact Service Agent.
	Motor protector has activated	Allow motor to cool /increase height of cut.
	Battery too hot/cold	Allow to cool/warm.
	Safety key not inserted correctly/fully	Fit correctly.
Machine functions intermittently	Internal wiring of machine damaged	Contact Service Agent
	Motor protector has activated	Allow motor to cool /increase height of cut
Machine leaves ragged finish and/ Motor labor	Cutting height too low	Increase the Cutting height.
	Cutting blade dull	Contact Service Agent to replace the blade.
	Possible clogging	Check underneath the machine and clear out as necessary (always wear gardening gloves)
	Blade fitted upside down	Refit blade correctly.
Area of cut (battery duration) not large enough	Cutting height too low	Increase the cutting height and walk slower.
	Grass too high	Increase the cutting height and walk slower.
	Grass wet or damp	Wait until the grass is dry and walk slower.
	Grass is dense	Increase the cutting height , walk slower and cut more frequently.
Cutting blade not rotating while machine switched on	Cutting blade obstructed	Switch off machine and clear obstruction (always wear gardening gloves).
	Blade nut/bolt loose	Tighten the blade nut/bolts.
Excessive vibrations/ noise	Blade nut/bolt loose	Tighten the blade nut/bolts.
	Cutting blade damaged	Contact Service Agent to replacing the blade.
No charging procedure possible	Battery contacts contaminated	Clean the battery contacts (e.g. by inserting and removing the battery several times) or replace the battery (Batteries can be purchased to service agents)
	The battery is defective, due to a disconnection in the battery	Replace the battery (Batteries can be purchased to service agents)
The charge control LED respectively, do not light up after inserting the mains plug into the socket	Mains plug of battery charger not plugged in (properly)	Insert mains plug (fully) into the socket outlet
	Socket outlet, mains cable or battery charger defective	Check power supply voltage and the battery charger, if necessary, contact customer service for an authorized inspection.

**NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.**

# DECLARATION OF CONFORMITY / PERFORMANCE

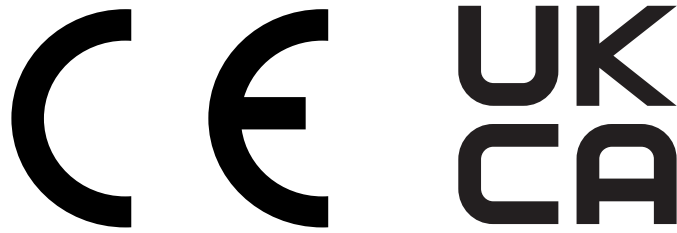

**Product Code: 44788 (CLM36LW)**

**Product Description: 36V (2x18V) 34cm Cordless Lawnmower**

1. Toolstation Limited, Express Park, Bristol Road, Bridgwater, Somerset TA6 4RN

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:

Supply of Machinery (Safety) Regulations 2008  
2006/42/EC

Electromagnetic Compatibility Regulations 2016  
2014/30/EU

Electrical Equipment (Safety) Regulations 2016  
2014/35/EU

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment  
Regulations 2012  
2011/65/EU&(EU)2015/863

Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001  
2000/14/EC amended by 2005/88/EC

2000/14/EC amended by 2005/88/EC:

- Conformity Assessment Procedure as per	Annex VI
- Measured Sound Power Level	92.6 dB(A)
- Declared Guaranteed Sound Power Level	95 dB(A)

The notified body involved

Name: Intertek Testing & Certification Ltd notified body 0359  
Address: Davy Avenue, Knowlhill, Milton Keynes, MK5 8NL

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared:

BS EN 60335-1, BS EN 60335-2-77, BS EN 62233, BS EN ISO 3744, BS EN 55014-1  
BS EN 55014-2, BS EN 60335-2-29, BS EN 61000-3-2, BS EN 61000-3-3


4. Additional information:

Signed for and on behalf of Toolstation Limited

Paul Field 01/01/2021

## ENVIRONMENTAL INFORMATION



When your heater comes to the end of its life or you choose to update or upgrade it by replacing it, please do not dispose of it with your normal household waste. Please  recycle where facilities exist. When you need to dispose of this heater, check with your retailer or local authority for suitable options. Regulations encourage the recycling of Waste from Electrical and Electronic Equipment (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)).

## GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation – replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 2 years from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

## CUSTOMER SUPPORT

[www.toolstation.com/contact](http://www.toolstation.com/contact)

Call us 0345 6460997

Email: [info@toolstation.com](mailto:info@toolstation.com)

Made in China



