


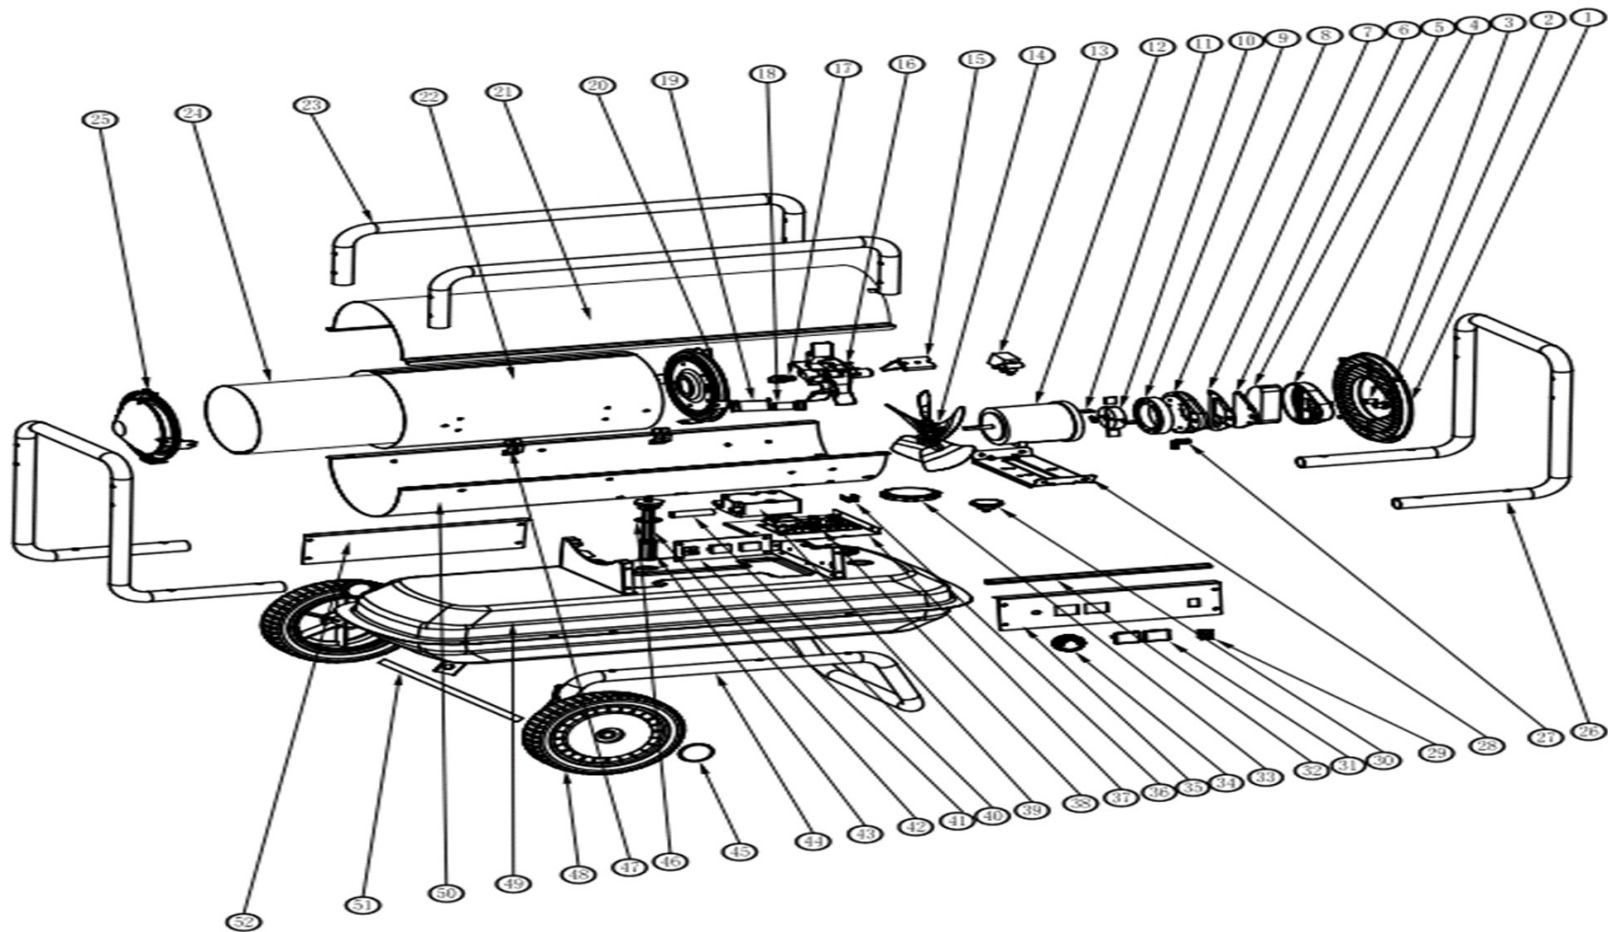

09595—SIP Fireball Diesel/Paraffin Space Heater
Exploded Drawing & Parts List

TD007

Issue v2

Date: 28/04/22

Ref. No	Description	SIP Part No.	Ref. No	Description	SIP Part No.
1.	Rear Grill	PW24-00396	16.	Stabilization Fame Plate	PW24-00402
2.	Barometer	PW24-00346	17.	Injection Nozzle	PW24-00361
3.	Pressure Regulating Hole screw	PW24-00397	18.	Electric Eye Component	PW24-00362
4.	Air Pump Gland	PW24-00398	19.	Photo Cell Holder	PW24-00403
5.	Intake Filter Cotton	PW24-00349	20.	Burner Head Mounting Plate	PW24-00404
6.	Wool Felt	PW24-00350	21.	Upper Cover	PW24-00405
7.	Air Pump Gland Gasket	PW24-00351	22.	Insulated Barrel	PW24-00406
8.	Air Pump Cover	PW24-00399	23.	Left Pipe Rack	PW24-00407
9.	Pump Body	PW24-00400	24.	Combustion Barrel	PW24-00408
10.	Pump Core	PW24-00401	25.	Heat Deflector	PW24-00369
11.	Pump Blade	PW24-00355	26.	Front Pipe Rack	PW24-00409
12.	Motor	PW24-00356	28.	Motor Bracket	PW24-00410
13.	Solenoid Valve	PW24-00357	29.	Switch	PW24-00373
14.	Fan	PW24-00358	30.	Fuel Meter	PW24-00374
15.	Bipolar Ignition Needle	PW24-00359	31.	Display Cover	PW24-00411

09595—SIP Fireball Diesel/Paraffin Space Heater
Exploded Drawing & Parts List

TD007

Issue v2

Date: 28/04/22

Ref. No	Description	SIP Part No.	Ref. No	Description	SIP Part No.
32.	Sealing Strip	PW24-00412	43.	Oil Inlet Pipe Filter	PW24-00387
33.	Fuel Tank Cover	PW24-00413	44.	Lower Pipe Rack	PW24-00417
34.	Rotary Knob	PW24-00378	45.	Caster Cover	PW24-00462
35.	Control Panel	PW24-00379	46.	Oil Inlet Pipe Gasket	PW24-00389
36.	Earth Tag	PW24-00380	47.	Insulation shell Support	PW24-00418
37.	Holder	PW24-00414	48.	Caster	PW24-00391
27.	External temperature control plug	PW24-00492	49.	Fuel Tank Assembly	PW24-00419
38.	Power Board	PW24-00492	50.	Lower Cover	PW24-00420
39.	Ignition Transformer	PW24-00382	51.	Caster Wheel Shaft	PW24-00421
40.	High Voltage Wire Sheath	PW24-00415	52.	Side Panel	PW24-00422
41.	Display board	PW24-00385	53.	Filter Service kit 42,43 & 46	PW24-00495
42.	Inlet Pipe	PW24-00416			