



Eton Towel Radiator Installation Guide

- Please check that all parts listed are present before starting installation.
- Valves are not provided, please make sure that you have them before you start.
- Before drilling holes for the brackets please check that there are no hidden wires or pipes.
- The plugs supplied are for hard walls masonry only. Please make sure you are using the correct plug for your wall.
- Korle radiators are designed for closed heating systems.
- The radiator should be fitted at least 100mm from the floor to maximise heat efficiency.
- Noting the distances between bracket centres on the drawings, mark out the position of the brackets on the wall.
- Drill holes to approximately 35-40mm depth using an 8mm drill bit and insert raw plugs (1). Using connecting screw (3) attach mounting bracket 1 (2).
- Attach mounting bracket 2 (4) to radiator.
- Guide all mounting brackets (4) into mounting bracket (2) and fix with connecting screws (5) and Bolt Nuts (6).
- Connect the water flow. To ensure good circulation of water inside the radiator, ensure that the water flow pipe is connected to the correct side of the radiator using appropriate 1/2inch BSP valves sealed with PTFE tape on the threads.
- After fitting you must be sure that your system is thoroughly flushed through to remove any residual particles. Although your aluminum radiator will not rust, you should be sure that a suitable inhibitor is used to protect your system is refilled.
- Fill the radiator and purge any trapped air using flat screwdriver to open the bleed valve at the top of the radiator.
- Wipe your radiator down using a clean damp cloth. Never use scourers or abrasives.