


Description and features

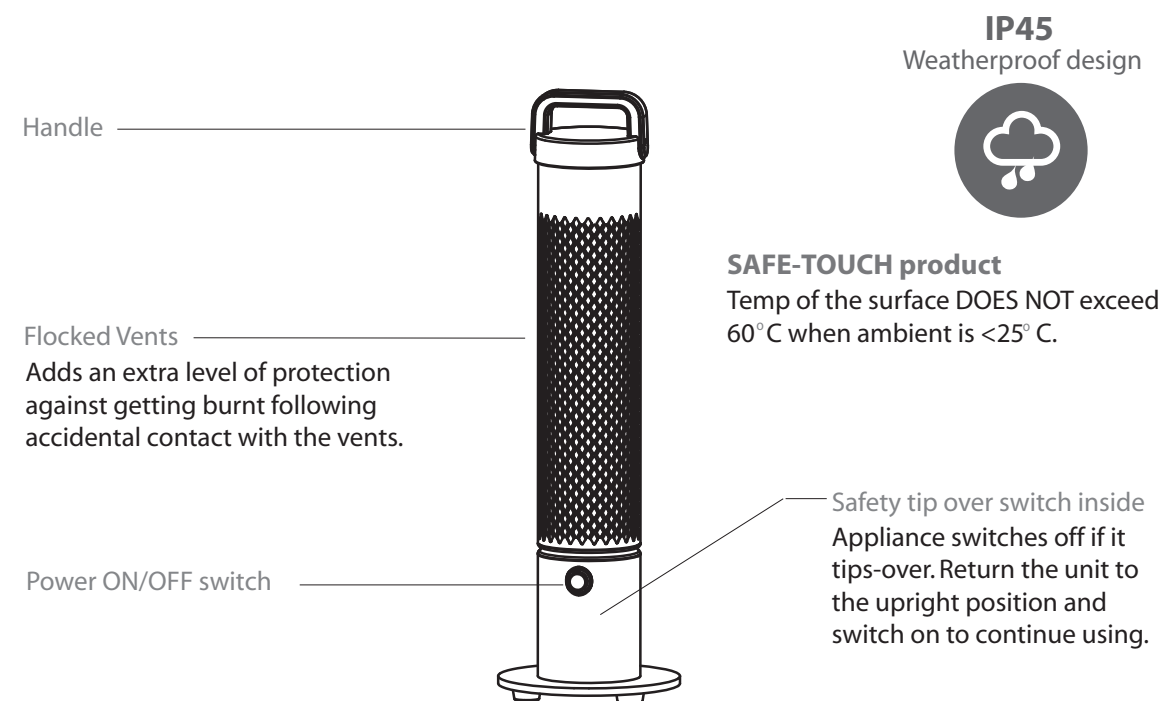

Trouble shooting

Problem	Possible cause	Solution
Heater won't operate	Power Switch OFF	Turn Power Switch ON.
	No Power to unit	Check the mains or the electrical socket to restore circuit.
	Safety Tip Over Switch Malfunction	Safety Tip Over stuck in OFF position. Give the unit a rigorous shake which may reset the switch. If this does not rectify the problem, please call the technical helpdesk
	Heater not on a level surface	Ensure Heater is situated on a level and solid surface.
	Power Cord Damaged	Inspect power cable for cuts, breaks and kinks. Replacement power cords and fitting instructions can be obtained from the technical helpdesk

This product has been manufactured to comply with EEC Directives 2006/95/EG and 89/336/EEC.
Not household waste. Must be disposed of in accordance with local regulations.




UK MANUFACTURER / IMPORTER
CASCADE HOLDINGS LTD.
GORSE MILL
GORSE STREET
OLDHAM.
UNITED KINGDOM
OL9 9RJ



EU AUTHORISED REPRESENTATIVE:
AUTHORISED REP COMPLIANCE
GROUND FLOOR
71 LOWER BAGGOT STREET
DUBLIN
IRELAND
D02 P593



Harry 1200W
Flocked Outdoor Heater
ZR 37441 BLK

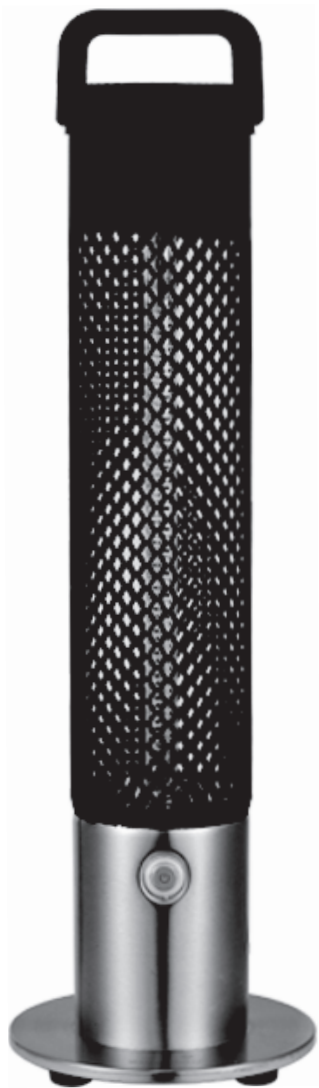

Helpline
If you receive this item with parts broken or missing, please telephone:
0333 0050077

Please have ready your name, address, tel. no., product reference, where purchased and parts required. An answering service is in operation outside office hours and during busy periods.
We regret that we are unable to give advice on internal house wiring.

Safety instructions

WARNING - When using electrical appliances, basic safety precautions should always be followed. Failure to comply with these instructions may cause a fire, electrical shocks or other injury to persons or property.

- 1 Children of less than 3 years should be kept away unless continuously supervised.
- 2 Not suitable for use by Children
- 3 **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 4 **DO NOT** position the heater on soft surfaces or where openings may become blocked. Ensure the base is fitted and fully assembled, and the unit is upright on a flat stable surface before operating. This heater is designed for use on Patios and in Beer gardens & smoking areas. The unit has been IP45 Weatherproof approved; however, to prolong the life of the heater it is strongly recommended that the heater is stored in a dry place during heavy rain or when not in use.
- 5 **DO NOT** hide the power cord in long grass or leave close to an operating lawnmower. Arrange the cord away from areas where it may be tripped over.
- 6 **DO NOT** insert or allow objects to touch the heating element and never place anything on the heater safety guard (e.g. towels), as this may damage the heater and could cause an electrical shock or fire. Never use your heater to dry washing. If the heating element has stopped glowing it may still be live, please check that the heat setting indicates the heater is off.
- 7 Always disconnect your appliance from the mains before any cleaning.
- 8 **DO NOT** use the heater in areas where petrol, paint, or other flammable substances are stored.
- 9 Always unplug the heater when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
- 10 **DO NOT** direct the heater towards curtains, furniture or other flammable objects and ensure that they are at least 0.5 metres from the Heater.
- 11 Extreme care should be taken when the heater is used near children and pets.
- 12 In order to avoid overheating, do not cover the heater.
- 13 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 14 Never locate the heater where it may fall into a swimming pool or other water container. Never use in a bathroom or shower room. Heater should not be positioned directly under a socket outlet.

- 15 Do not use this heater in conjunction with a timer device or any other device, which facilitates unattended switch on.
- 16 The electrical cord must be fully unwound before use.
- 17 The front grille is intended to prevent direct access to the heating elements and must be in place when the heater is on.

General information

This product has been designed for domestic and commercial use, to heat outdoor spaces using energy efficient carbon fibre infrared technology. It must only be used for this intended purpose and should be operated according to the instructions included in this manual. Please carefully read all operating and safety instructions before use. Never cover appliance when in operation and ensure that flammable objects (clothes, curtains, etc.) cannot come in close contact with the appliance.

Cleaning and maintenance

- 1 Before cleaning, turn the heater off, unplug from the power supply and wait for the unit to cool down.
- 2 Use a soft cloth to wipe off any dust. If the heater is very dirty, use a damp cloth and wipe dry. Do not use any cleaning detergents, sprays or other chemicals, as they will damage the unit.
- 3 When the heater is not in use for a long period, clean and place in a cover or store in a dry place.

Technical data

Model No.: 37441
Power output : 1200W 220v-240v AC ~ 50/60Hz
Heater watts : 1200W
Cable length : 1.8m
Gross weight : 3.9 kgs Net weight : 3.4 kgs
Product Dimension: 19.5cm Base diameter & 65cm high

The product is IP45 weatherproof certified. It is designed to withstand rain conditions. We recommend that you should cover and store in a dry place when not in use for long periods of time.

