

 
ebb+flo

User Instructions


Fast Fit Kit

57883 (V1)

97233 (V1)

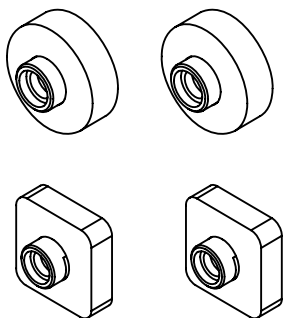

WHAT'S IN THE BOX

 

Wall Plate x2



Adaptor x2



Copper olives x2



Wall Bracket x2



Wall plug x4



 
 
 
 
 
Wall screw x4

If you need any help, please contact us:

0808 100 7211 or 0330 333 3303

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

TOOLS REQUIRED (tools not supplied)

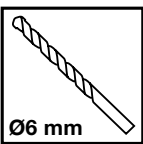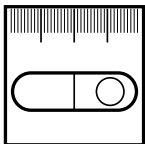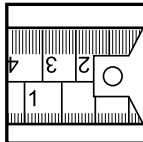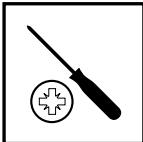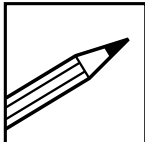






- Identify all components and check pack contents.
- Turn off mains water supply.
- Prior to drilling into walls, check that there are no hidden electrical wires, cables or water supply pipes. This can be checked with the aid of an electronic detector.
- Wear eye protection.
- This fast fix kit should be installed in compliance with the UK Water Supply (Water Fittings) Regulations.

ASSEMBLY AND USE

- 1** (1) Turn off the water supply following system flushing.
- (2) Construct suitable 15mm inlet supplies at level 150mm centres. Ensure the pipework protrudes a minimum of 100mm, measured from the intended finished wall surface.
- (3) Once the wall surface has been finished, flush through the pipe work prior to trimming the length of the pipes to 26mm, measured from the finished wall surface. We recommend using a rotary type cutter but if a hacksaw is used, ensure the cut is straight and the pipe ends must be carefully deburred and chamfered.

Note: If plastic pipe is used, tube inserts must be fitted and must not increase the diameter or extend the cut off length by more than 2mm.

     It may be easier to fit the pipe inserts **AFTER** fitting the copper olives.

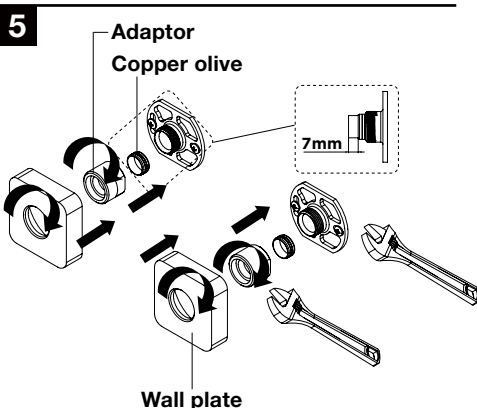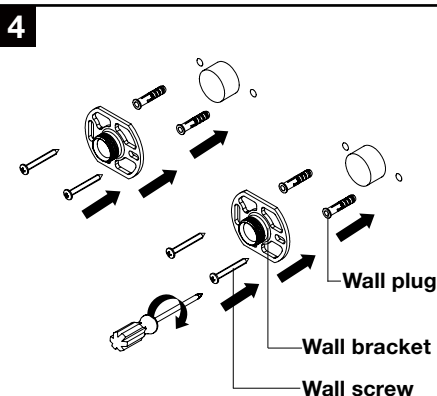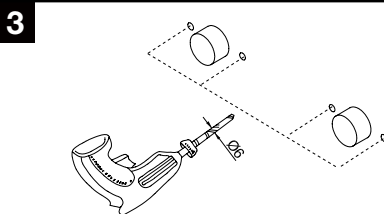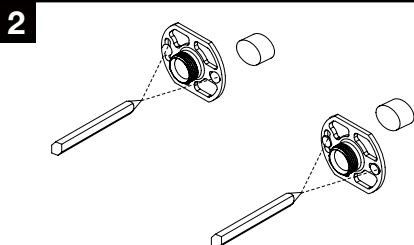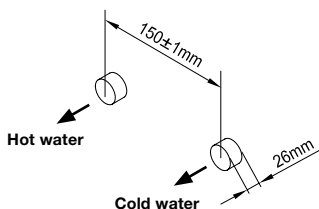

CARE AND CLEANING

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your product is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email info@toolstation.com

Made in china