

 


Original User Instructions

Wessex 2kW Space Heater (Domestic Use Only)

SKU: 92761

TOOLSTATION

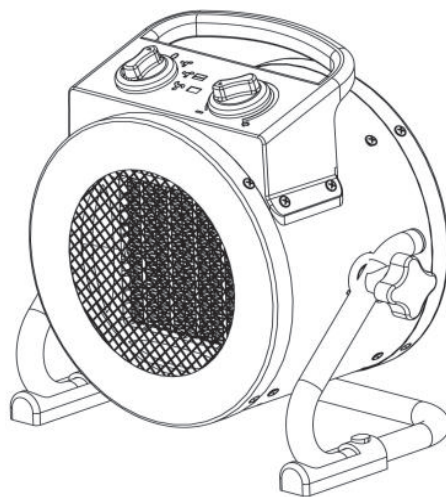

This product is only suitable for well insulated spaces or occasional use.




READ BEFORE USE
PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

CONTENTS

● WHAT'S IN THE BOX-----	3
● TOOLS REQUIRED-----	3
● SPECIFICATIONS-----	3
● EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	4
● IMPORTANT SAFETY WARNINGS-----	5
● PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	8
● ASSEMBLY AND OPERATING INSTRUCTIONS-----	9
● CARE AND CLEANING-----	10
● TROUBLESHOOTING-----	10
● DECLARATION OF CONFORMITY / PERFORMANCE-----	11
● ENVIRONMENTAL INFORMATION-----	12
● ENERGY USE INFORMATION-----	12
● GUARANTEE-----	13
● CUSTOMER SUPPORT-----	13

 WHAT'S IN THE BOX

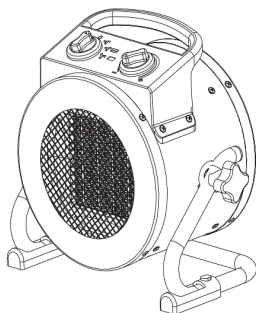

Space heater x 1



User instruction manual x 1

If you DO NOT have all these items, please contact:

www.toolstation.com/contact

Telephone 0808 100 7211 Mobile friendly 0330 333 3303

Email info@toolstation.com

TOOLS REQUIRED

- N/A

SPECIFICATIONS

- 220-240V~50Hz
- Ventilation mode
- 2 heat settings
- 1000W / 2000W
- Adjustable thermostat
- Overheat protection
- With integrated carry handle

TECHNICAL DATA

SKU / Model	92761/ PF01-G
Rated voltage	220-240V~, 50Hz
Power Wattage	2000W
Plug	BS 1363 plug, 10A fuse
Power cord length(mm)	1500
Power cord Spec.	3G1.0 mm², H05VV-F
Dimension (H x L x W-mm) approx.	260x288x152
Appliance class	Class I
Recommend heating area(m²)	≤25
Net weight approx.(g)	1900-2000

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



This symbol located on the device indicates that it is prohibited to place objects (such as towels, clothes etc.) above or directly in front of the device. To avoid overheating and fire hazards, the device must not be covered.



This symbol located on the device indicates that its surfaces are hot during and immediately after operation. Hot surfaces should not be touched: danger of burns.



This warning symbol indicates a hazard with an average risk level which, if not avoided, could result in serious injury or damage or death.



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was done.



UK Conformity Assessed



Class I protection appliance, Earthing connection



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

IMPORTANT SAFETY WARNINGS

Read this manual carefully before using or installing the heater.
Always store the manual in the immediate vicinity of the heater or its site of use.
Read all safety warnings and all instructions.



Warning: To avoid the risk of electrical shock, fire or injury to people, always make sure the appliance is unplugged from the electrical outlet before relocating, servicing, or cleaning it.



Some parts of this product can become very hot and cause burns. Do not touch the surface when in operation. Do not install close to curtains or other combustible materials. Particular attention should be given where children and vulnerable adults are present.

 


- The heater carries the warning symbol indicating that it must not be covered. Never cover the heater. Covering the heater risks overheating and fire.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use if there are visible signs of damage to the heater.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** use the device with wet or damp hands.
- **DO NOT** cover or obstruct the air inlet and outlet openings in any way.
- **DO NOT** insert any object through the heat outlet or air intake grilles of the heater. Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater. **DO NOT** use heater to dry your laundry.
- **DO NOT** place the heater on a carpet for use, especially on a fluffy, long-pile carpet.
- **DO NOT** operate the heater with the mains lead overhanging the front outlet grille. Keep the mains lead away from the hot body of the heater.
- **WARNING:** The plug, with its mains lead cut off and conductors exposed, will be dangerous if inserted into a socket.
- **IMPORTANT:** If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This product must be connected to Earth.

- Keep the power cable away from all hot parts of the appliance.
- **DO NOT** use the heater with the power cable wound up. This can cause a dangerous build-up of heat. Do not wind the cable around the appliance as this may cause weakening and splitting of the insulation. The power cable should be fully unwound and removed from any storage areas before use.
- **DO NOT** share the heater's socket with other appliances: risk of fire due to excessive load.
- **DO NOT** position the heater in front of, or immediately below a socket-outlet.
- The plug is fitted with a 10 Amp fuse. When replacing, use only a fuse approved to BS1362 and carrying the relevant approval mark. Never use the plug with the fuse omitted.
- Suitable for indoor use only.
- This product is only suitable for use in living areas (not for areas constantly subject to moisture).
- **IMPORTANT:** Always switch off at the socket and remove the plug when not in use.
- Always unplug the heater when moving it from one location to another.
- **DO NOT** cover or obstruct any of the grilles or the air intake openings of the heater.
- Always ensure that the heater is placed on a firm level surface.
- The device must only be used in an upright position on a smooth, stable, heat-resistant surface.
- **DO NOT** sit on the heater or put anything on the heater.
- Make sure the minimum safety distances from walls and objects stated in the installation instructions are observed at all times. This is very important to prevent damage to walls, furniture and soft furnishings and to prevent the product overheating.
- Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- **DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- **DO NOT** leave the heater unattended at any time whilst switched on.
- **DO NOT** run cord under carpeting and **DO NOT** cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

- **DO NOT** operate with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- **DO NOT** use an extension cord as this may overheat and cause a risk of fire.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is switched on and off remotely.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** some parts of this product can become very hot and cause burns. particular attention has to be given where children and vulnerable people are present.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they DO NOT play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

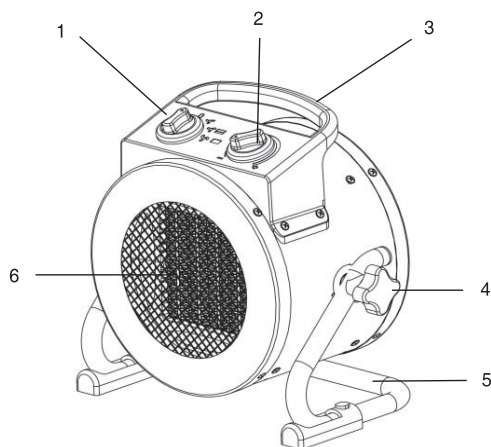

1. Heat setting knob
2. Adjustable thermostat control knob
3. Carry handle
4. Tilt angle adjustment knob
5. Floor stand
6. Front safety grille

ASSEMBLY AND OPERATING INSTRUCTIONS

BEFORE USE

Unpack the box on a firm level surface. Check for transportation damage and make sure all parts are complete after the appliance is unpacked. Do not use if any parts are missing or damage. Remove all packaging material before assembly.

 
NOTE: The product can only be used as portable appliance.

Check if the power wire is under good condition. The product adopts 220-240V AC power supply, before use, please confirm if the rated current of the power socket meets the local requirements with safe grounding device, otherwise, please replace it with the qualified socket.

OPERATING THE SPACE HEATER

- Put the machine on the flat place

An uneven or unstable surface may cause the tip-over switch to be in an abnormal position, which could prevent the heater from working after being turned on. Therefore, please ensure the heater is placed on a flat surface, at the very least, the surface beneath the heater's base must be flat and stable.

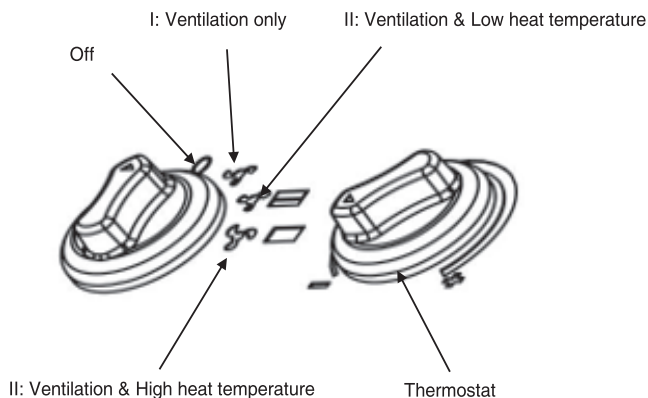

- Adjustable thermostat control knob

Insert the plug into the power socket, then turn the adjustable thermostat control knob clockwise. When you hear a "click" sound (indicating that the temperature controller is activated), adjust the knob to your desired temperature level. The thermostat then will automatically turn on and off to keep the room temperature constant. Adjustable thermostat, 0~85℃, 270 degree.

Note: The heater will not start heating unless the thermostat control knob is activated.

- Heat Setting Knob

Turn the heat setting knob to choose between three functions: Level I: Fan only, Level II: 1000W (LOW), level III: 2000W (HIGH).

- Turn Off the Heater

A. Turn the heat setting knob to the OFF position.
B. Turn the adjustable thermostat control knob anticlockwise to its initial position.
C. Unplug the power cord and store the heater once the entire unit has completely cooled down.

● **Safety Protection**

Overheat Protection: If the temperature inside the heater becomes too high due to abnormal environmental conditions or improper use, the thermostat device will automatically cut off the power, causing the heater to stop working. Once the entire heater has cooled down and the abnormality has been resolved, the heater can be used normally again.

After the use, follow the below steps to operate the heater: turn off the thermostat and switch (OFF position), unplug and let the appliance cool down to the air temperature. When the appliance cools down completely, put it in the packaging. Avoid to store the unit before the heating element doesn't cool down, it's dangerous to store the hot unit.

CARE AND CLEANING

CAUTION: Prior to performing any maintenance or cleaning of your panel heater always disconnect the electrical supply for the unit. To avoid of the risk of electric shock, never connect and disconnect the plug with your hand wet.

- To avoid malfunction, always keep the unit upright.
- Clean the exterior only of this unit with a soft dry cloth.
- **DO NOT** use any chemical or abrasive cleaners.
- Ensure that any dust or fluff does not build up on the air inlet or outlet. Build-up of dust and fluff will lower the heating capacity or cause a risk of fire. It is recommended to regularly vacuum both the inlet and outlet of the unit when any dust or fluff builds up.
- When the heater is not in use for extended periods, it should be protected from dust and stored in a clean, dry place.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Not working	The plug may not be properly connected.	Check that the plug is properly inserted into the socket.
	The heater is overheated.	Unplug from the outlet, and ensure the air inlet and outlet are clean and free of blockage. Cool down the heater completely and turn it on.
	Thermostat is not turned on	Please turn on the thermostat clockwise.
The heater stops suddenly while it is working	The ambient temperature is higher than the preset temperature.	Adjust to a higher temperature setting by turn the thermostat to be activated.
	Space heater is faulty.	Contact Toolstation Customer Support
The heater vibrates slightly when it works.	Uneven ground	Place the heater on a flat and firm ground.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR APPLIANCE, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE APPLIANCE YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.



EU & UK DECLARATION OF CONFORMITY



1. **Product Models:** 92761 (PF01-G)
2. **Product Description:** Wessex 2kW Space Heater 2000W
3. **Name and Address of the Manufacturer (or its authorised representative in the UK):**
Toolstation - company number 04372131.
4. This declaration of conformity is issued under the sole responsibility of Toolstation.
5. The product(s) detailed above is/are in conformity with the following applicable UK legislation and EU harmonisation legislation:
 - Low Voltage Directive - 2014/35/EU (The Electrical Equipment (Safety) Regulations 2016 - SI 2016/1101)
 - Electromagnetic Compatibility - Directive 2014/30/EU (The Electromagnetic Compatibility Regulations 2016 - SI 2016/1091)
 - Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS) - Directive 2011/65/EU (The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 - SI 2012/3032)
 - Ecodesign Directive - COMMISSION REGULATION (EU) 2024/1103 (The Ecodesign for Energy-Related Products Regulations 2010 - SI 2010/2617)
6. References to the relevant harmonised standards and technical specifications:

EN 60335-1
EN 60335-2-30
EN 62233
EN IEC 55014-1
EN IEC 55014-2
EN IEC 61000-3-2
EN 61000-3-3

Signed for and on behalf of Toolstation - company number 04372131.

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

ENERGY USE INFORMATION

Model(s)		SKU 92761/ Model PF01-G			
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters	
Nominal heat output	P _{nom}	2.000	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	P _{min}	1.000	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	P _{max,c}	2.000	kW	With mechanic thermostat room temperature control	Yes
Power consumption				Type of heat output / room temperature control	
In off mode	P _o	0.00	W	With electronic room temperature control	No
In standby mode	P _{sm}	0.00	W	Electronic room temperature control plus day timer	No
In idle mode	P _{idle}	0.00	W	Electronic room temperature control plus week timer	No
In network standby	P _{nsm}	0.00	W	Other control options (multiple selections possible)	
Standby mode with display information or status		No		Room temperature control, with presence detection	No
Seasonal space heating energy efficiency in active mode	η _{S,on}	85.0	%	Room temperature control, with open window Detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
This heater is only suitable for well insulated spaces or occasional use.				With self-learning functionality	No
				With control accuracy	No
Toolstation Limited (company number 04372131)					

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation - replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email: info@toolstation.com

Made in China

Imported by Toolstation 04372131.

WESSEX is a Toolstation brand. Toolstation is part of Travis Perkins Trading Company Limited.

