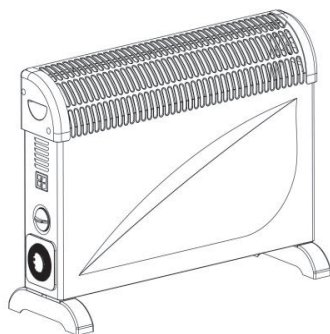 
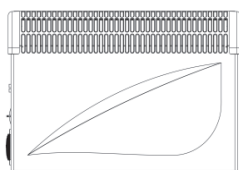 


Original User Instructions

TOOLSTATION**Convactor Heater with 24hr timer**

SKU: 98046

Domestic Use Only**This product is only suitable for well insulated spaces or occasional use.****WHAT'S IN THE BOX**

Heater Body x1



Screw x4



Feet x2

Manual x1

If you do not have all these items, please contact:
www.toolstation.com/contact
Telephone 0808 100 7211 Mobile friendly 0330 333 3303
Email info@toolstation.com

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

TOOLS REQUIRED



Cross screwdriver---2# (PH2)

SPECIFICATION

- 220-240V~50Hz
- 3 heat settings: 750W/1250W/2000W
- Adjustable thermostat
- 24H mechanical timer
- Overheat protection
- Power indicator light
- With integrated carry handles

TECHNICAL DATA

Model	98046 / DL01 TIMER
Rated Voltage	220-240V~
Rated Power Rate	2000W
Plug	BS plug, 10A fuse
Power Cord Length(mm)	1500mm (out length)
Power Cord Spec	H05VV-F, 3x1.0mm ²
Dimension(H x L x W-mm)	410x584x200mm
Net Weight Approx.(g)	2800g

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



DO NOT COVER



Earthing connection



UK Conformity Assessed



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was done.

HEALTH AND SAFETY



- The heater carries the warning symbol indicating that it must not be covered.
- **WARNING:** In order to avoid overheating **DO NOT** cover the heater.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** use if there are visible signs of damage to the heater. Use this heater on a horizontal and stable surface.
- **DO NOT** cover or obstruct the air inlet and outlet openings in any way.
- **DO NOT** insert any object through the heat outlet or air intake grilles of the heater. Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater. Do not use heater to dry your laundry.
- **DO NOT** place the heater on carpets.
- **DO NOT** operate the heater with the mains lead overhanging the front outlet grille. Keep the mains lead away from the hot body of the heater.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- **WARNING:** The plug cut off the mains lead with conductors exposed will be dangerous if inserted into a socket.
- **IMPORTANT:** If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This product must be connected to Earth.
- **DO NOT** position the heater in front of, or immediately below a socket-outlet.
- The plug is fitted with a 10 Amp fuse. When replacing, use only a fuse approved to BS1362 and carrying the relevant approved Mark. Never use the plug with the fuse omitted.

- Suitable for indoor use only.
- This product is only suitable for use in living areas (not for areas constantly subject to moisture).
- **IMPORTANT:** Always switch off at the socket and remove the plug when not in use.
- Always unplug the heater when moving it from one location to another.
- **DO NOT** cover or obstruct any of the grilles or the air intake openings of the heater.
- Always ensure that the heater is placed on a firm level surface.
- Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- **DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- **DO NOT** run cord under carpeting and **DO NOT** cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
- **DO NOT** operate with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- **DO NOT** use an extension cord as this may overheat and cause a risk of fire.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is switched on and off remotely.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they **DO NOT** play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch

 
on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- **CAUTION- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**

ASSEMBLY AND USE

Assembly


- Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

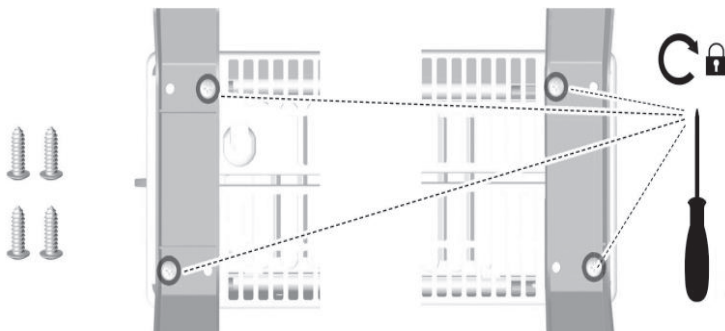

Use

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

 
- This model is also fitted with a 24hr timer which has 96 segments around its circumference, each segment being equivalent to 15 minutes of time. With the aid of this timer it is possible to preset the time and duration of the period(s) that it is desired the heater will operate, in any 24hr period.

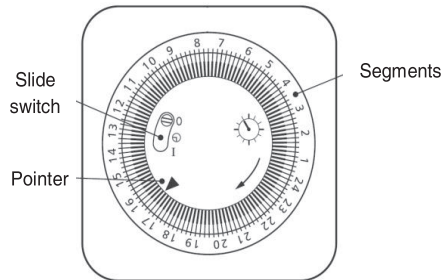

The center of the timer has a 3-positions slide switch.

- 0 No power is fed to the heater.
- I The heater can be switched on using the thermostat and heater switches.
- ⌚ The heater is controlled by the timer.

 - Choose a suitable location for the heater, taking into account the safety instructions.
- Insert the plug of the heater into a suitable socket. Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- Turn on the heating elements by means of the rocker switches on the side panel.
- When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.
- When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

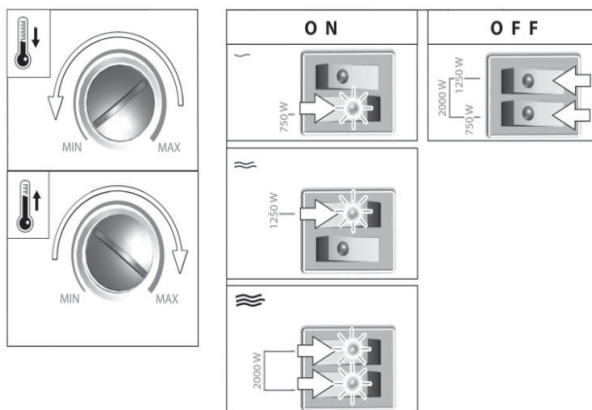

Thermostat

Heater switches

Setting the Timer

Note: When using in timer mode, due consideration should be given to the fact that the heater may come on whilst unattended.

- Ensure the slide switch on the timer is at position of .
- Rotate the outer ring of the timer in a clockwise direction until the current time is lined up with the arrow pointer, i.e. if the time the timer is being set is 8 p.m., rotate the outer ring until the number 20 is in line with the arrow pointer.
- Set the time the heater is required to run by pulling the segments around the outer ring forward appropriate to the running period(s) required.
- When set, the heater will operate each day during the times programmed. Note, the heater must always be plugged into a power socket, the element switches must be in the on position and the thermostat must be suitably set to ensure the heater will come on.
- If the heater is required to run continuously the slide switch on the timer should be set to the “I” position.
- If it is subsequently required to revert back to timer operation, the slide switch on the timer should be set to the central (clock) position.

PROTECTION AGAINST OVERHEATING

- An additional fitted safety thermostat protects the heater against overheating and switches it off automatically. The service lamp then goes out. The heater is ready for service again after a short cooling-off phase (approx. 15 minutes).
- If this repeats itself, first check whether the thermostat switch is set correctly or if objects hinder the heating operation.

CARE AND CLEANING

- Disconnect the power and allow the heater to cool.
- Clean the exterior only of this heater with a soft dry cloth.
- Do not use any chemical or abrasive cleaners.
- When the heater is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

TROUBLE SHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Insert the plug, the indicator light is not on after the power switch is turned on	Thermostat is not turned on	Please turn on the thermostat clockwise.
Insert the plug, the indicator light is not on after the power switch is turned on	Timer is not turned on	If the heater is required to run continuously the slide switch on the timer should be set to the “I” position.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR HEATER, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.



EU & UK DECLARATION OF CONFORMITY



1. **Product Models:** 98046 (DL01 TIMER)
2. **Product Description:** 2kW Convector Heater 24 Hour Timer
3. **Name and Address of the Manufacturer (or its authorised representative in the UK):**
Toolstation - company number 04372131.
4. This declaration of conformity is issued under the sole responsibility of Toolstation.
5. The product(s) detailed above is/are in conformity with the following applicable UK legislation and EU harmonisation legislation:
 - Low Voltage Directive - 2014/35/EU (The Electrical Equipment (Safety) Regulations 2016 - SI 2016/1101)
 - Electromagnetic Compatibility - Directive 2014/30/EU (The Electromagnetic Compatibility Regulations 2016 - SI 2016/1091)
 - Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS) - Directive 2011/65/EU (The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 - SI 2012/3032)
 - Ecodesign Directive - COMMISSION REGULATION (EU) 2024/1103 (The Ecodesign for Energy-Related Products Regulations 2010 - SI 2010/2617)
6. References to the relevant harmonised standards and technical specifications:
EN 60335-1
EN 60335-2-30
EN 62233
EN IEC 55014-1
EN IEC 55014-2
EN IEC 61000-3-2
EN 61000-3-3

Signed for and on behalf of Toolstation - company number 04372131.

ENVIRONMENTAL INFORMATION



■ The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

ENERGY USE INFORMATION

Information requirement for electric local space heaters

Model(s)	SKU 98046/ Model DL01 TIMER				
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat output/room temperature control (select one)	
Nominal heat output	P _{nom}	2.000	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	P _{min}	0.750	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	P _{max,c}	2.000	kW	With mechanic thermostat room temperature control	Yes
Power consumption				Type of heat output / room temperature control	
In off mode	P _o	0.00	W	With electronic room temperature control	No
In standby mode	P _{sm}	0.00	W	Electronic room temperature control plus day timer	No
In idle mode	P _{idle}	0.00	W	Electronic room temperature control plus week timer	No
In network standby	P _{nsm}	0.00	W	Other control options (multiple selections possible)	
Standby mode with display information or status			No	Room temperature control, with presence detection	No
Seasonal space heating energy efficiency in active mode	$\eta_{S,on}$	85.5	%	Room temperature control, with open window Detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	Yes
				With black bulb sensor	No
This heater is only suitable for well insulated spaces or occasional use.				With self-learning functionality	No
				With control accuracy	No
Toolstation Limited (company number 04372131)					

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation – replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email: info@toolstation.com

Made in China