 


Original User's Instructions

TOOLSTATION

30-inch Tower Fan

 
SKU:51156

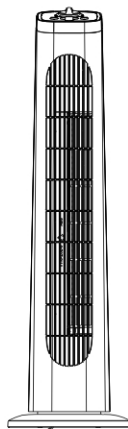

WHAT'S IN THE BOX



Fan base



Fan body

If you do not have all these items, please contact:
www.toolstation.com/contact
Telephone 0808 100 7211 Mobile friendly 0330 333 3303
Email info@toolstation.com

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

SPECIFICATION

- 220-240V~50Hz
- AC copper motor
- 3 speed settings
- 2 hours timer
- Oscillation function

TECHNICAL DATA

Model	DC2015
Rated Voltage	220-240V~50Hz
Rated Power Rate	45W
Plug	BS plug, non-revirable, 3A fuse
Power Cord Length(mm)	1700
Power Cord Spec	H05VVH2-F 2x0.75mm ²
Dimensions (H x D x W-mm)	752x220x220
Oscillation Angle	60°
Maximum air flow-L/sec	181.3
Maximum air velocity-m/s	3.38
Net Weight approx.(g)	2700
Noise level-dB(A)	58.9

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



UK Conformity Assessed



The product complies with the applicable European directives and an evaluation method of conformity for these directives was carried out.



Protection class II. Double insulation

 
IMPORTANT SAFETY WARNINGS

- Read rules for safe operation and instructions carefully.
- The product is for household use only.
- Indoor use only.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Connect the appliance to single-phase AC supply of the voltage specified on the rating plate.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- **DO NOT** use fan in window, rain may create electrical hazard.
- **DO NOT** place anything on top of unit.
- **DO NOT** run the cable under carpeting. Do not cover the appliance or the cable. Arrange the cable away from walkways to where it can be tripped over.
- Use the fan in a well-ventilated area. While using, distance of no less than 20cm should be kept away from wall or corner to ensure the air intakes or exhaust openings should not be blocked unexpectedly.
- The fan must not be located immediately below or besides a curtain or the likes.
- Never leave the fan unattended while it is in use. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Extreme caution is necessary when any fan is used by or near children, invalids or elderly person and whenever the fan is left operating and unattended.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- To avoid the risk of accidental strangulation from the supply cord all

children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.

- Cleaning and user maintenance shall not be made by children without supervision.
- **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

IDENTIFICATIONS

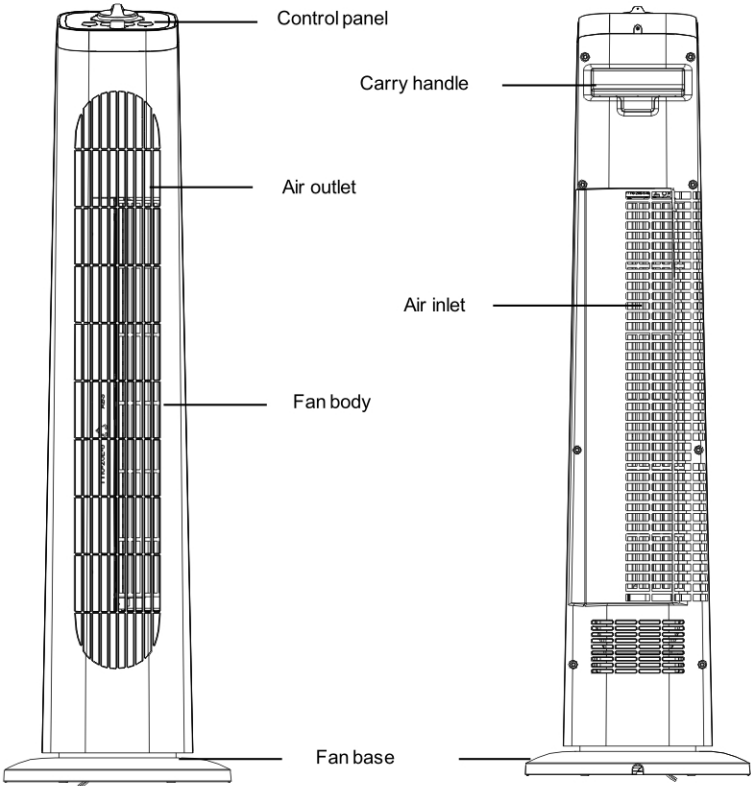

ASSEMBLY AND OPERATING INSTRUCTIONS

The fan is packaged with some parts unattached and requiring a little, simple assembly.

WARNING: Do not operate until fully assembled and with all parts correctly attached.

Assemble the base

- Unpack the fan and remove all the parts from the package. Retain the packaging until assembly is complete. Take out the fan body and the spare parts from the box. Put the front base onto rear base and join them together.
- Put the two halves of the base together. See Figure 1
- Position the base on the bottom of the fan, put the power cord through the base and make sure clasps on tower fan body is aligned with the holes on the base. See Figure 2
- Then rotate the base clockwise until it is locked. Finally thread the power cord into the guide on the bottom of the base by gently pressing the wire into the clamps. See Figure 3

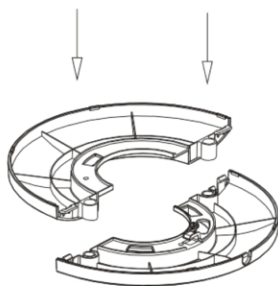 


Fig 1

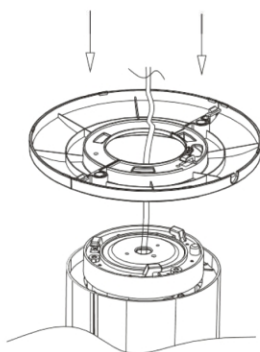 


Fig 2

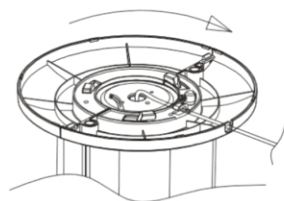 


Fig 3

Operating instructions

- **Controls**

Press selection button to choose desired speed.

- 1 for low speed,
- 2 for medium speed,
- 3 for high speed,
- 0 for power off

↔ for oscillation

 
 
- **Oscillation**

Press the ↔ button on the top of the fan begin oscillation. Press again to stop.

- **Timer operation**

For timer operation, turn the timer control clockwise to operate the fan for the selected duration.

Note that with the power disconnected, the timer will continue to count down and stop at the '0' position. When the fan is reconnected to the mains, the timer control will need to be adjusted for either timed or continuous operation.

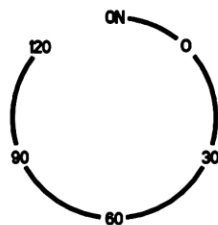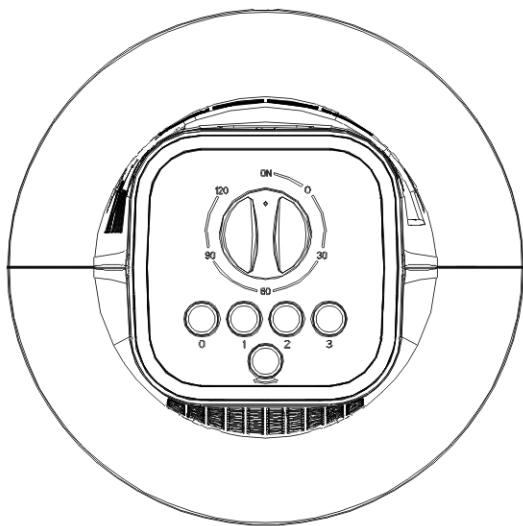

CARE AND CLEANING

- Disconnect the power and allow the fan rotation to stop.
- Clean the exterior only of this fan with a soft dry cloth.
- Do not use any chemical or abrasive cleaners.
- When the fan is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

TROUBLE SHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The fan is not operating.	• The plug is not fully inserted into the wall outlet • The wall outlet experienced an overload • Fuse in plug fails	• Make sure that the plug is fully inserted into the base AC wall outlet. • Unplug the fan. Inspect the main electrical breaker box. If you find a tripped breaker, reset it. If the problem persists, contact a qualified, licensed electrician • Remove and inspect the fuse located in the plug. If the fuse is tripped, replace with the appropriate 3 Amp fuse. If the problem persists, contact a qualified, licensed electrician

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR APPLIANCE, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE APPLIANCE YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: 51156 (DC2015)

Product Description: 30-inch Tower Fan

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:

- Electrical Equipment (Safety) Regulations 2016 (LVD 2014/35/EU)
- Electromagnetic Compatibility Regulations 2016 (EMC 2014/30/EU)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS 2011/65/EU & 2015/863/EU)
- REACH (EC) No 1907/2006

-

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared:

-

- BS EN 62233
- BS EN 60335-2-80
- BS EN 60335-1
- BS EN 55014-1
- BS EN 55014-2
- BS EN 61000-3-2
- BS EN 61000-3-3

-

-

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation – replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email: info@toolstation.com

Made in China

