 
 


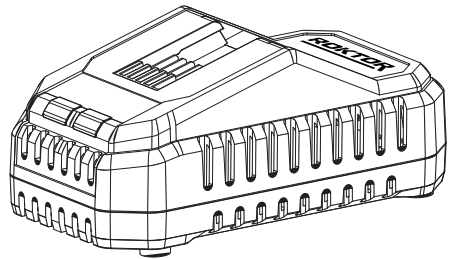

ORIGINAL USER INSTRUCTIONS

18V LI-ION CHARGER

SKU: AJ069 / AJ067

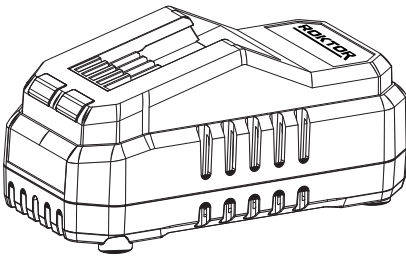

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com


CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	5
• IMPORTANT SAFETY WARNINGS-----	6
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	7
• OPERATING INSTRUCTIONS-----	8
• CARE AND CLEANING-----	11
• TROUBLESHOOTING-----	11
• DECLARATION OF CONFORMITY / PERFORMANCE-----	12
• ENVIRONMENTAL INFORMATION-----	13
• WARRANTY-----	13
• CUSTOMER SUPPORT-----	16

 WHAT'S IN THE BOX

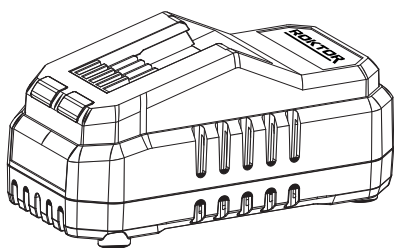

AJ069 (ACG1824D) Charger

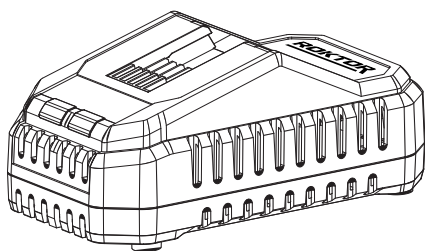 

AJ067 (ACG1840D1) Charger



User instruction manual

SPECIFICATIONS

- 18V 
- Charger state indicator
- With battery fault indicator

TECHNICAL DATA

SKU/Model		AJ069 (ACG1824D)	AJ067 (ACG1840D1)
Rated input		100-240V~50/60Hz, 60 W	100-240V~50/60Hz, 100 W
Rated output		20V  2.4A	20V  4.0A
Charge battery		Li-ion	Li-ion
Battery pack charging time (approx.)	2.0 Ah	50min	30min
	4.0 Ah	100min	60min
	5.0 Ah	125min	75min
Charger protection class		 /II	 /II
Net weight approx.(kg)		0.37 kg	0.5 kg

*Voltage measured without workload. The initial battery voltage reaches a maximum of 20 volts.

*Charging times may vary slightly depending on local conditions.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



Warning!



For indoor use only



Read the instruction manual



Positive terminal



Negative terminal

T 2.5A



Fuse (For ACG1824D)

T3.15A



Fuse (For ACG1840D1)



Double insulation



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, user must read instruction manual



WARNING: Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

 
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for work other than those for which they are designed.
4. Before charging, ensure your charger matches the local AC supply.
5. For indoor use, do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity “+/-” when charging.
10. Do not open the unit and keep out of the reach of children.
11. Do not charge the batteries of other manufacturers or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.
18. If the charger emits smoke, unusual odours, excessive heat, or shows signs of damage, disconnect it immediately from the mains supply and discontinue use.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

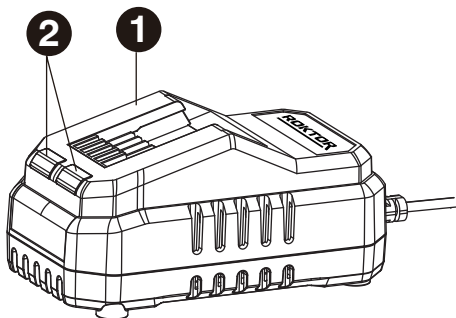

AJ069 (ACG1824D)

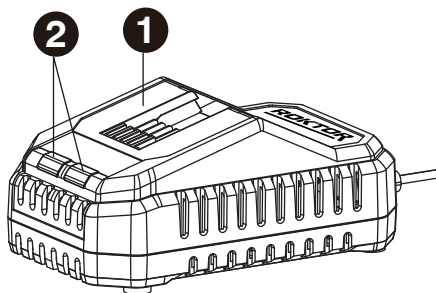 

AJ067 (ACG1840D1)

1. **Charger**
2. **Power / charging status indicator lights**

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction manual carefully.

INTENDED USE

This charger is intended solely for charging compatible 18V Li-ion battery packs supplied or approved by the manufacturer.

1. CHARGE THE BATTERY PACK

Do not use any charger other than that specifically provided for use with the equipment. If the battery pack is very hot, you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.

Please charge the battery to reach full before storage. If the tool will not be used for long periods of time, charge the battery every 3 months.

2. TO INSTALL OR REMOVE BATTERY PACK (NOT SUPPLIED) (SEE FIG. 1, 2)

For charging, slide the battery pack back into the battery port. A simple push and light pressure will be sufficient.

Depress the battery pack release button firmly first and then slide the battery pack out from your tool.

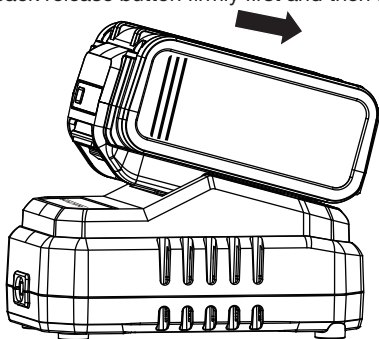 


Figure 1

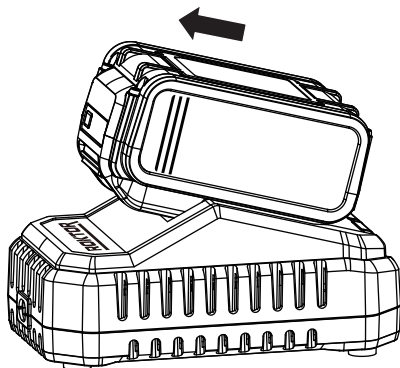 


Figure 2

3. WALL-MOUNT HOLES (SEE FIG. 3)

- 1) The charger has hanging holes for convenient storage.
- 2) Install screws in the wall 3 inches (76,2 mm) apart. Ensure the wall and fixings are suitable for the load. Do not mount on plasterboard without appropriate wall anchors. A falling charger may cause injury or damage.

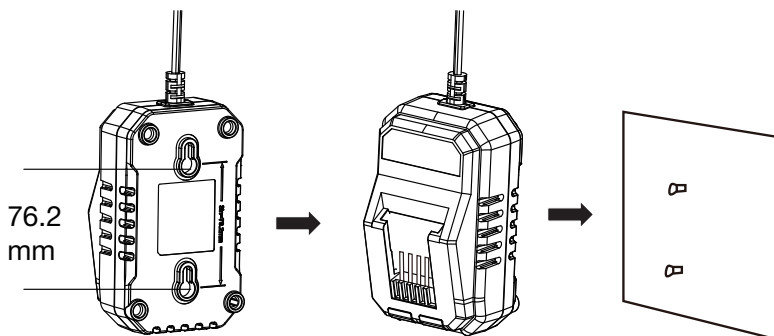 


Figure 3

4. CHARGING PROCEDURE (SEE FIG. 4)

- 1) Plug the charger into an appropriate outlet.
- 2) Slide the battery pack into the charger. The light will become green and flash to show charging has started. After fully charged, the green light stays on.

NOTE: If the battery pack is locked in the charger, press the battery pack release button and remove it.

WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the tool to cool down before recharging to achieve the full charge. Do not charge the battery on flammable surfaces or near combustible materials.

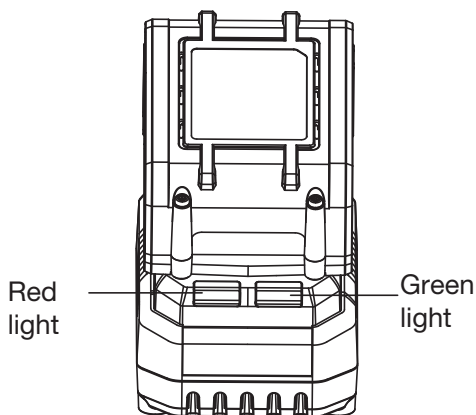 


Figure 4

5. CHARGING INDICATOR

This charger is designed to detect some problems that can arise with battery packs. Indicator lights indicate problems (see table below). If this occurs, insert a new battery pack to determine if the charger is OK. If the new battery charges correctly, then the original pack is defective and should be returned to a service centre or recycling service centre. If the new battery pack displays the same problem as the original battery pack, have the charger tested at an authorised service centre.

Light	On/ Flash	Status
Red on 	————	Battery Temperature Protection The temperature of battery pack is less than 0°C or more than 45°C.
Red flash 	- - - - -	Defective Battery
Green on 	————	Fully Charged
Green flash 	- - - - -	Charging

CARE AND CLEANING

MAINTENANCE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Always disconnect the charger from the mains supply before transporting or cleaning. Your tool requires no additional lubrication or maintenance. Never use water or chemical cleaners to clean your tool. Wipe clean with a dry cloth. Always store your tool in a dry place. If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Battery pack does not charge	• Battery pack is fully charged • Battery temperature is too high or too low • Charger is not properly connected • Charger or battery pack is defective	• Remove the battery pack from the charger • Charge the battery in an ambient temperature • Check and reconnect the charger • Contact customer service centre.
Charger does not power on	• No power at the mains outlet • Charger plug not fully inserted • Power cord or plug damaged	• Check the mains outlet and try another socket • Fully insert the plug into the socket • Replace the charger or power cord

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR BATTERY CHARGER, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE BATTERY CHARGER YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AJ069 (ACG1824D) / AJ067 (ACG1840D1)

Product Description: 18V Li-ion Charger

1. Toolstation (company number 04372131)
This declaration of conformity is issued under the sole responsibility of Toolstation
2. Object of the declaration
The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:
 - Electrical Equipment (Safety) Regulations 2016
 - Electromagnetic Compatibility Regulations 2016
 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):
 - BS EN 60335-1
 - BS EN 60335-2-29
 - BS EN 62233
 - BS EN IEC 55014-1
 - BS EN IEC 55014-2
 - BS EN IEC 61000-3-2
 - BS EN 61000-3-3
 - BS EN IEC 63000
4. Additional information:
Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China