




ORIGINAL USER INSTRUCTIONS

18V BRUSHLESS CORDLESS JIGSAW

SKU: AJ045

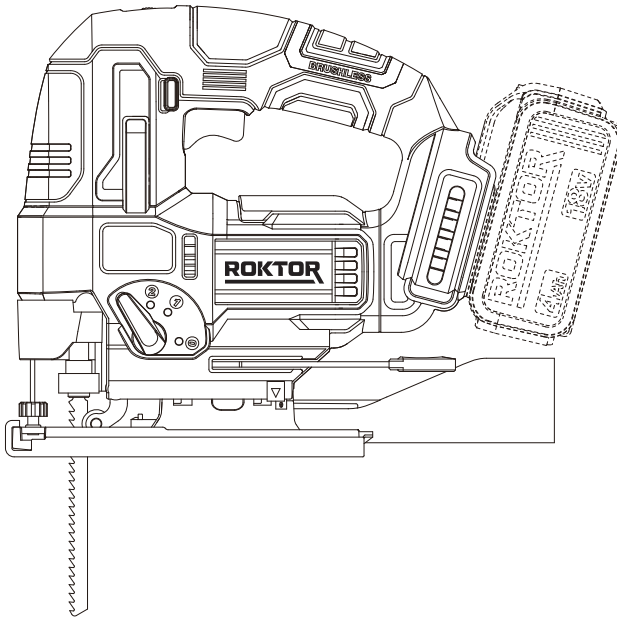

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com


CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	5
• IMPORTANT SAFETY WARNINGS-----	7
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	11
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	12
• CARE AND CLEANING-----	21
• TROUBLESHOOTING-----	22
• DECLARATION OF CONFORMITY / PERFORMANCE-----	23
• ENVIRONMENTAL INFORMATION-----	24
• WARRANTY-----	24
• CUSTOMER SUPPORT-----	28


WHAT'S IN THE BOX

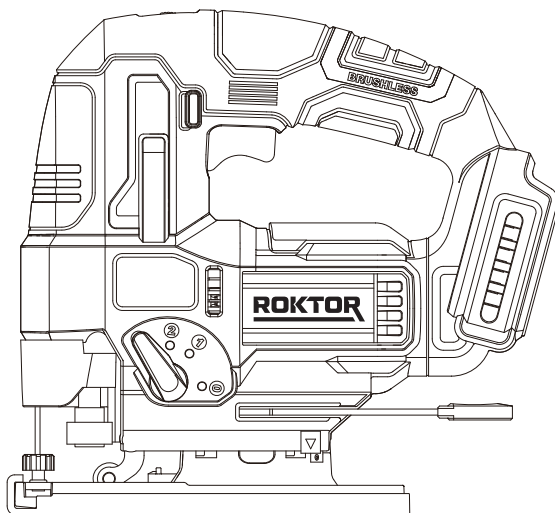


Jigsaw with base cover assembled

 

Vacuum adaptor

 

Wood cutting blade (T101D)

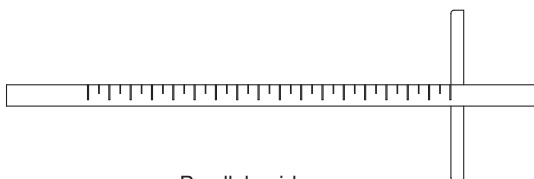

Parallel guide



User instruction manual

SPECIFICATIONS

- 18V $\equiv$
- Variable speed
- Tool-free base bevel adjustment
- Adjustable base for angle cutting

TECHNICAL DATA

SKU/Model		AJ045 (CSJ18BD5.9)
Voltage		18V $\equiv$
No-load speed		800-3200 /min
Stroke length		26 mm
Bevel capacity		$\pm 45^\circ$
Max. cutting capacity	Wood	120 mm
	Steel	10 mm
	Aluminum	18 mm
Net weight approx.(kg)		1.92 kg
A weighted sound pressure L_{pA} ($K_{pA} = 3$ dB(A))		90,7 dB(A)
A weighted sound power L_{wA} ($K_{wA} = 3$ dB(A))		98,7 dB(A)
Vibration level a_h ($K = 1,5$ m/s ²)		
Cutting boards		$a_{h,B} = 6,437$ m/s ²
Cutting steel metal		$a_{h,M} = 5,969$ m/s ²

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, dependent on what kind of workpiece is processed, and dependent on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti-vibration and noise accessories are used.
- The tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Always use sharp blades.

Maintain this tool in accordance with these instructions and keep it well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

SUITABLE BATTERY PACKS

Item number	AJ038 (ABP1820TD5)	AJ062 (ABP1840TD5)	AJ061 (ABP1850TD5)
Battery capacity	2.0Ah	4.0Ah	5.0Ah
	Not included	Not included	Not included

SUITABLE CHARGERS

Item number	AJ069 (ACG1824D)	AJ067 (ACG1840D1)
Charger input	100-240V~50/60Hz, 60 W	100-240V~50/60Hz, 100 W
Charger output	20V $\equiv$ 2.4A	20V $\equiv$ 4.0A
Charger protection class	□/II	□/II
	Not included	Not included

Suitable battery packs or chargers are available on <https://www.toolstation.com>



WARNING: Only use genuine Toolstation battery packs listed above. Use of unapproved batteries may result in fire, explosion or electric shock.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read the instruction manual



Risk of damage or injury if the instructions in this manual are not followed



Wear eye protection



Wear ear protection



Wear a dust mask



Always wear gloves



Batteries may enter water cycle if disposed improperly, which can be hazardous for the ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn



Li-ion



Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



For indoor use only



Read the operator's manual



Positive terminal



Negative terminal

T 2.5A T 3.15A



Fuse



Double insulation



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, user must read instruction manual

GENERAL POWER TOOL SAFETY WARNINGS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*

- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
 - g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6) Service**
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
 - b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorised service providers.*

JIGSAW SAFETY WARNINGS

1. **Hold jigsaw by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** *Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*
2. **Use clamps or another practical way to secure and support the workpiece to a stable platform.** *Holding the work by hand or against your body leaves it unstable and may lead to loss of control.*

SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** *When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.*
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Keep battery pack clean and dry.**
- g) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- h) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- i) **Do not maintain battery pack on charge when not in use.**
- j) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- k) **Recharge only with the charger specified by the manufacturer. Do not use any charger other than that specifically provided for use with the equipment.**
- l) **Do not use any battery pack which is not designed for use with the equipment.**
- m) **Keep battery pack out of the reach of children.**
- n) **Retain the original product literature for future reference.**
- o) **Remove the battery from the equipment when not in use.**
- p) **Dispose of properly.**
- q) **Do not mix cells of different manufacturers, capacity, size or type within a device.**
- r) **Keep the battery away from microwaves and high pressure.**
- s) **Warning! Do not use non-rechargeable batteries.**

- t) **The normal temperature range for charging the battery is 0-40°C.**
- u) **Do not expose the appliance or battery to excessive temperatures.**

SAFETY WARNINGS FOR BATTERY CHARGER



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger matches the local AC supply.
5. For indoor use, do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity "+/-" when charging.
10. Do not open the unit and keep out of the reach of children.
11. Do not charge the batteries of other manufacturers or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not over-charge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

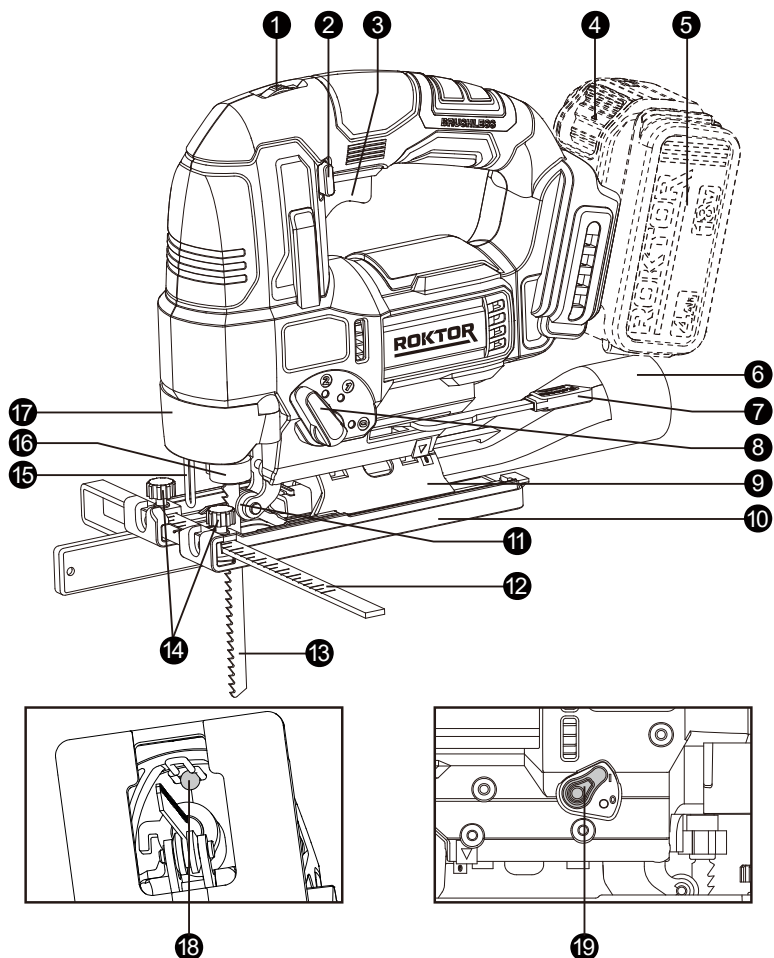

- | | |
|---|--|
| 1. Variable speed control dial | 11. Roller guide |
| 2. Lock-off button | 12. Parallel guide |
| 3. On/off switch | 13. Saw blade |
| 4. Battery pack release button (not supplied) | 14. Parallel guide locking knobs |
| 5. Battery pack (not supplied) | 15. Finger protection |
| 6. Vacuum adaptor | 16. Tool-free blade holder |
| 7. Base plate adjustment lever | 17. Tool-free blade holder release latch |
| 8. Pendulum action control knob | 18. LED light |
| 9. Base plate | 19. Dust-blowing control knob |
| 10. Base cover | |

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction manual carefully.

The tool is packaged with some parts that are unattached and require a little simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached. Blade teeth are very sharp. Handle with extreme care.

ASSEMBLY

1. TOOL-FREE BLADE FITTING (SEE FIG. 1)



WARNING: Remove the battery pack from the jigsaw before carrying out any adjustment, servicing or maintenance.



WARNING: Blade teeth are very sharp. Always wear protective gloves. For best cutting results, ensure you use a blade suited to the material and cut quality you need.

- 1) Rotate the tool-free blade holder release latch clockwise (jigsaw upside down) and hold it.
- 2) Fully insert the blade into the blade holder slot with blade teeth facing forward and release the blade holder release latch, which will self-rotate and clamp over the top of the blade. Ensure the edge of the blade is located in the groove of the roller guide.
- 3) Pull up on blade to make sure that it is locked in place.

NOTE: To remove the blade, hold the blade and rotate the blade holder release latch clockwise then lift out the blade (blade could be spring ejected).



WARNING: The newly used blade is very hot, please pay attention to let it cool or wear protective gloves.

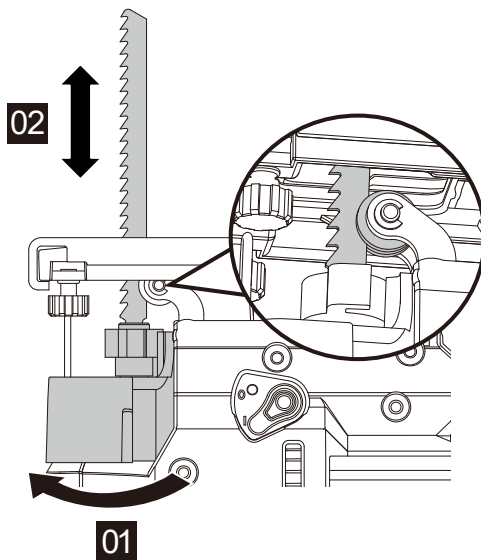


Figure 1

2. VACUUM ADAPTOR FITTING (SEE FIG. 2-1 & 2-2)

Mount the vacuum adaptor into the opening of the base plate. Make sure that the plastic tip of the vacuum adaptor engages into the corresponding opening on the housing.

NOTE: To remove the vacuum adaptor, press and hold the projection on the bottom of the vacuum adaptor before pulling it out of the machine.

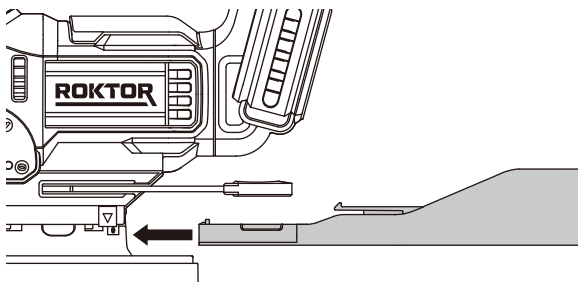


Figure 2-1

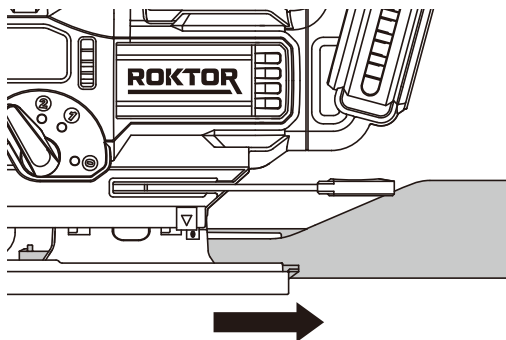


Figure 2-2

3. PARALLEL GUIDE FITTING (SEE FIG. 3)

Turn the parallel guide locking knobs counterclockwise to enlarge the holes where the parallel guide arm is inserted. Then slide the parallel guide arm through both holes and tighten the locking knobs clockwise to achieve the required cutting distance.

NOTE: You can mount the parallel guide from both sides.

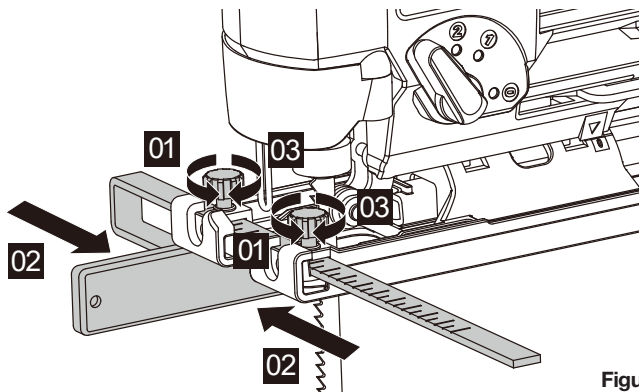


Figure 3

4. CHARGING THE BATTERY PACK (NOT SUPPLIED) (SEE FIG. 4)

1) Plug the charger into an appropriate outlet.

2) Slide the battery pack into the charger. The light will become green and flash to show charging has started. After fully charged, the green light stays on.

NOTE: If the battery pack is locked in the charger, press the battery pack release button and remove it.

NOTE: Do not use any charger other than that specifically provided for use with the equipment. If the battery pack is very hot, you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.

Please charge the battery to reach full before storage. If the tool will not be used for long periods of time, charge the battery every 3 months.



WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full charge.



WARNING: Do not charge the battery on flammable surfaces or near combustible materials.

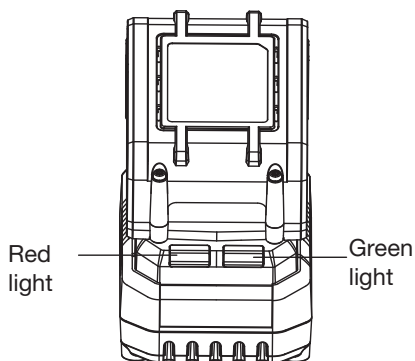


Figure 4

4. REMOVING & INSTALLING THE BATTERY PACK (NOT SUPPLIED) (SEE FIG. 5-1 & 5-2)

To remove the battery pack, depress the battery pack release button firmly first, then slide the battery pack out from your tool.

To install the battery pack, slide the fully charged battery pack onto the tool with sufficient force until it clicks into position.

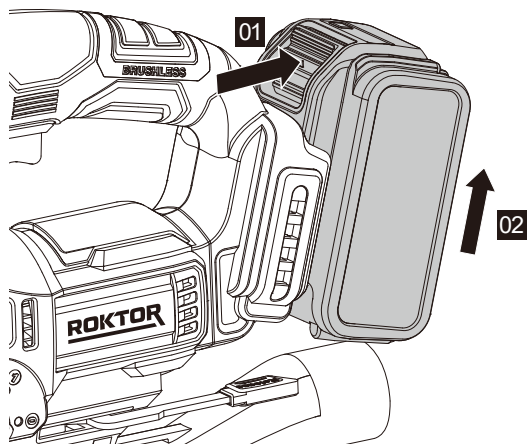


Figure 5-1

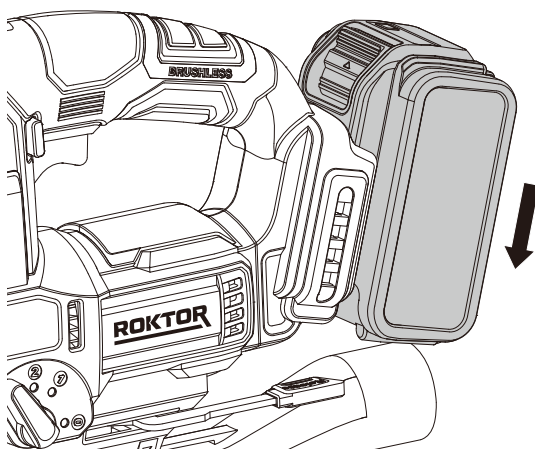


Figure 5-2

OPERATION
INTENDED USE

The tool is intended for sawing wood, plastic, metal and building materials while resting firmly on the workpiece. It is suitable for straight and curved cuts.

1. PENDULUM ACTION CONTROL ADJUSTMENT (SEE FIG. 6)

The pendulum action varies the forward cutting angle of the blade for increased cutting efficiency. This can also be adjusted during no-load running. Refer to the chart below for more details. Do not use excessive blade force when cutting with the pendulum action. The blade cuts on the upward stroke only.

0	Thin materials. Fine cuts. Tight curves.
1	Hard materials, (e.g. steel & chipboard)
2	Thick materials (e.g. wood) & plastic
3	Fast cuts (e.g. softwood). Cutting in the direction of the wood grain.

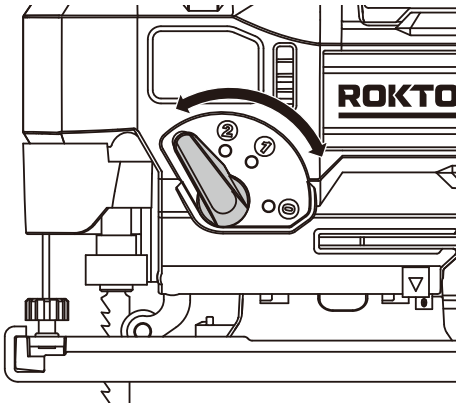


Figure 6

2. DUST-BLOWING CONTROL ADJUSTMENT (SEE FIG. 7)

The cutting line can be kept clear of chips using the airflow from the dust-blowing device. Turn the dust-blowing control knob to "I" to blow the dust, and turn to "0" to stop dust blowing.

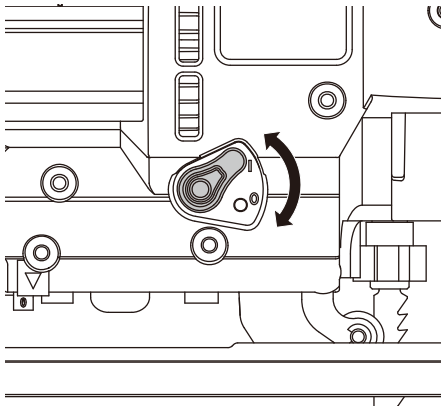


Figure 7

3. SWITCHING ON AND OFF (SEE FIG. 8)

To lock the on/off switch, keep the lock-off button in the center position. This helps to reduce the possibility of accidental starting when not in use.

Depress the lock-off button to left or right then on/off switch and release the lock-off button. Your switch is now on. To switch off, just release the on/off switch.

 **WARNING: Do not look directly into the LED light!**

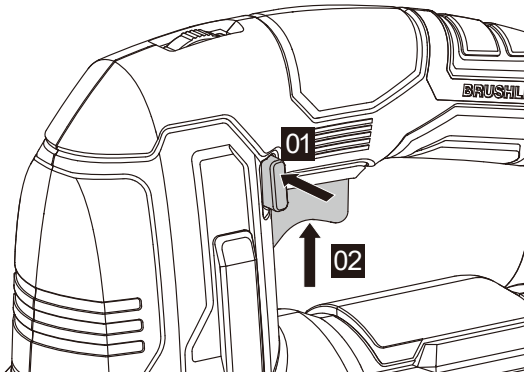


Figure 8

4. VARIABLE SPEED CONTROL (SEE FIG. 9)

Adjust the variable speed control dial to increase or decrease the speed according to the material, material thickness and blade specification to be used (also possible during no load operation). See chart below for general guidance on speed selection.

Avoid prolonged use at very low speed as this may damage your jigsaw's motor.

Material	Speed setting
Wood	5-6
Metal	3-4
Aluminum	3-5
PVC	3-4
Ceramic	3-5

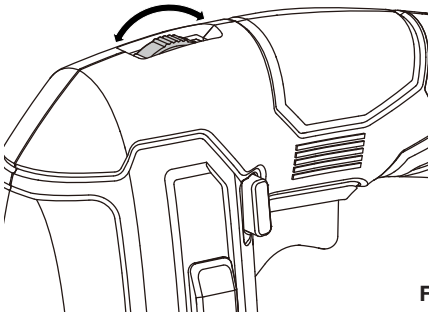


Figure 9

5. BASE PLATE ANGLE ADJUSTMENT (SEE FIG. 10-1 & 10-2 & 10-3)

NOTE: Remove the vacuum adaptor before adjusting the base plate.

- 1) To adjust the base plate angle, rotate the base plate adjustment lever forward to unlock the base plate.

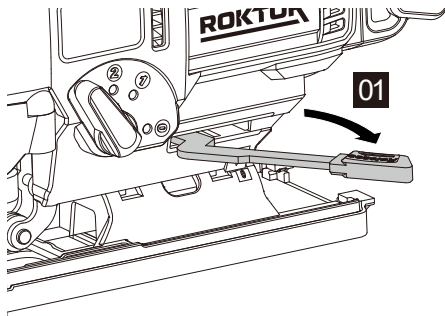


Figure 10-1

- 2) Push the base plate forward slightly, so the lines of the angle on the base plate and angle plate superposition at the desired angle (0°, 15°, 30°, 45°). Pull back the base plate to tighten it.

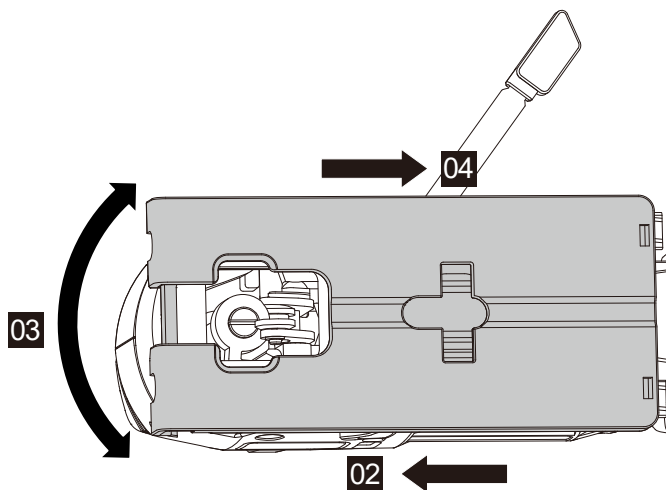


Figure 10-2

3) Then rotate the base plate adjustment lever backward to lock the base plate at that angle. Finally, check the angle and ensure the base plate is firmly clamped.

NOTE: For other mitre angles, rotate to your desired angle (use a protractor scale).

NOTE: The angle markings on the base plate are accurate for most general purposes but it is recommended for accurate work to set the angle with a protractor and make a test cut on other material.

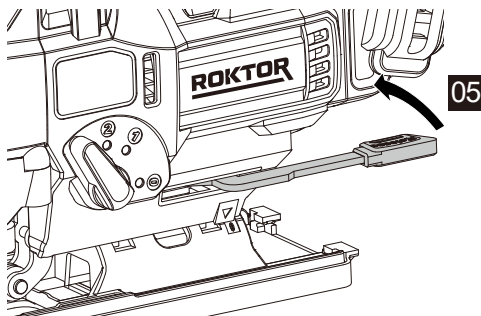


Figure 10-3

6. STRAIGHT CUT AND CURVE CUT (SEE FIG. 11-1 & 11-2)

The jigsaw can cut in a straight line or cut according to the curve you want.

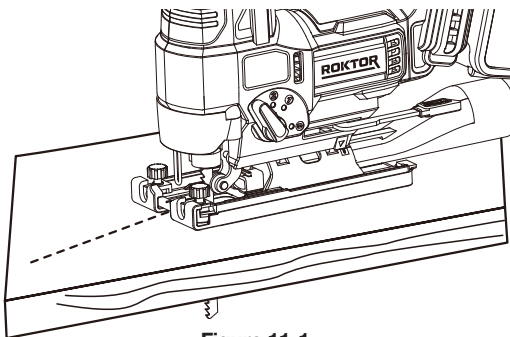


Figure 11-1

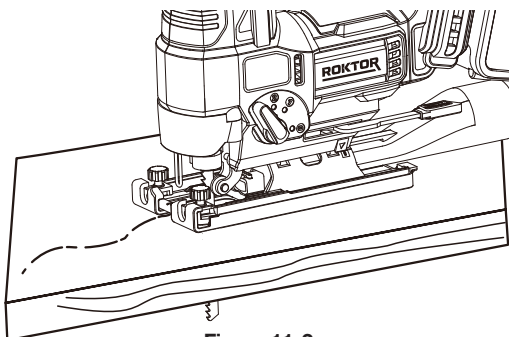


Figure 11-2

7. PLUNGE SAWING (SEE FIG. 12-1 & 12-2)

Plunge cutting may be used only on soft materials such as wood, aerated concrete, gypsum plaster boards, etc.

Use only short saw blades. Place the front edge of the base plate on the workpiece and switch on. Press the machine firmly against the workpiece and plunge the saw blade slowly into the workpiece.

As soon as the complete surface of the base plate rests on the work piece, continue to saw along the cutting line.

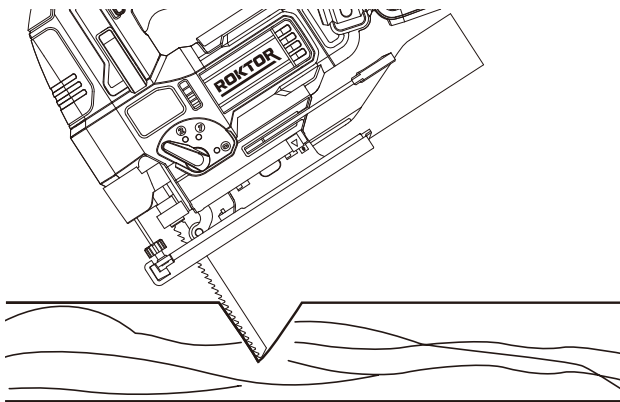


Figure 12-1

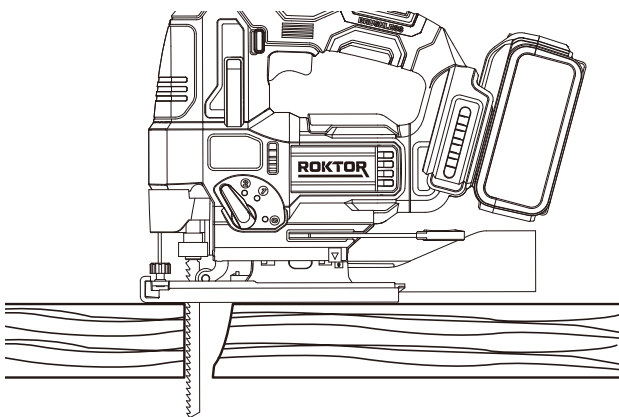


Figure 12-2

8. WORKING HINTS FOR YOUR JIGSAW

If your jigsaw becomes too hot, please run it at no load for 2-3 minutes to cool the motor.

Avoid prolonged usage at very low speeds.

Always use a blade suited to the material and material thickness to be cut. For tight curves it is best to use a narrow saw blade.

When sawing metal or similar materials, apply coolant/lubricant alongside the cutting line.

Always ensure the workpiece is firmly held or clamped to prevent movement. Any movement of the material may affect the quality of the cut. The blade cuts on the upward stroke and may chip the uppermost surface. Ensure your uppermost surface is a non-visible surface when your work is finished.

For easier control, use low speed to start cutting and then increase to correct speed.

In order to avoid operation malfunctions, do not saw gypsum board from below or overhead.

The guide roller should occasionally be checked for wear and lubricated with a drop of oil. If it is worn, it must be replaced.

9. PROTECTION AGAINST DEEP DISCHARGING

The Li-ion battery is protected against deep discharging by the “Discharging Protection System”.

When the battery is empty, the machine is switched off by means of a protective circuit: The inserted tool no longer rotates.

CARE AND CLEANING

Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust.

- Remove the battery pack and allow the tool rotation to stop.
- Use a slightly damp cloth to clean the enclosure. Do not allow water to enter the tool.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with a soft cloth. If the dust is difficult to wipe away, rub it with soapy water.
- Store the tool and battery pack in a dry, frost-free place, away from direct sunlight and heat sources.
- **CAUTION:** Blade teeth are very sharp. Handle with extreme care.
- **WARNING!** Remove the battery pack from the tool before cleaning.

- For battery tools

The ambient temperature range for use and storage of tool and battery is between 0 °C and 45 °C.

The recommended ambient temperature range for the charging station is between 0 °C and 40 °C.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The tool is not operating.	• Battery pack discharged • Battery pack not properly installed • Battery pack too hot or too cold • On/off switch defective • Internal wiring damaged	• Recharge the battery pack. • Reinstall the battery pack correctly. • Allow the battery to cool down or warm up to room temperature. • Contact Customer Service Centre. • Contact Customer Service Centre.
Blade doesn't move or moves irregularly	• Blade installed improperly. • A worn or broken blade holder may not hold the blade securely	• Remove the blade and re-insert the blade correctly. • Contact Customer Service Centre.
Saw runs but lacks power or slows down	• Using a dull or incorrect blade for the material can cause strain. • Lower speeds for metal, higher speeds for wood.	• Switch to a sharp, appropriate blade. • Adjust the speed according to the material.
Excessive vibration or strange noises	• An improperly installed blade can cause excessive vibration. • Cheap or worn blade may cause rough cutting and excess vibration.	• Check blade alignment. • Use a high-quality blade.
Overheating or burning smell	• Cutting too fast or applying too much pressure can overheat the motor. • Dust and debris can clog vents, causing overheating. • A burning smell could indicate a short circuit, damaged wiring, or a failing motor.	• Let the saw cool. • Clean the ventilation openings • Stop use immediately and inspect. Contact Customer Service Centre.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AJ045 (CSJ18BD5.9)

Product Description: 18V Brushless Cordless Jigsaw

1. Toolstation (company number 04372131)
This declaration of conformity is issued under the sole responsibility of Toolstation
2. Object of the declaration
The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:
 - Supply of Machinery (Safety) Regulations 2008
 - Electromagnetic Compatibility Regulations 2016
 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):
 - BS EN 62841-1
 - BS EN 62841-2-11
 - BS EN IEC 55014-1
 - BS EN IEC 55014-2
 - BS EN IEC 63000
4. Additional information:
Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China