 




ORIGINAL USER INSTRUCTIONS

3.6V CORDLESS SECOND FIX STAPLER

SKU: AJ068

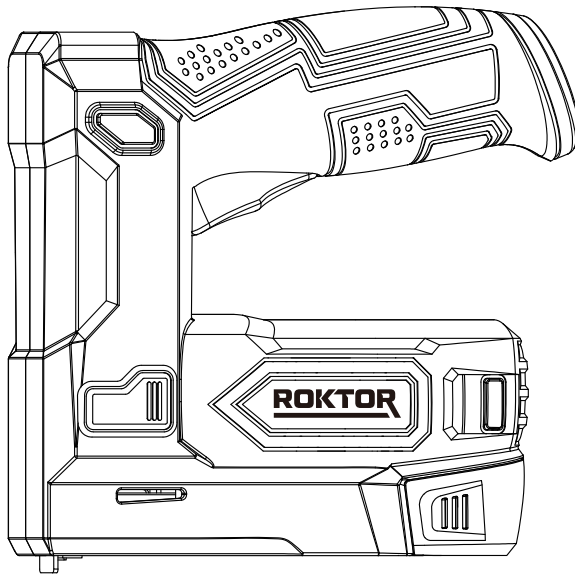

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com


CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	5
• IMPORTANT SAFETY WARNINGS-----	6
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	10
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	11
• CARE AND CLEANING-----	15
• TROUBLESHOOTING-----	15
• DECLARATION OF CONFORMITY / PERFORMANCE-----	16
• ENVIRONMENTAL INFORMATION-----	17
• WARRANTY-----	17
• CUSTOMER SUPPORT-----	18

 
WHAT'S IN THE BOX

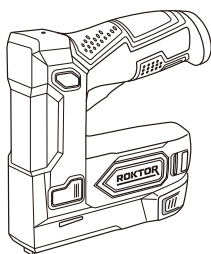


Stapler

 

Staples x 400

 

Brad nails x 100

 

Type-C USB cable



User instruction manual

SPECIFICATIONS

- 3.6V 
- Safety switch
- Rubber overmould grip

TECHNICAL DATA

SKU/Model	AJ068 (CCT36F.1)
Rated voltage	3.6V 
Battery capacity	2.0Ah
Max. firing speed	60 nails/staples per minute
Charging method	USB cable to USB outlet, wall charger, laptop, PC, etc.
Magazine capacity	100 pcs staples/ 50 pcs brad nails
Staples	Type #53 staple (6–14 mm)
Nails	Type #47 nail (14–15 mm)
Net weight approx.(kg)	0.8 kg
A weighted sound pressure L_{pA} ($K_{pA}=3dB(A)$)	85,6dB(A)
A weighted sound power L_{wA} ($K_{wA}=3dB(A)$)	96,6dB(A)
Vibration level a_h ($K=1,5m/s^2$)	$a_h = 5,777 m/s^2$

The declared vibration total value may be used for comparing one tool with another, and may also be used in a preliminary assessment of exposure.

 **WARNING:** The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used dependent on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut or drilled.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti-vibration and noise accessories are used.
- The tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

 **WARNING:** To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Maintain this tool in accordance with these instructions and keep it well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read the instruction manual



Risk of damage or injury if the instructions in this manual are not followed



Wear eye protection



Wear ear protection



Wear a dust mask



Batteries may enter water cycle if disposed improperly, which can be hazardous for the ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn



Li-ion



Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Read the user manual.



For indoor use only.



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, user must read instruction manual

GENERAL SAFETY RULES FOR POWER TOOL



WARNING: Read all safety warnings and all instructions. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2. Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3. Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*

4. Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*

5. Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*

6. Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

SAFETY INSTRUCTIONS FOR NAILERS/STAPLERS

 
- a) **Always assume that the tool contains fasteners.** *Careless handling of the nailer/stapler can result in unexpected firing of fasteners and personal injury.*
- b) **Do not point the tool towards yourself or anyone nearby.** *Unexpected triggering will discharge the fastener causing an injury.*
- c) **Do not actuate the tool unless the tool is placed firmly against the workpiece.** *If the tool is not in contact with the workpiece, the fastener may be deflected away from your target.*
- d) **Disconnect the tool from the power source when the fastener jams in the tool.** *While removing a jammed fastener, the nailer/ stapler may be accidentally activated if it is plugged in.*
- e) **Use caution while removing a jammed fastener.** *The mechanism may be under compression and the fastener may be forcefully discharged while attempting to free a jammed condition.*
- f) **Do not use this nailer/stapler for fastening electrical cables.** *It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazard.*
- g) **Use appropriate locating equipment to locate hidden utility lines or consult the local utility company.** *Contact with electrical lines can cause fire and electric shock. Damage to a gas line can cause an explosion. Penetration of a water line will cause property damage.*
- h) **Secure the workpiece.** *A workpiece held with clamping devices or a vice is held more securely than by your hand.*

SAFETY WARNINGS FOR BATTERY CELLS INSIDE THE TOOL

- a) **Do not dismantle, open or shred cells.**
- b) **Do not short-circuit charging terminal.** *Do not store power tool haphazardly in a box or drawer where charging terminal may short-circuit each other or be short-circuited by conductive materials. When power tool is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one charging terminal to another.*
- c) **Do not expose power tool to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject power tool to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes.** *If contact has been made, wash the affected area with copious amounts of water and seek medical advice.*
- f) **Keep power tool clean and dry.**
- g) **Wipe the charging terminals with a clean dry cloth if they become dirty.**
- h) **Power tool needs to be charged before use.** *Always refer to this instruction and use the correct charging procedure.*
- i) **Do not maintain power tool on charge when not in use.**
- j) **After extended periods of storage, it may be necessary to charge and discharge the power tool several times to obtain maximum performance.**
- k) **Recharge only with the charger specified by manufacturer.** *Do not use any charger other than that specifically provided for use with the equipment.*
- l) **Keep power tool out of the reach of children.**
- m) **Retain the original product literature for future reference.**
- n) **Dispose of properly.**
- o) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- p) **Do not use any cell which is not designed for use with the equipment.**

- q) **Keep the battery away from microwaves and high pressure.**
- r) **Warning! Do not use non-rechargeable battery cells.**
- s) **The normal temperature range for charging the battery is 4-40°C.**
- t) **Do not expose the appliance or battery to excessive temperatures**

PRODUCT DESCRIPTION AND IDENTIFICATIONS

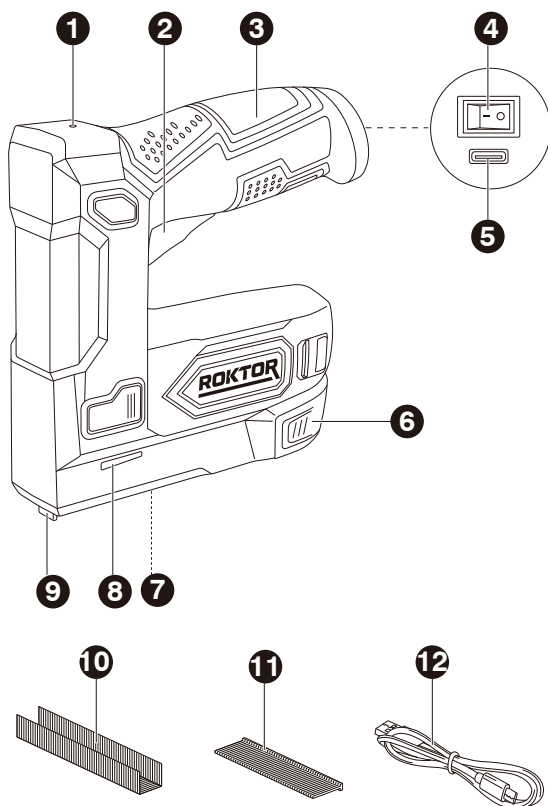

1. LED
2. Trigger
3. Handle
4. ON/OFF switch
5. Charging socket
6. Loading bay cover
7. Loading bay
8. Window
9. Safety tab
10. Staples (10 mm), 400x
11. Nails (15 mm), 100x
12. USB charging cable (Type C)

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction manual carefully.

The tool is packaged with some parts that are unattached and require a little simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached.

ASSEMBLY

1. LOADING STAPLES OR NAILS (SEE FIG. 1, 2)



WARNING: Make sure the product is switched off and do not pull the trigger when loading staples or nails.

- 1) Make sure the ON/OFF switch is in the “0” (OFF) position.
- 2) Turn the product upside down.
- 3) With the safety tab pointing away from you, press together the latches at the end of the loading bay cover to unlock it, and then slide the loading bay cover open all the way (see step 1 in Fig. 1).
- 4) **To load staples:** Place a strip of staples into the loading bay with the pointed tips of the staples facing outside of the product (see step 2 in Fig. 1).
To avoid jamming, check to ensure there is no dirt or debris in the loading bay before inserting the staples.
- 5) **To load nails:** Position the product on its side so that the engraved text inside the loading bay is the right way up. Place a strip of nails into the loading bay on the side indicated by the arrow next to the engraved text (see Fig. 2). Make sure the pointed tips of the nails are facing outside of the product.
To avoid jamming, check to ensure there is no dirt or debris in the loading bay before inserting the nails.
- 6) Close the loading bay cover. To do so, push the end of the loading bay cover all the way back into the product until it snaps securely in place, upon which an audible click can be heard.

NOTE: For convenience, you can use the window to check how many staples or nails are left in the loading bay, and reload if necessary.

NOTE: The product is suitable for use with 6–14 mm Type #53 staples and 14–15 mm Type #47 nails, which can be bought at local DIY stores.

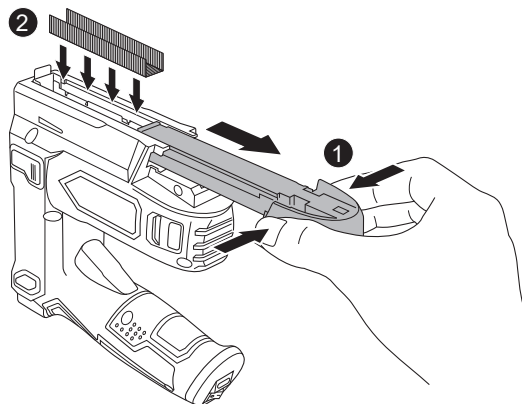 


Figure 1

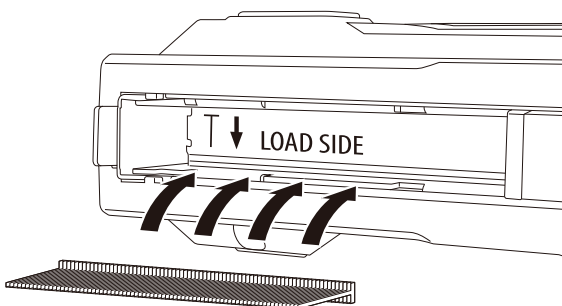 


Figure 2

OPERATION INTENDED USE

The product is exclusively designed for use by hobby enthusiasts and do-it-yourself consumers for stapling/nailing fabric, leather, cardboard, foil and the like onto another surface such as pine wood or similar. It is only intended for private use and is not suitable for commercial purposes.

1. CHARGING THE PRODUCT (SEE FIG. 3)

NOTE:

- Only use the supplied USB charging cable for charging.
- Charge the product to reach full or no less than half charge before storage. If the product will not be used for long periods of time, charge the product every 3 to 6 months.
- Fully charge the product before using it.
- If the LED remains illuminated in red during use, this indicates the battery power is low and the product should be recharged.

- 1) Make sure the ON/OFF switch is in the "0" (OFF) position.
- 2) Fully uncoil the USB charging cable.
- 3) Insert the smaller end of the USB charging cable into the charging socket (see Fig. 3).
- 4) Insert the larger end of the USB charging cable into the USB port of a suitable mains adaptor (IEC/EN 60335 certified with 5 V output (SELV)). Recommended charging voltage: 5 V, 600 mA.
- 5) Connect the mains adaptor to a mains socket. Charging starts automatically. When the product is charging, the LED illuminates in red. When charging is complete, the LED changes from red to green. Ambient temperature range for charging the product: 4–40 °C.
- 6) When charging is done, disconnect the mains adaptor from the mains socket and remove the USB charging cable from the charging socket of the product.

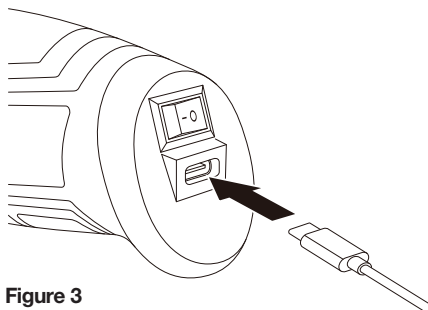 


Figure 3

2. TURNING THE PRODUCT ON AND OFF (SEE FIG. 4)

- Set the ON/OFF switch to the “I” (ON) position to turn the product on.
- Set the ON/OFF switch to the “O” (OFF) position to turn the product off.

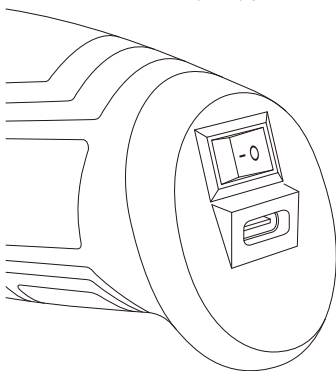 


Figure 4

3. USING THE PRODUCT (SEE FIG. 5)

- 1) Set the ON/OFF switch to the “I” (ON) position to turn the product on.
- 2) Hold the product firmly by the handle and position the safety tab over the workpiece.
- 3) When you are ready to fire the staple or nail, push the product down so that the safety tab is pressed against the workpiece, then pull the trigger.
The product will only fire the staple or nail when the LED is illuminated and it will only fire one at a time. If you cannot fire the staple or nail, press the product down harder until the LED lights up. This is a safety mechanism designed to prevent accidental firing of the product.
- 4) To fire another staple or nail, release the trigger and lift the product off the workpiece.
Reposition the product, then repeat step 3 above.
- 5) When you are finished, set the ON/OFF switch to the “O” (OFF) position to turn the product off.



WARNING: Always set the ON/OFF switch to the “O” (OFF) position when the product is not in use to avoid accidental operation.



WARNING: Do not hold the product with your finger on the trigger. You may pull the trigger by accident when you are not ready and cause injury.



WARNING: Do not fire the staples or nails on top of each other.



WARNING: To avoid overheating, the product should be paused after every 30 minutes of operation. Allow the product to cool down to room temperature before using again.

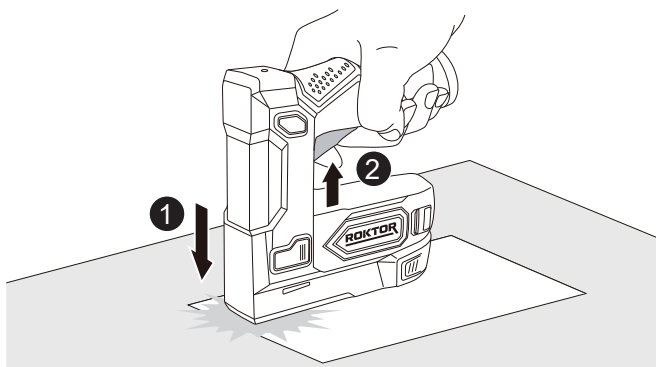 


Figure 5

4. UNJAMMING THE PRODUCT

- 1) Set the ON/OFF switch to the “O” (OFF) position to turn the product off.
- 2) Turn the product upside down.
- 3) With the safety tab pointing away from you, press together the latches at the end of the loading bay cover to unlock it, and then slide the loading bay cover open all the way.
- 4) Remove the staples /nails inside the loading bay. If staples/nails remain jammed, use a suitable tool to remove them. Be careful not to bend or damage the parts inside the loading bay as this will prevent the smooth movement of the staples/nails and may cause jamming in the future.
- 5) Place a new strip of staples/nails into the loading bay with the pointed tips of the staples/nails facing outside of the product.
- 6) Push the end of the loading bay cover all the way back into the product until it snaps securely in place, upon which an audible click can be heard.



WARNING: Wear eye protection during unjamming.

CARE AND CLEANING

Your power tool requires no additional lubrication or maintenance. There are no user-serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust.

- Release the trigger and switch off the tool. Allow the tool to come to a complete stop.
- Use a slightly damp cloth to clean the enclosure. Do not allow water to enter the tool.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with a soft cloth. If the dust is difficult to wipe away, rub it with soapy water.
- **WARNING!** Switch off the tool before cleaning.

The battery cell of this machine is removable. To access it, unscrew the screws on the tool, then open the casing. Once the casing is open, the battery cell will be exposed and ready for replacement. Although you can replace the battery cell yourself, we still recommend visiting an authorized service center for professional replacement.

- For battery tools

The ambient temperature range for use and storage of tool and battery is between 0 °C and 45 °C. The recommended ambient temperature range for the charging station is between 4 °C and 40 °C.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The product does not charge.	• The USB charging cable is not connected. • The ambient temperature is too hot or too cold for charging the product.	• Properly connect the USB charging cable and check that the LED is illuminated in red • Do not charge the product below 4 °C or above 40 °C.
During operation, the product stops working.	• The battery of the product is out of power. • The product has run out of staples or nails. • The staple or nail has jammed in the loading bay.	• Recharge the product. • Reload the product. • Remove the jammed staple or nail
The product overheats.	• Continuous operation for an extended period. • Ventilation openings blocked.	• Stop using the tool and allow it to cool down. • Clear dust and debris from air vents.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AJ068 (CCT36F.1)

Product Description: 3.6V Cordless Second Fix Stapler

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
- The Batteries and Accumulators (Placing on the Market) Regulations 2008 (as amended) and the Waste Batteries and Accumulators Regulations 2009 (as amended)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):

- BS EN 60745-1
- BS EN 60745-2-16
- BS EN IEC 55014-1
- BS EN IEC 55014-2
- BS EN IEC 63000
- BS EN 62133-2

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China