




PFS260GH.2

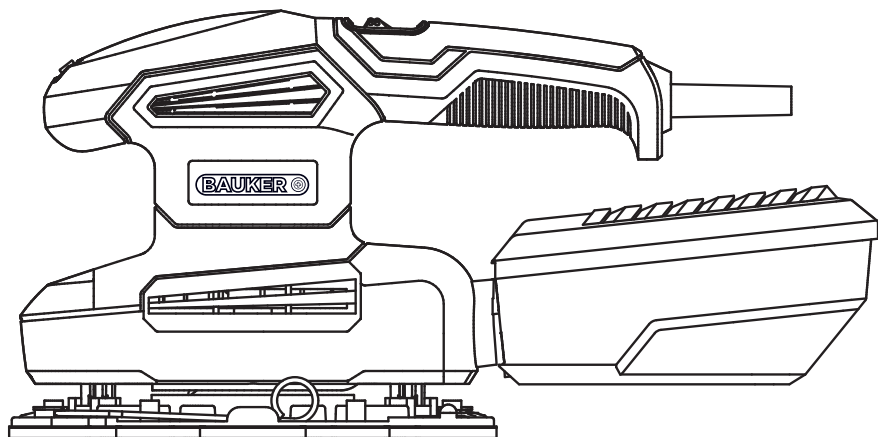

**260W 1/3 SHEET SANDER
ORIGINAL INSTRUCTION MANUAL**

SAFETY INFORMATION

 **WARNING! Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an**

extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.


- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.
- 3) Personal safety**
- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.









4) Power tool use and care





- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

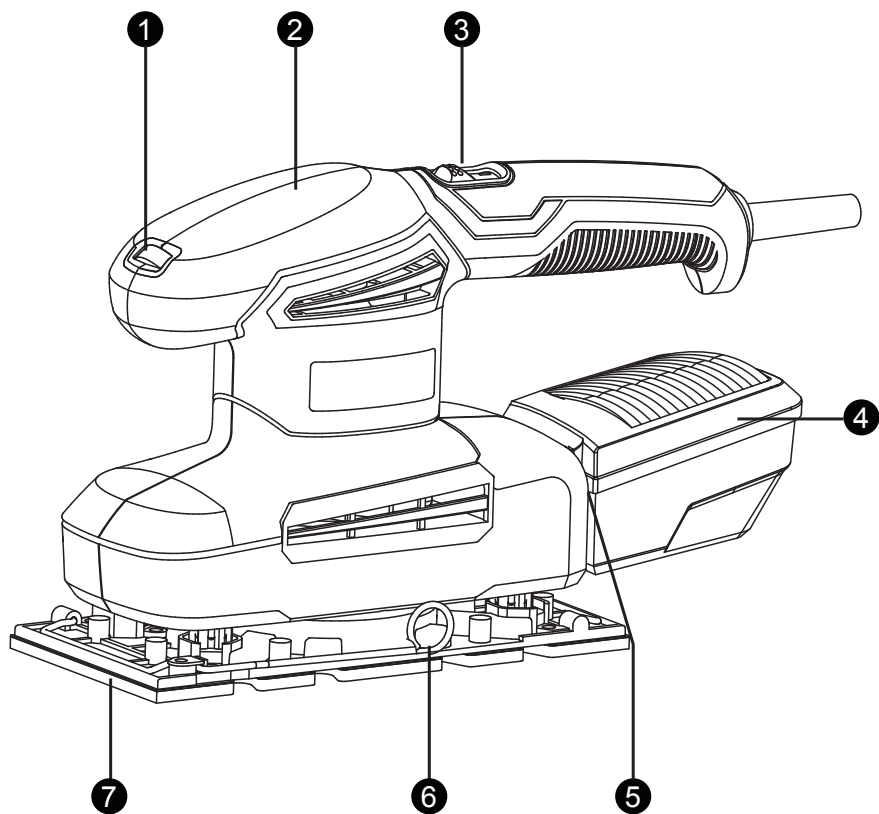

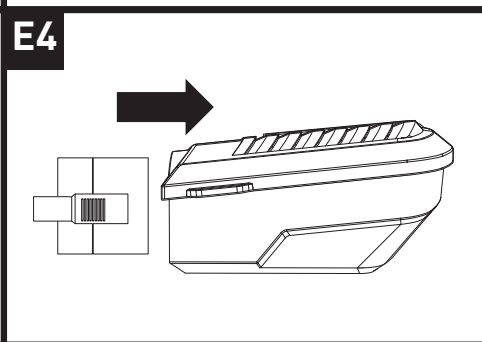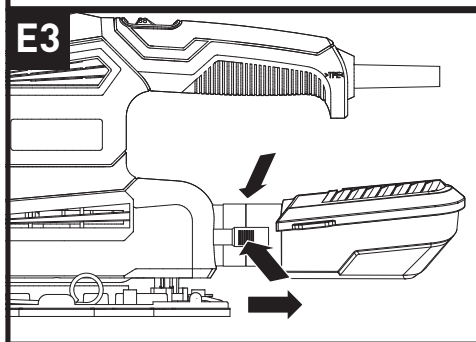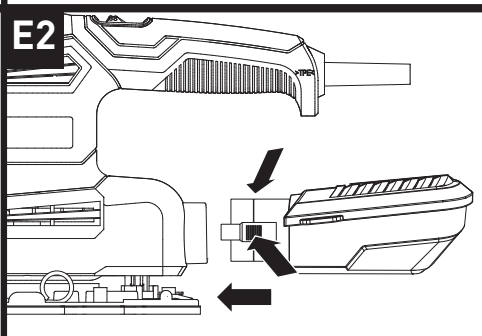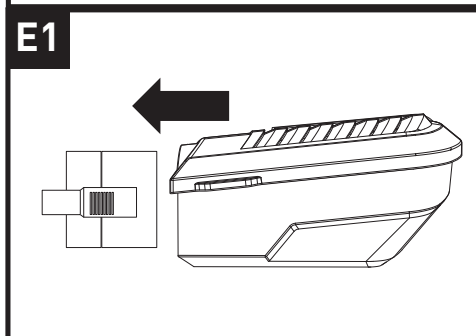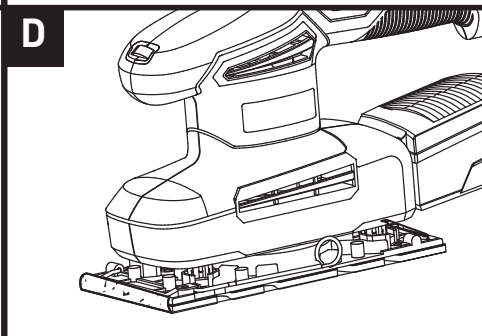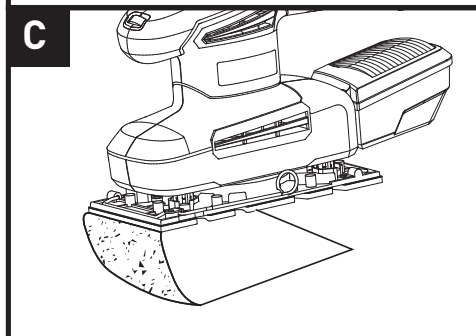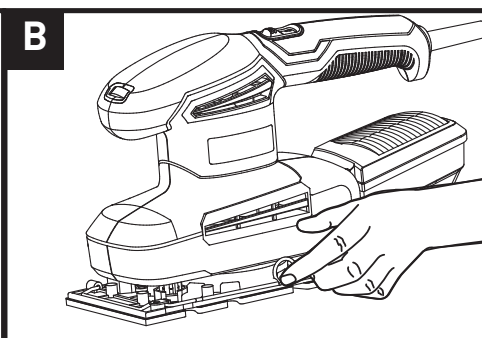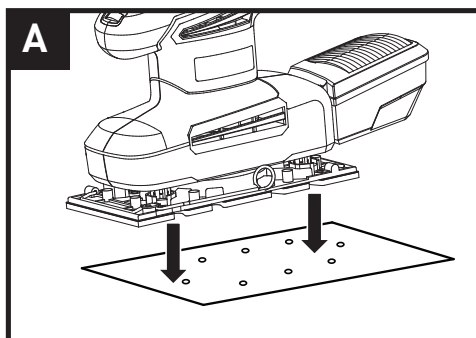

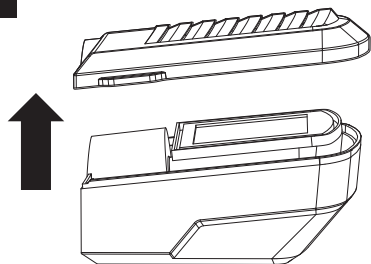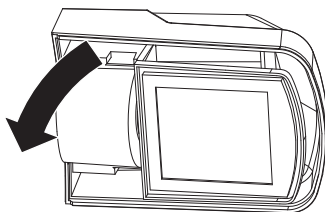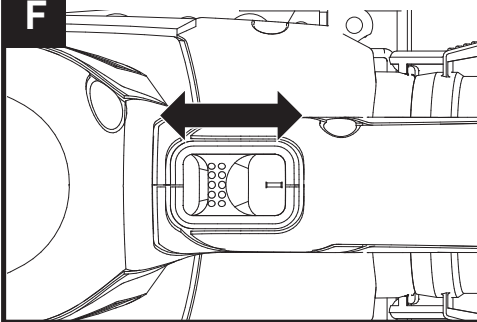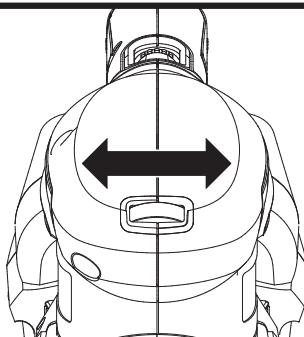E5**E6****F****G**

SYMBOLS



To reduce the risk of injury, user must read instruction manual



Wear eye protection



Wear ear protection



Wear dust mask



Warning



Double insulation



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.



COMPONENT LIST

1. VARIABLE SPEED CONTROL
2. HAND GRIP AREA
3. ON/OFF SWITCH
4. CYCLONE DUST BOX
5. DUST OUTLET
6. SANDING PAPER CLAMP
7. ALUMINIUM BASE PLATE

Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

Type PFS260GH.2 (PFS-designation of machinery, representative of Finishing Sander)

Rated voltage:	230-240V~ 50Hz
Rated power:	260W
No load speed:	6000-12000/min
Base size:	90x187mm
Orbital dia.	1.6mm
Protection class:	□/II
Machine weight:	1.69kg

ACCESSORIES

Dust box	1
80 Grit clamp sanding paper	1
100 Grit clamp sanding paper	1

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

NOISE AND VIBRATION DATA

A weighted sound pressure	$L_{pA} = 74,3 \text{ dB(A)}$
---------------------------	-------------------------------

$K_{pA} = 3.0 \text{ dB(A)}$

A weighted sound power	$L_{WA} = 85,3 \text{ dB(A)}$
------------------------	-------------------------------

$K_{WA} : 3.0 \text{ dB(A)}$

Wear ear protection. 

Vibration Information

Vibration total values (triax vector sum) determined according to EN 60745:

Vibration emission value:

$a_h = 4,6 \text{ m/s}^2$ Uncertainty $K = 1,5 \text{ m/s}^2$

The declared vibration total value may be used for comparing one tool with another, and may also be used in a preliminary assessment of exposure.



WARNING! The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used dependant on the following examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained

The use the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration accessories are used.

And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING! To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Helping to minimise your vibration exposure risk.

ALWAYS use sharp chisels, drills and blades

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate)

If the tool is to be used regularly then invest in anti vibration accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

Intended Use

The machine is intended for dry sanding of wood, plastic, filler and coated surfaces.

1. FITTING THE SANDING PAPER

SANDING PAPER WITH HOOK & LOOP SYSTEM

FIT THE SANDING PAPER (SEE FIG. A)

The sanding papers are placed directly onto the base plate. The hole pattern in the base plate and sanding paper must match. Then press the sanding paper onto the base plate by hand. Firmly press the power tool with the sanding paper against a flat surface and briefly switch the power tool on. This provides for good adhesion and prevents premature wear.

Before placing on the sanding paper, free the base plate from dust/debris by lightly tapping against it.

REMOVE THE SANDING PAPER

Simply remove the sanding paper directly.

SANDING PAPER WITHOUT HOOK & LOOP SYSTEM (SEE FIG B,C,D)

FIT THE SANDING PAPER

Fit the sanding paper over the base. Make sure the sanding paper is even with the edges and that the dust collection holes in the base and sanding paper is aligned and that the sanding paper is taut on the base.

Lift the sanding paper retaining clips to the open position and insert one end of the sanding paper under the retaining clip.

Push the clip back into the retaining position. Lightly stretch the paper over the base plate ensuring that it is not folded or wrinkled then position under the other retaining clip back into the retaining position.

Check that the paper is flat to the base plate, if not, release either clip and reposition the paper before resetting the clip. Switch on momentarily to check that the sander is functioning correctly. If there is undue vibration, repeat the paper positioning procedure.

REMOVE THE SANDING PAPER

To remove the sanding paper, lift up the clamp lever and move away from the clamp lever lock. The sanding paper clamp is now loose. Repeat with the other clamp on the opposite side of your sander.

2. USING THE CYCLONIC DUST BOX

A) ATTACH THE CYCLONIC DUST BOX (SEE FIG. E1)

Your sander is equipped with a cyclonic dust box. To attach, slide the box onto the outlet piece and take care that the latching lever engages.



CAUTION: To prevent the possibility of sanding dust or foreign body being thrown into your face or eyes, never attempt to use your sander without the dust box properly installed.

B) EMPTY THE CYCLONIC DUST BOX (SEE FIG. E2, E3)

For more efficient operation, empty the cyclonic dust box every 5-10mins. This will permit the air to flow through the box better.

To empty the box, press the latching lever in and pull off the box. Then press the button at the rear of the box to open it, and shake out dust.

7. SELECT THE RIGHT SAND PAPER

Selecting the correct grit of sanding paper is an extremely important decision that will allow you to achieve the best quality sanding finish.

Coarse grit will remove the most material and finer grit will give you the best finish in all sanding operations.

The condition of the surface to be sanded will determine which grit will do the job.

If the surface is rough:

Start with coarse grit (sold separately) and sand until the surface is uniform. Then use medium to remove any scratches left by the coarse grit. Then use finer grit (sold separately) for finishing the surface.

NOTE: Always continue sanding with each grit until the surface is uniform.

3. OPERATING THE ON/OFF SWITCH (SEE FIG. F)

Slide the on/off switch to the position marked "I" to start the machine.

Slide it to the position marked "O" to stop it.

4. VARIABLE SPEED CONTROL (SEE FIG. G)

With the variable speed control (1), the required speed can be selected (also while running).

The required speed is dependent on the material and is to be determined by a practical trial.

After longer periods of working at low speed, allow the machine to cool down by running it for approx. 3 minutes at maximum speed with no load.

5. DUST EXTRACTION ADAPTER

Your sander is equipped with a dust adapter, which is designed for dust collection task. Insert the dust adapter into the rear outlet of sander. Then pull the dust adapter and make sure it is tightened securely on the dust outlet. Then connect the hose of a vacuum cleaner.

First please turn on the vacuum cleaner, and then turn on the sander. If you stop sanding, first turn off the sander, and then turn off your vacuum cleaner.



WARNING: It is necessary to connect the vacuum if you sand plaster board.

6. USING THE SANDER

The workpiece to be sanded must be secured. If it is small or it may move during sanding, it must be held in a vice or suitably clamped.

Be sure to hold the sander firmly whilst it is on and apply it gently to the work, it may "kick" on first contact. Hold the sander so that it is flat on the work and move slowly, preferably with a smooth, circular motion. Regularly check the condition of the sanding paper and replace when worn for best results.

7. FLUSH SANDING FACILITY

Your sander can sand flush on three sides of the baseplate which allows easy access to corners and edges of mouldings.

8. ORBITAL SANDING

Your sander operates in small a circular rotation which allows efficient material removal. Operate your sander in long sweeping movements across your workpiece and even across the grain. For a finer finish, always use a fine grain sanding paper and only move the sander in the direction of the grit and never across the grain. Do not allow your sander to remain in the same position otherwise you will remove material and create an uneven surface.

9. SELECT THE RIGHT SAND PAPER

Selecting the correct grit of sandpaper is an extremely important decision that will allow you to achieve the best quality sanding finish.

Coarse grit will remove the most material and finer grit will give you the best finish in all sanding operations. The condition of the surface to be sanded will determine which grit will do the job.

If the surface is rough:

Start with coarse grit (sold separately) and sand until the surface is uniform. Then use medium to

remove any scratches left by the coarse grit. Then use finer grit (sold separately) for finishing the surface.

NOTE: Always continue sanding with each grit until the surface is uniform.

WORKING HINTS FOR YOUR SANDER

1. If your power tool becomes too hot, especially when used at low speed, set the speed to maximum and run it with no load for 2-3 minutes to cool the motor. Avoid prolonged usage at very low speeds. Always use sand paper that is suitable for the material you want to sand.
2. Always ensure the work-piece is firmly held or clamped to prevent movement.
3. Any movement of the material may affect the quality of the sanding finish.
4. Start your sander before sanding and turn it off only after you stop sanding. For the best results, sand wood in the direction of the grain.
5. Do not start sanding without having the sandpaper fitted.
6. Do not allow the sandpaper to wear away it will damage the base-plate. The guarantee does not cover base-plate wear and tear.
7. Use coarse grit paper to sand rough surfaces, medium grit for smooth surfaces and fine grit for the final surfaces. If necessary, first make a test run on scrap material.
8. Use only good quality sandpaper.
9. The sandpaper controls the sanding efficiency, not the amount of force you apply to the tool. Excessive force will reduce the sanding efficiency and cause motor overload. Replacing the sandpaper regularly will maintain optimum sanding efficiency.

MAINTENANCE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TROUBLESHOOTING

1. If your sander will not operate, check the power at the mains plug.
2. If the sander does not abrade surface, check the sanding paper. If the sanding paper has been worn, replace the new paper and try again. The paper must be kept in a dry place, if it is allowed to become damp, the abrasive particles will lose their adhesion to the backing paper and will not abrade.
3. If the sander does not move smoothly, The sanding paper may be loose, damaged or wrinkled. Replace and try again.
4. If a fault cannot be rectified return the sander to an authorized dealer for repair.

ENVIRONMENTAL PROTECTION



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

PLUG REPLACEMENT (ONLY FOR REWIRABLE PLUG OF UK & IRELAND)

If you need to replace the fitted plug then follow the instructions below.

IMPORTANT

The wires in the mains lead are colored in accordance with the following code:

BLUE – NEUTRAL

BROWN – LIVE


As the colors of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured blue must be connected to the terminal which is marked with N. The wire which is coloured brown must be connected to the terminal which is marked with L.



WARNING:

Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved BS1363/A plug and the correct rated fuse.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

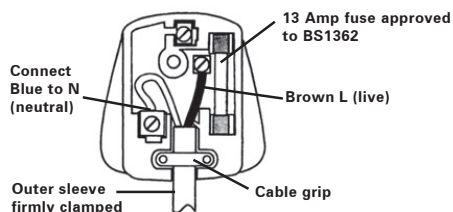

DECLARATION OF CONFORMITY

We,
Positec Power Tools (Europe) Ltd,
PO Box 6242, Newbury, RG14 9LT, UK

Declare that the product

Description **Finishing Sander**

Type **PFS260GH.2 (PFS-designation of machinery, representative of Finishing Sander)**

Function **Removing surface material using an abrasive medium**

Complies with the following Directives,

2006/42/EC, 2011/65/EU, 2014/30/EU

Standards and technical specifications referred to:

EN 60745-1, EN 60745-2-4, EN 55014-1, EN 55014-2, EN 61000-3-2, EN 61000-3-3

The person authorized to compile the technical file:

Name **Jim Kirkwood**

Address **Positec Power Tools (Europe) Ltd,
PO Box 6242, Newbury, RG14 9LT, UK**



2017/11/24

Allen Ding

Deputy Chief Engineer, Testing & Certification

Positec Technology (China) Co., Ltd

18, Dongwang Road, Suzhou Industrial

Park, Jiangsu 215123, P. R. China

