

# ebb+flo




## User Instructions

# Bath Filler


**59441 (V1)**

**27475 (V1)**

**27036 (V1)**

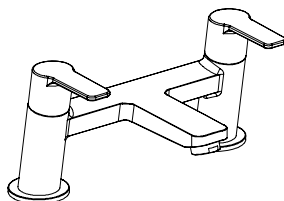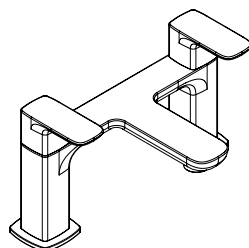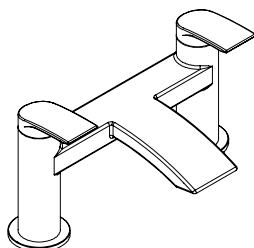

### WHAT'S IN THE BOX

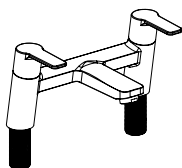

**Tap Body x 1**



**Flange x 2**



**Sealing  
Washer x 2**



**Backnut  
washer x 2**



**Backnut x 2**

If you need any help, please contact us:

0808 100 7211 or 0330 333 3303

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE**

## **TOOLS REQUIRED ( tools not supplied )**



## **HEALTH AND SAFETY**


- Identify all components and check pack contents.
- Turn off mains water supply.
- Wear eye protection.
- This mixer should be installed in compliance with the UK Water Supply (Water Fittings) Regulations.

## **SPECIFICATION**

- The mixer is suitable for use at water supply pressures of 0.1 bar (min.) to 5 bar (max.).
- This pressure rating is determined by the manufacturer using soft water under test house conditions.

## ASSEMBLY AND USE

1. Fit Tap Body (1) to bath, ensuring that the Flange (2) with Sealing Washer (3) are fitted between the Tap Body (1) and the bath.
2. Fit Backnut Washer (4) over inlet legs, then fit Backnuts (5) to the inlet legs and tighten. **DO NOT OVERTIGHTEN.**
3. Connect to the water supply using suitable plumbing joints.
4. Turn on the hot and cold and mains water supply. Check for leaks immediately. It is always advisable at this stage to flush out the system. To do this, open both valves fully and allow water to flow for approx.1 minute. This will remove any foreign matter within the installation.

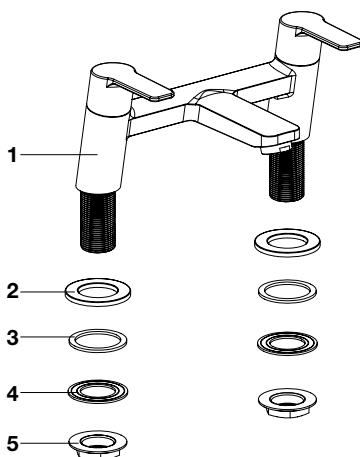

Please note: Tap head shown is for illustration purposes only.

## CARE AND CLEANING

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your product is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

## TROUBLE SHOOTING

| PROBLEM                  | CAUSE                                                               | REMEDY                                                                           |
|--------------------------|---------------------------------------------------------------------|----------------------------------------------------------------------------------|
| No flow or low flow rate | Partially closed isolation valve.                                   | Open isolation valve.                                                            |
|                          | Airlock or partial blockage in the supply pipework.                 | Flush through pipework to ensure removal of debris and any airlocks.             |
|                          | Head of water is below the minimum distance required.               | Refer to specification for minimum distance required.                            |
| Water dripping from taps | This is normal for a short time after using the taps.               | This is caused by residual water tension, the build up of water in the tap body. |
|                          | If water continues to drip, possibly due to the ceramic disc valves | Remove valves and clean.                                                         |
| Taps do not turn on      | Mains water supply turned off.                                      | Turn on mains water supply.                                                      |
|                          | Closed isolation valve.                                             | Open isolation valve.                                                            |

## CUSTOMER SUPPORT

[www.toolstation.com/contact](http://www.toolstation.com/contact)

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email [info@toolstation.com](mailto:info@toolstation.com)

Made in china