

ebb+flo

User Instructions





Mono Sink Mixer

49944 (V1)


26251 (V1)

88081 (V1)

38908 (V1)

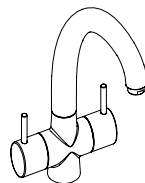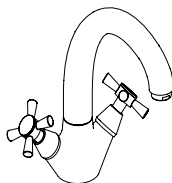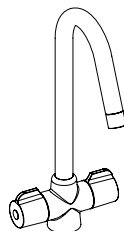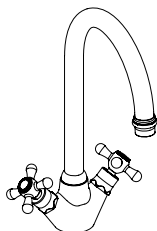

WHAT'S IN THE BOX

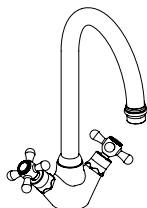

Tap Body x1



Sealing Washer x1



Rubber Horseshoe Washer x1



Metal Horseshoe Washer x1



Fixing Stud x1



Fixing Nut x1




Braided Connector x2

If you need any help, please contact us:

0808 100 7211 or 0330 333 3303

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

TOOLS REQUIRED (tools not supplied)

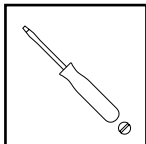

HEALTH AND SAFETY


- Identify all components and check pack contents.
- Turn off mains water supply.
- Prior to drilling into walls, check that there are no hidden electrical wires, cables or water supply pipes. This can be checked with the aid of an electronic detector.
- Wear eye protection.
- This mixer should be installed in compliance with the UK Water Supply (Water Fittings) Regulations.

SPECIFICATION

- The mixer is suitable for use at water supply pressures of 0.1 bar (min.) to 5 bar (max.).
- This pressure rating is determined by the manufacturer using soft water under test house conditions and may differ to the retailer's recommendation.

ASSEMBLY AND USE

1. Fit Fixing Studs (5) to Tap Body (1) and tighten.
2. Make sure that Sealing Washer (2) has been fitted to Tap Body (1).
3. Screw 2x Braided connectors (7) into Tap Body (1), do not over tighten.
4. Locate the tap assembly down through the tap hole in basin.
5. Fit Rubber Horseshoe Washer (3) and Metal Horseshoe Washer (4) onto the Fixing Studs (5). And then fix Fixing Nuts (6) onto the Fixing Studs (5). Do not over tighten.
6. Fit Braided Connectors (7) to the water supply using suitable plumbing joints.
7. Turn on the hot and cold and mains water supply.
Check for leaks immediately. It is always advisable at this stage to flush out the system. To do this, open both valves fully and allow water to flow for approximately 1 minute.
This will remove any foreign matter within the installation.
8. Finally turn on all the water heating arrangements.

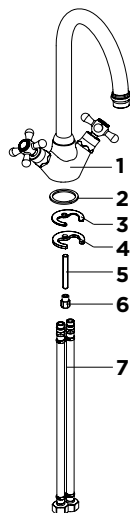

MAINTENANCE

Cleaning the valve (if water dripping from tap)

Before carrying out any maintenance, turn off the mains water supply. If you are unsure contact a qualified plumber.

Remove the cap (a) / lever, grub screw (b), handles (c), shroud (d).


Remove the valve (e) using a suitable spanner, clean thoroughly under cold water to remove any build up of limescale or debris.

If necessary replace the valve.

Replace the valve (e) into the body, tighten the valve using a suitable spanner.

Replace the shroud (d) / spline adaptor and handles (c), tighten the grub screw (b).

Re-fit the cap (a) / lever to the handle, if necessary replace the cap.

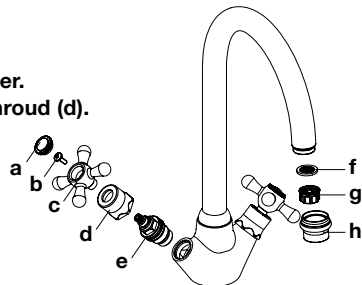


Cleaning the flow straightener (if no flow or low flow rate)

Before carrying out any maintenance, turn off the mains water supply. If you are unsure contact a qualified plumber.

Remove the shell (h), flow straightener (g) and sealing washer (f) from the spout. clean thoroughly under cold water to remove any build up of limescale or debris.

Re-fit the flow straightener (g), sealing washer (f) and shell (h) to spout.

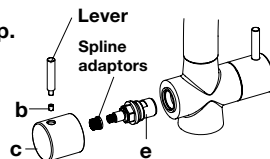

CARE AND CLEANING

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your product is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Refer to the maintenance section to remove and clean valve. See page 3.
Taps do not turn on	Mains water supply turned off.	Turn on mains water supply.
	Closed isolation valve.	Open isolation valve.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email info@toolstation.com

Made in china