

Original User's Instructions

Wessex Digital Panel Heater (Domestic Use Only)

SKU: 75386

SKU: 57540



This product is only suitable for well insulated spaces or occasional use.




READ BEFORE USE
PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


CONTENTS

- WHAT'S IN THE BOX----- 3
- TOOLS REQUIRED----- 4
- SPECIFICATIONS----- 4
- EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS----- 5
- IMPORTANT SAFETY WARNINGS----- 6
- PRODUCT DESCRIPTION AND IDENTIFICATIONS----- 9
- ASSEMBLY AND OPERATING INSTRUCTIONS----- 10
- CARE AND CLEANING----- 20
- TROUBLE SHOOTING----- 20
- DECLARATION OF CONFORMITY / PERFORMANCE----- 21
- ENVIRONMENTAL INFORMATION----- 21
- ENERGY USE INFORMATION----- 22
- GUARANTEE----- 24
- CUSTOMER SUPPORT----- 24

WHAT'S IN THE BOX

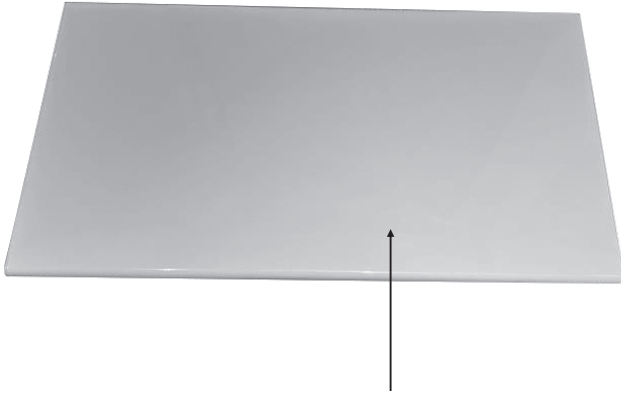

Panel heater x 1
(with wall mount bracket preassembled with 2 screws on the back of the heater)

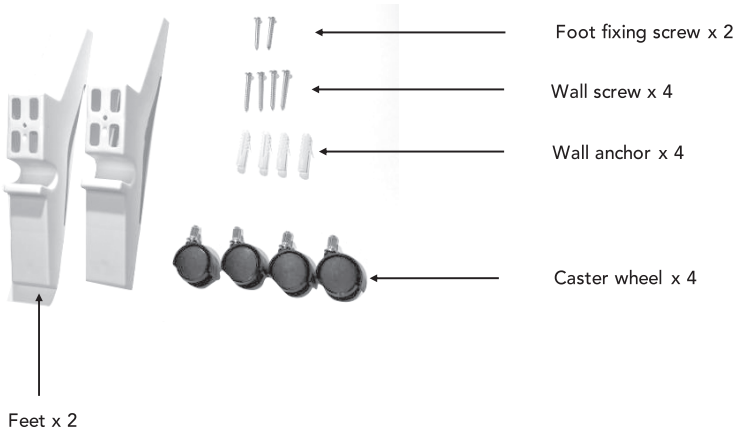

If you DO NOT have all these items, please contact:
www.toolstation.com/contact
Telephone 0808 100 7211 Mobile friendly 0330 333 3303
Email info@toolstation.com

TOOLS REQUIRED

- PH2 screwdriver is required

SPECIFICATIONS

- 220-240V~50-60Hz
- 2 heat settings
- LCD display, press touch panel
- Electronic thermostat control
- Temperature setting
- Overheat protection
- 24hr timer
- Weekly programmer
- Open window detection
- Child lock protection
- Wheels or Wall mounted

TECHNICAL DATA

SKU / Model	75386 / PN01H-1500E	57540 / PN01H-2000E
Rated voltage	220-240V, ~50-60Hz	220-240V, ~50-60Hz
Power Wattage	1250-1500W	1700-2000W
Temperature range (°C)	5-35	5-35
Temperature resolution (°C)	1	1
2 heat settings	750W or 1500W	1000W or 2000W
Plug	BS 1363 plug	BS 1363 plug
Power cord length(mm)	1500	1500
Power cord Spec.	3G1.0 mm² H05VV-F	3G1.0 mm² H05VV-F
Dimension (D x W x H-mm)	270x 700x508	270x 850x508
Appliance class	Class I	Class I
IP rating	IP24	IP24
Recommend heating area(m ²)	≤20	≤25
Net weight approx.(g)	5200	6100

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



This symbol located on the device indicates that it is prohibited to place objects (such as towels, clothes etc.) above or directly in front of the device. To avoid overheating and fire hazards, the device must not be covered.



This symbol located on the device indicates that its surfaces are hot during and immediately after operation. Hot surfaces should not be touched: danger of burns.



This warning symbol indicates a hazard with an average risk level which, if not avoided, could result in serious injury or damage or death.



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was done.



UK Conformity Assessed



This symbol located on the device indicates that this device must be connected to Earth.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

IMPORTANT SAFETY WARNINGS

Read this manual carefully before using or installing the heater.
Always store the manual in the immediate vicinity of the heater or its site of use.
Read all safety warnings and all instructions.



Warning: To avoid the risk of electrical shock, fire or injury to people, always make sure the appliance is unplugged from the electrical outlet before relocating, servicing, or cleaning it.



Some parts of this product can become very hot and cause burns. Do not touch the surface when in operation. Do not install close to curtains or other combustible materials. Particular attention should be given where children and vulnerable adults are present.




- The heater carries the warning symbol indicating that it must not be covered. Never cover the heater. Covering the heater risks overheating and fire.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use if there are visible signs of damage to the heater.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** use the device with wet or damp hands.
- **DO NOT** cover or obstruct the air inlet and outlet openings in any way.
- **DO NOT** insert any object through the heat outlet or air intake grilles of the heater. Keep combustible materials such as drapes and other furnishings clear from the front, sides and rear of the heater. **DO NOT** use heater to dry your laundry.
- **DO NOT** operate the heater with the mains lead overhanging the front outlet grille. Keep the mains lead away from the hot body of the heater.
- **WARNING:** The plug, with its mains lead cut off and conductors exposed, will be dangerous if inserted into a socket.
- **IMPORTANT:** If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- Keep the power cable away from all hot parts of the appliance.
- **DO NOT** use the heater with the power cable wound up. This can cause a dangerous build-up of heat. Do not wind the cable around the appliance as this may cause weakening and splitting of the insulation. The power cable should be fully unwound and removed from any storage areas before use.
- **DO NOT** share the heater's socket with other appliances: risk of fire due to excessive load.
- This product must be connected to Earth.
- **DO NOT** position the heater in front of, or immediately below a socket-outlet.
- The plug is fitted with a 10 Amp fuse. When replacing, use only a fuse approved to BS1362 and carrying the relevant approval Mark. Never use the plug with the fuse omitted.
- Suitable for indoor use only.
- This product is only suitable for use in living areas (not for areas constantly subject to moisture).
- **IMPORTANT:** Always switch off at the socket and remove the plug when not in use.
- Always unplug the heater when moving it from one location to another.
- **DO NOT** cover or obstruct any of the grilles or the air intake openings of the heater.
- Always ensure that the heater is placed on a firm level surface.
- The device must only be installed in an upright and fixed position on a smooth, stable, heat-resistant surface.
- **DO NOT** sit on the heater or put anything on the heater.
- Make sure the minimum safety distances from walls and objects stated in the installation instructions are observed at all times. This is very important to prevent damage to walls, furniture and soft furnishings and to prevent the product overheating.
- Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- **DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.

- **DO NOT** run cord under carpeting and **DO NOT** cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
- **DO NOT** operate with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is switched on and off remotely.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they **DO NOT** play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

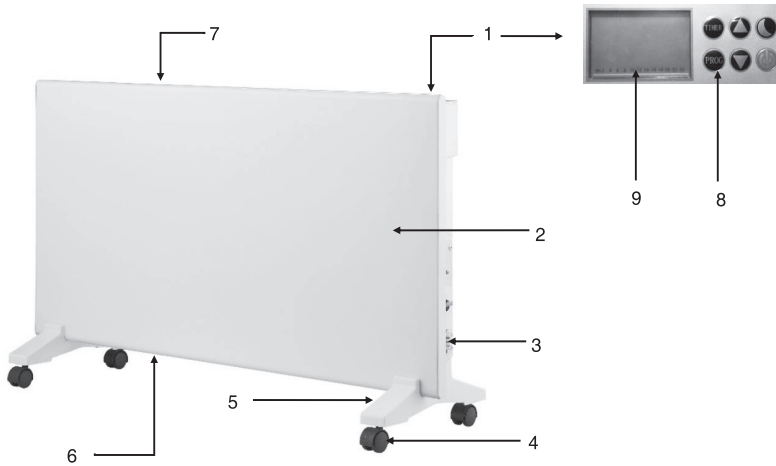

- 1. Control panel
- 2. Front panel
- 3. Temperature sensor probe
- 4. Caster wheel
- 5. Detachable feet
- 6. Bottom air inlet grille
- 7. Top air outlet grille
- 8. Set buttons
- 9. Display screen

Not pictured

- 1. Wall mount bracket
- 2. Wall mount bracket plastic anchors and screws
- 3. Power cord with BS plug

BEFORE USE

Unpack the box on a firm level surface. Check for transportation damage and make sure all parts are complete after the appliance is unpacked. Do not use if any parts are missing or damaged. Remove all packaging material before assembly.

There are 2 ways your Wessex panel heater can be assembled depending on preference. The panel heater can be mounted on the wall using the wall bracket included, or it can be situated on the floor using the included feet, with or without the lockable wheels. Ensure the panel heater is positioned away from obstructions, furniture and other appliances before operation.

WALL MOUNT

- When selecting a location to wall mount the panel heater, choose a position that takes advantage of the maximum volume of air and the space is suitable for mounting, leaving enough space around the panel heater. Ensure your wall is capable of holding the weight of this panel heater. Use the wall bracket, 4 plastic anchors and 4 screws provided.
- When selecting a wall mounting location, make sure the base of the heater is mounted between 25cm and 35cm from the floor. The side of the panel heater is placed at least 25cm from the corner of the wall. The top of the panel heater is at least 60cm from the ceiling to ensure there is adequate air ventilation.



Warning: Before mounting the panel heater to the wall please ensure that all four attachment points are secured in either timber or concrete. DO NOT secure directly into plaster. Please contact a tradesperson if you are unsure. Please see the Fig below which illustrates the points of contact. Ensure that the panel heater is at least 25cm from the floor and corners of the wall.


Before installing the panel heater, ensure the following:

- The panel heater is designed for indoor use only.
- Position the panel heater facing away from walls, furniture and other appliances.
- Do not fix the panel heater below a power outlet or power box. Do not mount the panel heater below power outlets, curtains and/or other flammable items.
- The power outlet can be easily reached by the plug and after installation.
- Keep away from curtains and/or other flammable items.
- Do not use this panel heater in the immediate surroundings of a bath, a shower or a swimming pool.

As a general safety guide, select a suitable location that is approximately 50cm from any furniture either side of the unit and 100cm from any furniture placed in front of the heater.

- The heater must be mounted horizontally.
- Visually inspect the air inlet and outlet to ensure no foreign material is blocking the outlets.

- Make sure the minimum safety distances from walls and objects stated in the installation instructions are observed at all times. This is very important to prevent damage to walls, furniture and soft furnishings and to prevent the product overheating.

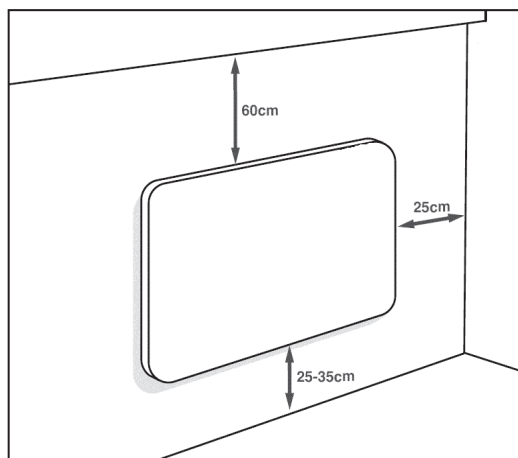

- 1. The wall bracket comes preassembled to the panel heater and must be disassembled to mount.
- 2. Remove the screws (keep the screws for fixing later) on the tabs then pinch the tabs on the top of the two vertical bars and pull outwards (Fig. 1,2,3).
- 3. Slide down the bottom of the vertical bars to remove the wall bracket (Fig. 4).

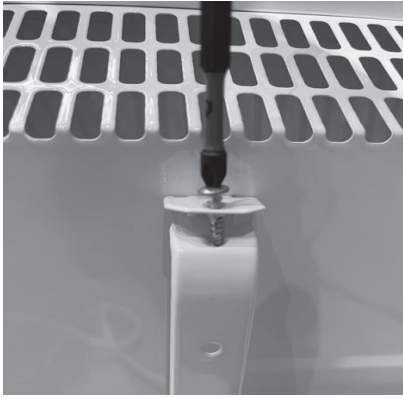


Fig.1

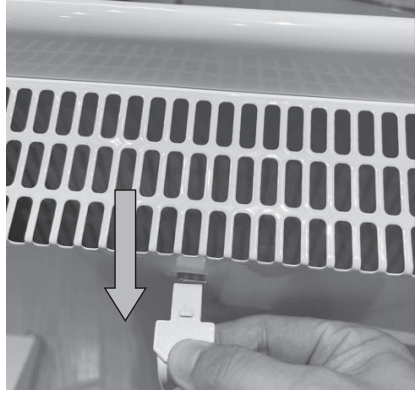


Fig.2

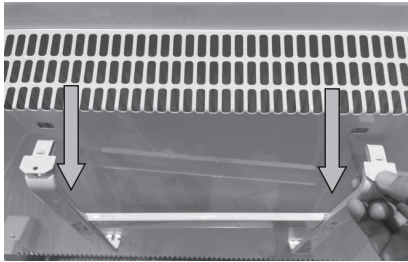


Fig.3

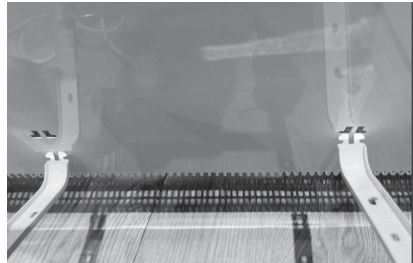


Fig.4

- 4. Select a position on the wall to mount the panel heater and drill holes where required before securing the plastic anchors in the holes.
- 5. Turn the wall bracket around so the prongs stick outwards. Using the 4 screw holes found on the back of the wall bracket (Fig. 5), screw the wall bracket to the wall, through the centre of the plastic anchors.

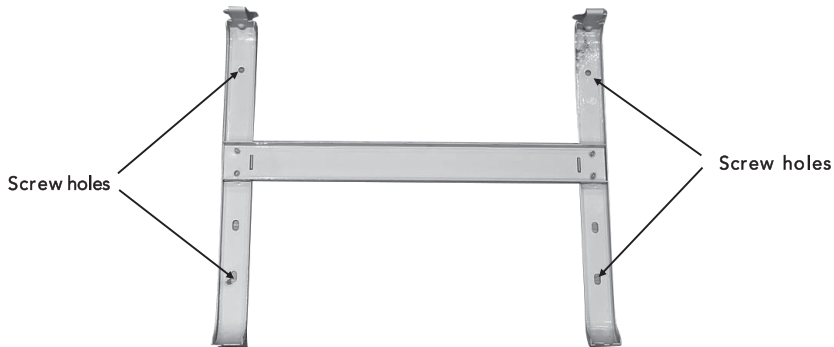


Fig.5

- 6. Once the wall bracket is mounted firmly to the wall, secure the raised openings on the lower back of the panel heater to the two hooks located on the lower vertical bars of the wall mount bracket. Push the top half of the panel heater so the prongs on the top of the two vertical bars are locked to the holes located behind the panel heater (Fig. 6). Use the screws to secure the prongs to hold the back of the panel heater firmly (Fig. 7).

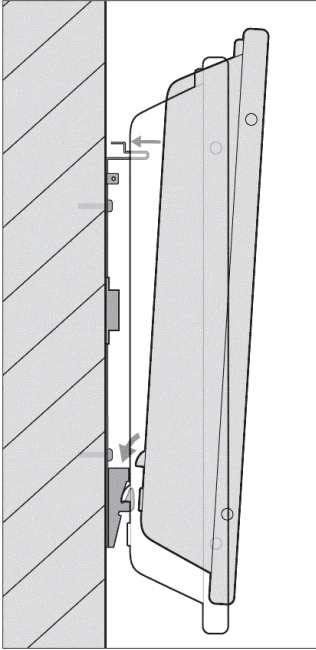


Fig.6

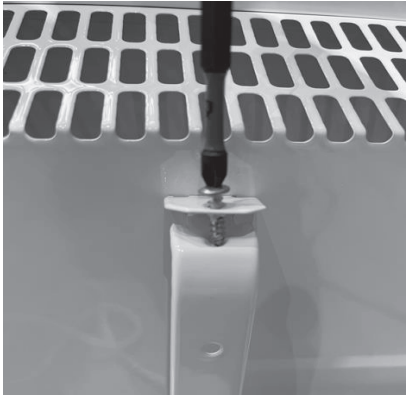


Fig.7

FLOOR STANDING

- The panel heater comes with detachable feet and castor wheels which can be assembled or not, depending on preference.
- 1. If the castor wheels are not required, remove from the feet before assembling to the panel heater.
- 2. To assemble the feet, carefully turn the panel heater upside down on a rug or soft surface in order to prevent damaging the paint finish. Align the hole found on the bottom of the panel heater with the hole on the centre of the feet. (Fig. 8)
- 3. Fit the foot fixing screw and tighten to secure to the panel heater and repeat with the other foot. (Fig. 9)
- 4. Return the panel heater back to the upright position.



WARNING: DO NOT use the panel heater without the feet attached if it is not mounted on the wall.




Fig.8



Fig.9

OPERATING THE PANEL HEATER

- Control Panel Operation

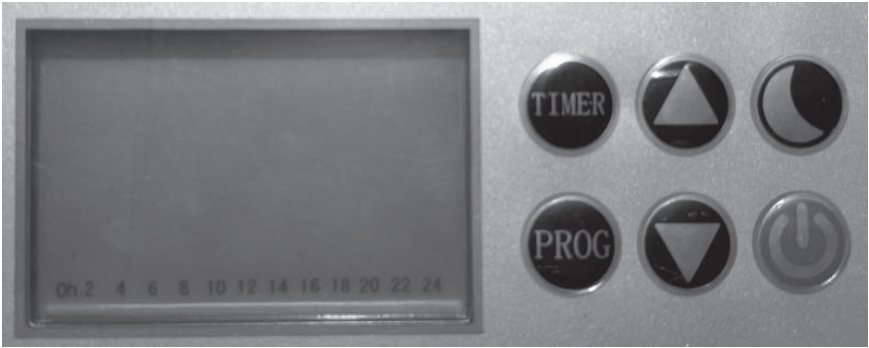

Description of set buttons

On/Off	Programmer	Timer	Up	Down	Temperature default setting (out of timer setting period)

On/Off button

IMPORTANT NOTE: The On/Off button functions different based on different room ambient temperature. The On/Off button is just for device's parameters setting or set to standby mode. To turn on or turn off the heater, it needs to plug in or plug off the heater.

1. Press On/Off button to set the heat settings.
2. Press and hold the switch to reset the device's parameters to factory settings (temperature 20℃, weekly timer mode cleared).
- 3.

PROG button

Press the PROG button to enter the timer settings for hours, temperature, and days.

Timer button

Press the TIMER button to confirm the timer mode on or off settings.

Up button


Down button

1. Press to set the options for hours, temperature, and days.
2. Press and hold both the UP and DOWN buttons for more than 3 seconds to activate the child lock. Press and hold both the UP and DOWN buttons for more than 3 seconds again to unlock.

Temperature default setting button (out of timer setting period)

Press the button to set the default temperature setting outside of the timed periods at 15℃.

Description of LCD display screen

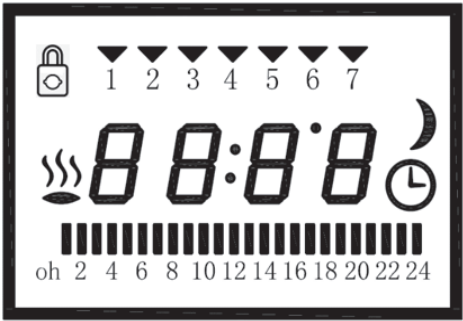

 1	Day of the week: The number "1" indicates Monday, and so on. When steady, it indicates the day of the week. When flashing, it's ready to set the day of the week. Seven black downward triangles appearing in a row: Week mode settings are being adjusted.
	Heating is on: When steady, it indicates level 1 (SKU 75386: 750W. SKU 57540: 1000W). When flashing, it indicates level 2 (SKU 75386: 1250W. SKU 57540: 2000W) For heat level setting, refer to (1) Operating mode part A.
	Four-digit number in the middle of the screen: IMPORTANT NOTE: Do not mistake these four digits for time display when in weekly timer mode setting. When there is a colon between the four digits, the two digits on the left of the colon represent the start time of the timer, and the two digits on the right represent the end time of the timer. When there is no colon between the four digits, the two digits on the left represent the target temperature for the timed interval, and the two digits on the right represent the target temperature outside the timed interval. If the right digits are '— —', the default is 15°C.
	Timer is on
	Temperature default setting is on (out of timer setting period)
 18 20 22 24	Timer setting period: 24 hours. Bottom numbers: Hourly time intervals for each day. Black rectangular bar above the bottom numbers: Time period when the timer is active.
	Child lock is on: Press and hold both the UP and DOWN buttons for more than 3 seconds to activate the child lock. Press and hold both buttons again for more than 3 seconds to deactivate the child lock.

Intended use of your panel heater

Your panel heater has two modes available for use. Heating without timer setting or Heating with timer setting.

Heating without timer setting

If you do not want to set the timer mode and prefer to use the heating mode directly, the heating setting offers two levels of adjustment. This mode is simple to set up. Please refer to (1) Operating Mode under sections A, B, C, and D for quick and easy setup of your heater. If you want the indoor temperature to rise quickly, you can select the level 2 heating. If you want to turn off the heating mode, simply set it to standby mode.

Heating with timer setting

If you choose to set the timer mode for heating, you need to sequentially refer to (1) Operating Mode, (2) Current Clock Setting, (3) Weekly Timer Mode Setting, and (4) Activating Weekly Timer Mode. Note: Ensure to set the current time and activate the weekly timer function after setting the timer.

● How to Operate Your Heater


(1) Operating Mode:

- A. Plug in your heater after proper installation to power on it. When the heater controller is powered on, the machine enters into the operating mode, the buzzer sounds ten times to alert the user that the heater controller is powered on. Pressing any button while the buzzer is sounding will stop the buzzer. The LCD screen displays the current indoor temperature, "Monday" indicator, and the backlight (the backlight turns off 10 seconds after the controller is set if not adjusted). If the current indoor temperature is more than 2°C below the set temperature (the default operating mode set temperature is 20°C, the set temperature can be adjusted following instructions in part "C. Set the temperature"), the heater will start heating, and the heating symbol  will appear on the screen (as shown below). Otherwise, the heating symbol won't show or will disappear when heating stops. For example, if the set temperature is 22°C, the heater will stop heating when the indoor temperature reaches 22°C. When the indoor temperature drops to 20°C, the heater will resume heating.

Set the heat setting: heating symbol 

When the power is on, press  once to set the heat setting at level 1, the heating symbol  is steady.

When the power is on, press  twice to set the heat setting at level 2, the heating symbol  is flashing continuously.

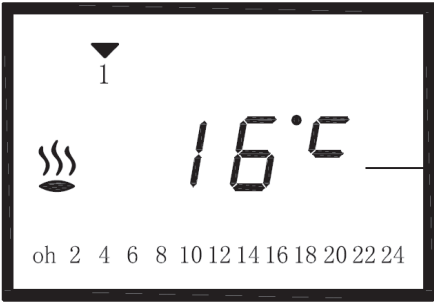


the current indoor temperature

Operating mode

B. Check set temperature

To check the set temperature in startup operating mode: In operating mode, press the  or  once to view the set temperature (the set temperature is flashing) in startup operating mode.

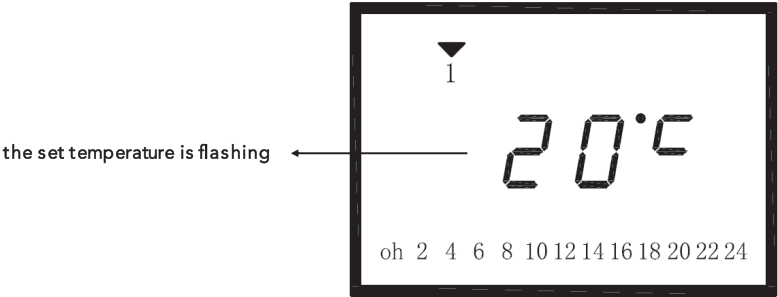

C. Set the temperature

When the heater is in operation mode, you can adjust the set temperature range from 5°C to 35°C by pressing  or . Each press increases or decreases the temperature by 1°C. If you press and hold the key for more than 3 seconds, the temperature will increase or decrease by 1°C at a speed of 0.5 seconds per degree. After selecting the desired temperature, if there is no further operation, after the set temperature digits flashes for 10s, the heater will confirm this set temperature (the new set temperature will be stored in the machine).

- D. Standby mode: When the heater controller is powered on, regardless of the previous operating mode before power was cut off, it will enter the startup operating mode. If you do not want the heater to run, press the  button (If the heating symbol  is flashing, press once. If the heating symbol  is steady, press twice), the heater will stop working and enter standby mode (the backlight will turn off after 10 seconds). In standby mode, the display will show the temperature value (the current indoor temperature) and the 'C' symbol, with the decimal point between the temperature value and the 'C' symbol not appearing. While in standby mode, pressing  will switch the heater back to the startup operating mode.



Standby mode

(2) Current Clock Setting:

- In operating mode, press the  button once to enter the clock setting interface (as shown below).
- Once in the clock setting interface, the day of the week symbol  will flash. Adjust to the current day of the week by pressing the  or  key.
- After setting the current day of the week, press the  button again, the two digits on the left of the colon (first two digits) will flash. Adjust to the current hour by pressing the  or  key.
- After setting the current hour, press the  button again, the two digits on the right of the colon (last two digits) will flash. Adjust to the current minutes by pressing the  or  key.
- Press the  button again to exit the clock setting interface (if no button is pressed during the setting process, the flashing will stop after 10 seconds, and the clock setting will be automatically completed).
- IMPORTANT NOTE: The clock needs to be reset after a power outage.



(3) Weekly Timer Mode Setting:

IMPORTANT NOTE: Before activating the weekly timer mode, make sure to set the current dock correctly. Otherwise, the weekly timer mode will operate according to the previously set clock. The weekly timer mode needs to be activated after setting.

A. Time period setting:

In operating mode, press and hold the (PROG) button for more than 3 seconds to enter the weekly timer program setting interface (as shown below-time period setting interface). Once in the interface, the day of the week symbol  will start to flash. Switch the day of the week by pressing the  or  key. Then, press the (PROG) button again, the 'start time' (first two digits) will flash. Set the start time by pressing the  or  key (When there is a colon between the four digits, the two digits on the left of the colon represent the start time of the timer, and the two digits on the right represent the end time of the timer. If the last two digits are equal to the first two digits and the first two digits need to be increased, the last two digits will also change to equal the first two digits). After setting the start time, press the (PROG) button again, the 'end time' (last two digits) will flash. Adjust the 'end time' by pressing the  or  key (the 'end time' can only be set to be greater than or equal to the 'start time'). Meanwhile, the small grid indicator at the bottom of the LCD screen will display the time period symbol (as shown below-display after setting).
IMPORTANTNOTE: The display of the day of the week in this interface is different from that in the clock setting interface, seven black downward triangles appearing in a row: Week mode settings are being adjusted.
IMPORTANT NOTE: Only one time period can be set for scheduling per day, and it is not possible to set multiple time periods in a day.



Time period setting interface




Example display after setting:
Wed., timer setting from 18:00 to 24:00

B. Set the temperature for the scheduled time period:

After setting the 'end time,' press the **PROG** button again to enter the set temperature settings for within and outside the timer period (as shown below, the main difference in this interface compared to the timer period setting interface is the presence or absence of the two dots in the middle). The 'set temperature for the timer period' (first two digits) will flash. Adjust this set temperature by pressing the **▲** or **▼** key (default is 20°C).

After setting this temperature, press the **PROG** button again, and the last two digits will flash to set the 'set temperature outside the timer period'. Adjust this set temperature by pressing the **▲** or **▼** key (default is 15°C). This set temperature can also be adjusted using the **☾** button. When this set temperature is flashing, pressing the **☾** button indicates that the heater will not operate outside the timer period for the selected day of the week, and '— —' will be displayed in the numeric position. After setting this temperature, pressing the **PROG** button will return to the day of the week setting. If you press and hold for more than 3 seconds, the settings will be saved, and the system will exit to operating mode. Set the timer programs for the other days of the week in the same way. If no button is pressed during the setting process, the flashing will stop after 10 seconds, and the weekly timer program settings will be automatically completed and stored in memory.

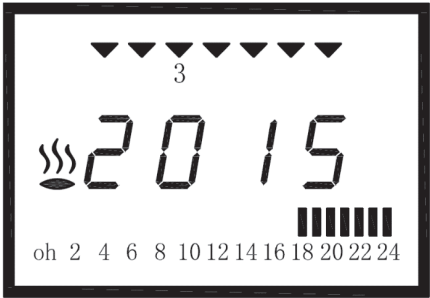


Temperature setting interface:

The first two digits is the 'set temperature for the timer period'.
The last two digits is the 'set temperature outside the timer period'.

- C. Heater non-operation setting in a day of week: If you want the heater to not operate on specific days of the week in the weekly timer mode, first set the 'start time' and 'end time' to be the same, then set the 'set temperature outside the timer period' to '— —' by using the **☾** button.
- D. Check weekly timer mode setting: To quickly view the timer period for each day of the week: In operating mode, press and hold the **PROG** button for more than 3 seconds. The day of the week number will start flashing, and the display will show the timer period for that week. Then, press the **▲** or **▼** key to view the timer periods for each day of the week. To view the set temperature for each day's timer period, follow the same method as setting the temperature for each day's timer period.

(4) Activating Weekly Timer Mode:

- A. In operating mode, press the **TIMER**  button to activate the weekly timer mode (as shown below). The weekly timer mode symbol will appear (the image below shows that the timer period for Wednesday is from 8 AM to 4 PM, with the timer mode activated and the outside timer mode also enabled). If it is the first-time powering on or if you press and hold the ON/OFF  button for more than 3 seconds to clear the weekly timer program settings, pressing the **TIMER**  button again will set the heater to operate at the default temperature of 15°C (the 'default temperature outside the timer period is 15°C', it means the timer is on but without timer mode setting, the heater will operate at the default temperature of 15°C).

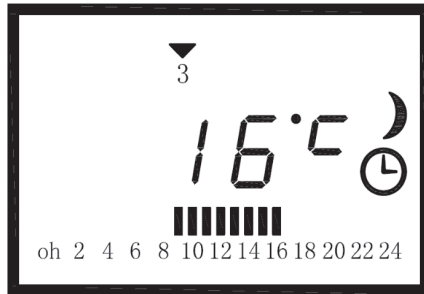

- B. If only some days of the week are set in the weekly timer mode and the remaining days are not configured, the heater will operate at the default temperature of 15°C (the 'default temperature outside the timer period') on the days that are not set when the weekly timer mode is activated.

(5) Window Open Detection Feature:

If the temperature drops by more than 5°C within 10 minutes, the buzzer will sound 3 times to alert the user that a window or other object in the room may be open.

(6) Power Failure Reminder Feature:

After a power interruption and subsequent power restoration, the buzzer will sound 10 times to alert the user that the heater experienced a power outage. Pressing any button while the buzzer is sounding will stop the alarm. If no button is pressed, the buzzer will sound 10 times every 30 minutes.

(7) Other Functions:

- Press and hold the ON/OFF  button for more than 3 seconds to clear the weekly timer program settings and restore the default operating mode temperature of 20°C.
- Press and hold both the  and  buttons for more than 3 seconds to activate the child lock . Press and hold both buttons again for more than 3 seconds to deactivate the child lock.
- The clock needs to be readjusted after a power outage, but other settings will be saved.
- Standby power consumption is less than 1 watt.
- Temperature setting range is from 5°C to 35°C.
- Indoor temperature display range is from 0°C to 70°C.
- If the temperature sensor probe is disconnected, the LCD will display "00," and the heater will operate at temperature at 20°C. If the temperature probe is short-circuited, the display will show "70," and the heater will not operate. In operating mode, after setting the temperature and when it is flashing, pressing the PROG button will also enter the weekly timer program setting interface.

CARE AND CLEANING

CAUTION: Prior to performing any maintenance or cleaning of your panel heater always disconnect the electrical supply for the unit. To avoid the risk of electric shock, never connect and disconnect the plug with your hand wet.

- To avoid malfunction, always keep the unit upright.
- Clean the exterior only of this unit with a soft dry cloth.
- DO NOT use any chemical or abrasive cleaners.
- Ensure that any dust or fluff does not build up on the air inlet or outlet. Build-up of dust and fluff will lower the heating capacity or cause a risk of fire. It is recommended to regularly vacuum both the inlet and outlet of the unit when any dust or fluff builds up.

TROUBLE SHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Not working	The plug may not be properly connected.	Check that the plug is properly inserted into the socket.
	Panel heater is overheated.	Unplug from the outlet, and ensure the air inlet and outlet are clean and free of blockage. Cool down the panel heater completely and turn it on.
Panel heater is not heating	The ambient temperature is higher than the preset temperature.	Adjust to a higher temperature setting
	Panel heater is faulty.	Contact Toolstation Customer Support

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR MACHINE, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE MACHINE YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE .

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: 75386 (PN01H-1500E), 57540 (PN01H-2000E)

Product Description: Digital Panel heater

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:

- Electrical Equipment (Safety) Regulations 2016 (LVD 2014/35/EU)
- Electromagnetic Compatibility Regulations 2016(EMC 2014/30/EU)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012(RoHS 2011/65/EU&2015/863/EU)
- REACH (EC) No 1907/2006

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared:

- BS EN 60335-1
- BS EN 60335-2-30
- BS EN 62233
- BS EN 55014-1
- BS EN 55014-2
- BS EN 61000-3-2
- BS EN 61000-3-3

-

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

ENERGY USE INFORMATION

Model(s)	SKU 75386 / Model PN01H-1500E				
Item		Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters		
Nominal heat output	P _{nom}	1.25-1.5	kW	Manual heat charge control, with integrated thermostat	X
Minimum heat output (indicative)	P _{min}	0.75	kW	Manual heat charge control with room and/or outdoor temperature feedback	X
Maximum continuous heat output	P _{max,c}	1.5	kW	Electronic heat charge control with room and/or outdoor temperature feedback	X
Auxiliary electricity consumption			Fan assisted heat output		X
At nominal heat output	el _{max}	n/a	kW	Type of heat output / room temperature control	
At minimum heat output	el _{min}	n/a	kW	Single stage heat output and no room temperature control	X
In standby mode	el _{SB}	0.00025	kW	Two or more manual stages, no room temperature control	X
				With mechanical thermostat room temperature control	X
				With electronic room temperature control	X
				Electronic room temperature control plus day timer	X
				Electronic room temperature control plus week timer	Yes
				Other control options	
				Room temperature control, with presence detection	X
				Room temperature control, with open window Detection	Yes
This heater is only suitable for well insulated spaces or occasional use.			With distance control option		X
			With adaptive start control		X
Toolstation Limited (company number 04372131)			With working time limitation		Yes
			With black bulb sensor		X

Model(s)	SKU 57540 / Model PN01H-2000E				
Item		Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters	
Nominal heat output	P _{nom}	1.7-2.0	kW	Manual heat charge control, with integrated thermostat	X
Minimum heat output (indicative)	P _{min}	1.0	kW	Manual heat charge control with room and/or outdoor temperature feedback	X
Maximum continuous heat output	P _{max,c}	2.0	kW	Electronic heat charge control with room and/or outdoor temperature feedback	X
Auxiliary electricity consumption				Fan assisted heat output	X
At nominal heat output	e _{lmax}	n/a	kW	Type of heat output / room temperature control	
At minimum heat output	e _{lmin}	n/a	kW	Single stage heat output and no room temperature control	X
In standby mode	e _{lSB}	0.00025	kW	Two or more manual stages, no room temperature control	X
				With mechanical thermostat room temperature control	X
				With electronic room temperature control	X
				Electronic room temperature control plus day timer	X
				Electronic room temperature control plus week timer	Yes
				Other control options	
				Room temperature control, with presence detection	X
				Room temperature control, with open window Detection	Yes
This heater is only suitable for well insulated spaces or occasional use.				With distance control option	X
				With adaptive start control	X
Toolstation Limited (company number 04372131)				With working time limitation	Yes
				With black bulb sensor	X

GUARANTEE

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Toolstation product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Toolstation Guarantee will cover repair or - at the discretion of Toolstation - replacement with a functionally equivalent Toolstation product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

www.toolstation.com/contact
Call us 0808 100 7211
Mobile friendly 0330 333 3303
Email: info@toolstation.com

Made in China