




ORIGINAL USER INSTRUCTIONS

1220W DRYWALL SANDER

SKU: AJ034

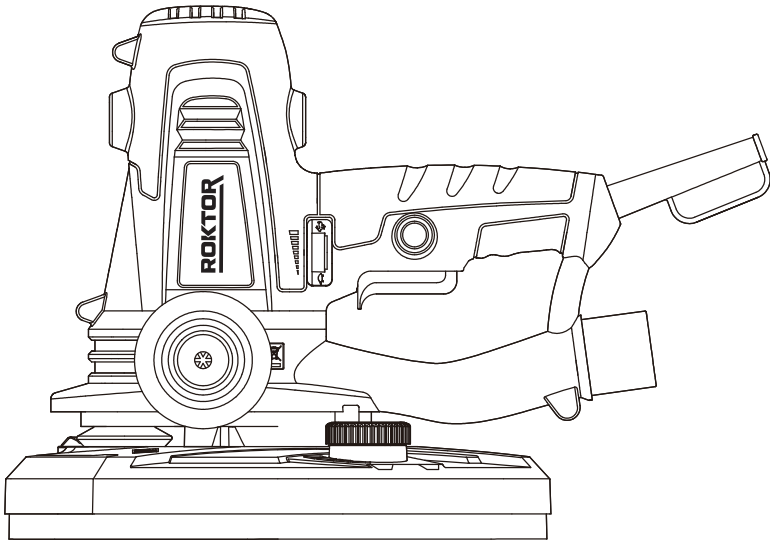

READ BEFORE USE


PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

Helpline: +44 3331 880059
Email: roktor.support@positecgroup.com


CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	5
• IMPORTANT SAFETY WARNINGS-----	6
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	10
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	11
• CARE AND CLEANING-----	16
• TROUBLESHOOTING-----	17
• DECLARATION OF CONFORMITY / PERFORMANCE-----	18
• ENVIRONMENTAL INFORMATION-----	19
• WARRANTY-----	19
• CUSTOMER SUPPORT-----	20

WHAT'S IN THE BOX

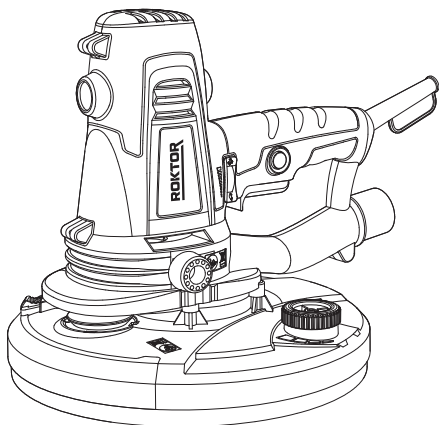


Drywall sander

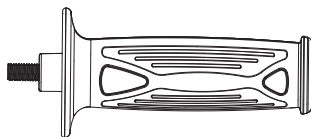


Auxiliary handle




Hex key

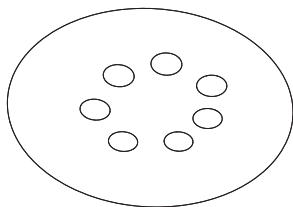

Sanding discs (150 / 180 / 240 / 400 grit * 2 of each)

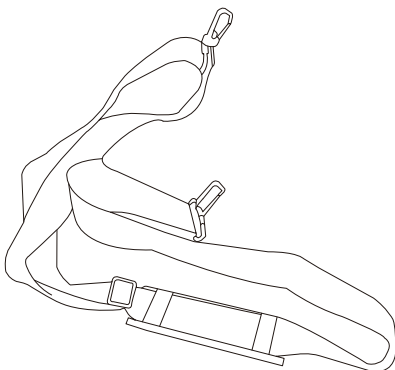

Shoulder strap

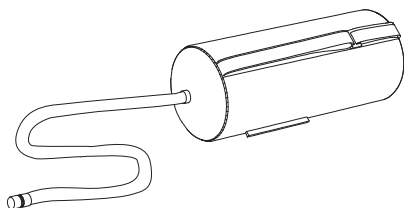

Dust bag and hose pipe 2m



User instruction manual

SPECIFICATIONS

- 230V~, 50Hz
- Variable speed adjustment
- Self dust collection system
- Hook-and-loop system base pad
- Adjustable sanding pad cover
- Constant speed control

TECHNICAL DATA

SKU/Model	AJ034 (PWD122)
Rated voltage	230V ~ 50Hz
Rated power rate	1220 W
No-load speed	1500-2300 /min
Base size	215mm
Disc size	225mm
Plug	BS plug
Protection class	□ /II
Net weight approx.(kg)	3.49 kg
A weighted sound pressure L_{pA} ($K_{pA} = 3$ dB(A))	85 dB(A)
A weighted sound power L_{wA} ($K_{wA} = 3$ dB(A))	93 dB(A)
Vibration level a_h ($K = 1,5$ m/s ²)	$a_{h,DS} = 4,83$ m/s ²

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, dependent on what kind of workpiece is processed, and dependent on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti-vibration and noise accessories are used.
- The tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Maintain this tool in accordance with these instructions and keep it well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read the instruction manual



Class II device - Double Insulation



Risk of damage or injury if the instructions in this manual are not followed



Immediately disconnect the plug from the power outlet if it is damaged, and for all maintenance operations.



Wear eye protection



Wear ear protection



Wear a dust mask



Always operate with two hands



Always wear gloves



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, the user must read instruction manual

GENERAL POWER TOOL SAFETY WARNINGS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

SAFETY INSTRUCTIONS FOR ALL OPERATIONS

Safety warnings common for sanding:

- a) **This power tool is intended to function as a sander. Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*
- b) **Operations such as grinding, wire brushing, polishing, hole cutting or cutting-off are not to be performed with this power tool.** *Operations for which the power tool was not designed may create a hazard and cause personal injury.*
- c) **Do not convert this power tool to operate in a way which is not specifically designed and**

specified by the tool manufacturer. *Such a conversion may result in a loss of control and cause serious personal injury.*

- d) **Do not use accessories which are not specifically designed and specified by the tool manufacturer.** *Just because the accessory can be attached to your power tool, it does not assure safe operation.*
- e) **The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool.** *Accessories running faster than their rated speed can break and fly apart.*
- f) **The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool.** *Incorrectly sized accessories cannot be adequately guarded or controlled.*
- g) **The dimensions of the accessory mounting must fit the dimensions of the mounting hardware of the power tool.** *Accessories that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.*
- h) **Do not use a damaged accessory.** *Before each use inspect the accessory such as abrasive wheels for chips and cracks, backing pad for cracks, tear or excess wear, wire brush for loose or cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.*
- i) **Wear personal protective equipment.** *Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various applications. The dust mask or respirator must be capable of filtering particles generated by the particular application. Prolonged exposure to high intensity noise may cause hearing loss.*
- j) **Keep bystanders a safe distance away from work area.** *Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.*
- k) **Position the cord clear of the spinning accessory.** *If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning accessory.*
- l) **Never lay the power tool down until the accessory has come to a complete stop.** *The spinning accessory may grab the surface and pull the power tool out of your control.*
- m) **Do not run the power tool while carrying it at your side.** *Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.*
- n) **Regularly clean the power tool's air vents.** *The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.*
- o) **Do not operate the power tool near flammable materials.** *Sparks could ignite these materials.*
- p) **Do not use accessories that require liquid coolants.** *Using water or other liquid coolants may result in electrocution or shock.*
- q) **Your hand must hold on the handle when you are working.** *Always use the auxiliary handles supplied with the tool. Loss of control can cause personal injury.*

FURTHER SAFETY INSTRUCTIONS FOR ALL OPERATIONS

Kickback and Related Warnings

Kickback is a sudden reaction to a pinched or snagged rotating wheel, backing pad, brush or any other accessory. Pinching or snagging causes rapid stalling of the rotating accessory which in turn causes the uncontrolled power tool to be forced in the direction opposite of the accessory's rotation at the point of the binding.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel

that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.


- a) **Maintain a firm grip with both hands on the power tool and position your body and arms to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up.** *The operator can control torque reactions or kickback forces, if proper precautions are taken.*
- b) **Never place your hand near the rotating accessory.** *Accessory may kickback over your hand.*
- c) **Do not position your body in the area where power tool will move if kickback occurs.** *Kickback will propel the tool in direction opposite to the wheel's movement at the point of snagging.*
- d) **Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory.** *Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.*
- e) **Do not attach a saw chain woodcarving blade, segmented diamond wheel with a peripheral gap greater than 10 mm or toothed saw blade.** *Such blades create frequent kickback and loss of control.*

ADDITIONAL SAFETY INSTRUCTIONS FOR SANDING OPERATIONS

Safety warnings specific for sanding operations:

- a) **Use proper sized sanding disc paper. Follow manufacturers recommendations, when selecting sanding paper.** *Larger sanding paper extending too far beyond the sanding pad presents a laceration hazard and may cause snagging, tearing of the disc or kickback.*

PRODUCT DESCRIPTION AND IDENTIFICATIONS

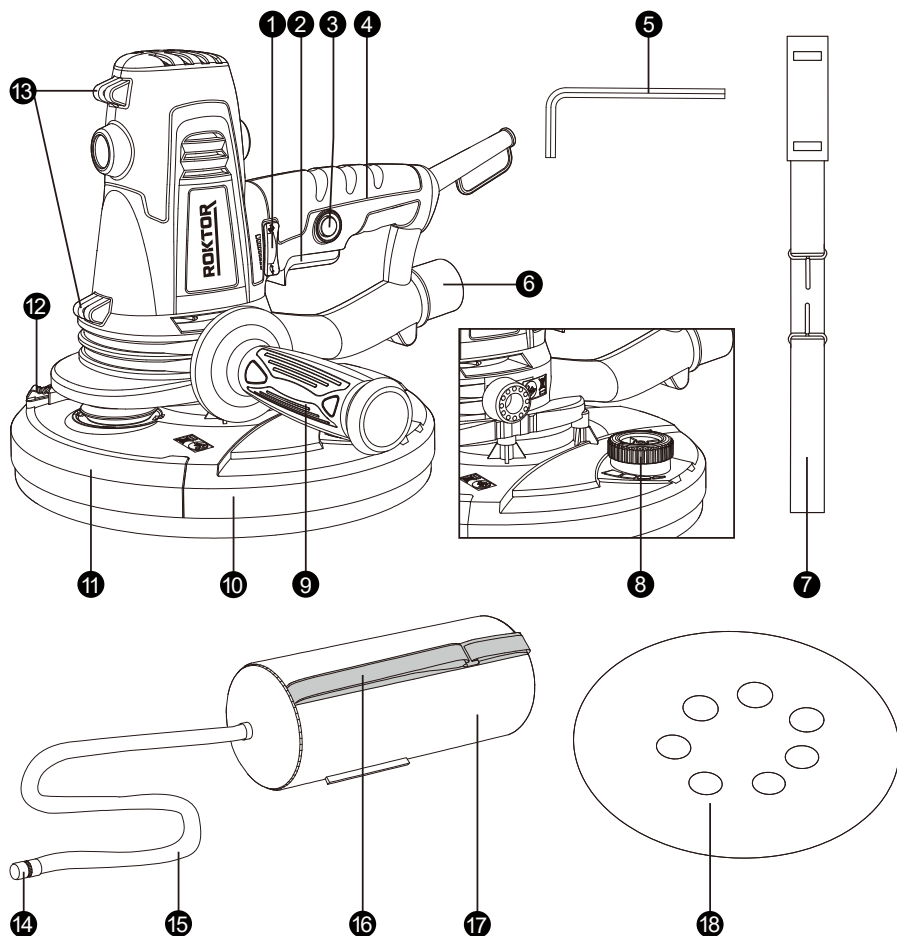

1. Speed control dial

2. on/off switch

3. Lock-on button

4. Main handle

5. Hex key

6. Dust extraction outlet

7. Shoulder strap

8. Vacuum speed control dial

9. Auxiliary handle

10. Fixed guard

11. Detachable guard

12. Detachable guard lock button

13. Strap buckle

14. Dust outlet connector

15. Hose pipe

16. Dust bag shoulder strap

17. Dust bag

18. Sanding disc

19. Base pad (See Fig. 2)

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

The tool is packaged with some parts that are unattached and require a little simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached. Handle with extreme care.

ASSEMBLY



WARNING: Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

1. INSTALLING THE AUXILIARY HANDLE (SEE FIG. 1)

The handle can be assembled onto either side of the tool, depending on your preference. Thread the handle into the mounting hole and turn it clockwise to tighten. Make sure the handle is securely mounted.



WARNING: When operating the tool, hold on to the main handle and auxiliary handle to prevent loss of control. For safe operation, the auxiliary handle must be installed.

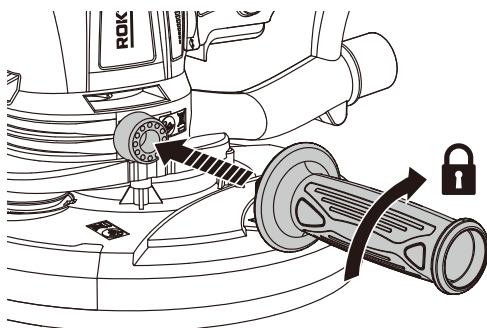


Figure 1

2. ATTACHING THE SANDING DISC (SEE FIG. 2)

Your tool is supplied with sanding discs in 150, 180, 240, and 400 grit to meet different sanding requirements.

Attach the selected sanding disc to the hook-and-loop base pad, making sure the holes in the sanding disc align with the dust extraction holes on the pad.

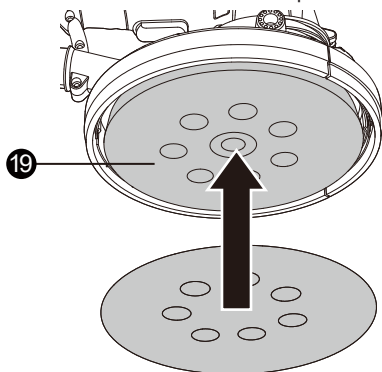


Figure 2

3. ATTACHING THE DUST BAG (SEE FIG. 3)

The dust bag is pre-connected to the hose pipe to collect dust during sanding operations. Align the dust outlet connector with the dust extraction outlet and push it on fully until it is securely fitted.

NOTE: The dust bag is equipped with a shoulder strap for carrying and securing the dust bag, helping to reduce operator fatigue and improve handling stability during operation.

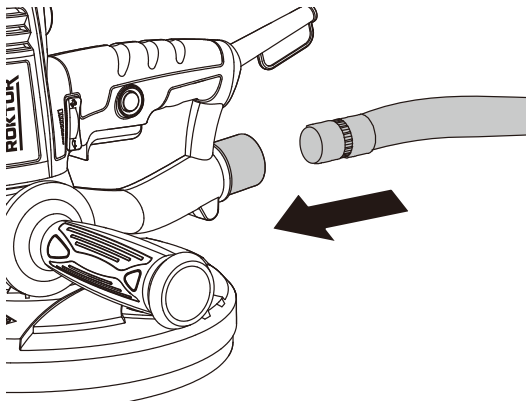


Figure 3

4. EMPTYING THE DUST BAG (SEE FIG. 4)

If necessary, remove the hose with the dust bag from the tool. Hold the dust bag over a suitable waste container, remove the clasp, and empty the contents into the container. After emptying, slide the clasp back onto the rails of the dust bag to close it securely, then reattach the hose and dust bag to the tool.

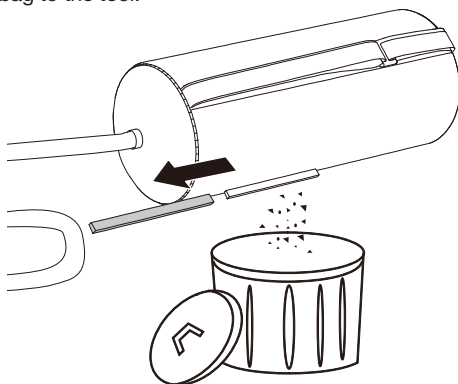


Figure 4

5. ATTACHING THE SHOULDER STRAP (SEE FIG. 5)

The tool can be carried by attaching shoulder strap to the strap buckle.

Attach both hooks to the two buckles on the enclosure as shown.

Adjust the length of the strap to enable proper carrying of the tool on one shoulder.

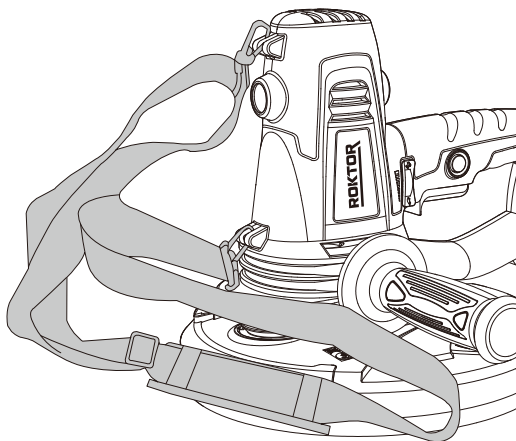


Figure 5

5. REMOVING THE BASE PAD (SEE FIG. 6)

Switch the tool off and disconnect it from the power supply. Remove the sanding disc from the base pad.

Hold the base pad, loosen the fixation bolt with the hex key and remove it together with the spring and base pad. Clean the base pad and inner part of the guard from dust and other remains.

Re-fit the base pad, spring and fixation bolt. Ensure they sit properly and secure the base pad with the fixation bolt.

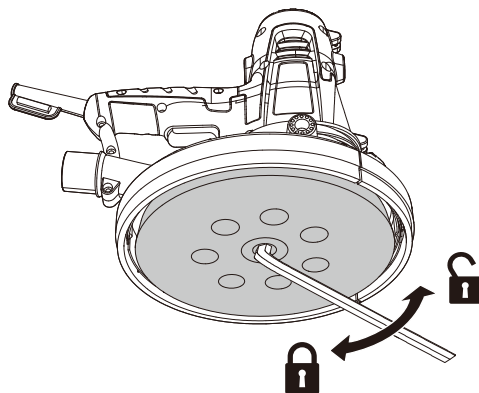


Figure 6

OPERATION

INTENDED USE

The machine is intended for sanding drywall, plaster, and ceiling surfaces to achieve smooth finishes before painting or decoration. It is designed for dry sanding only.

1. SWITCHING ON AND OFF (SEE FIG. 7)

To switch the tool on, press the on/off switch. To switch the tool off, release the on/off switch.

- For continuous operation

Press and hold the on/off switch, then press the lock-on button. Release the on/off switch to keep the tool running.

To switch the tool off during continuous operation, press and release the on/off switch.

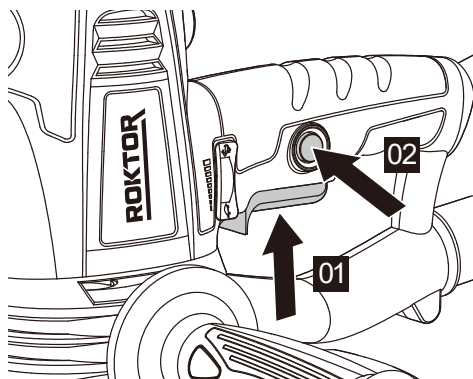


Figure 7

2. VARIABLE SPEED CONTROL (SEE FIG. 8)

Adjust the sanding speed by turning the speed control dial. Select the appropriate speed according to the sanding surface and the grit of the sanding disc.

A higher speed setting is suitable for use with fine-grit sanding discs to achieve a smooth, fine finish.

A lower speed setting is suitable for use with coarse-grit sanding discs when removing plaster residue or water stains from the work surface.

NOTE: Use the lock-on button to maintain the selected speed during continuous operation.



WARNING: Do not apply excessive pressure, as this may overload the tool and reduce sanding efficiency.

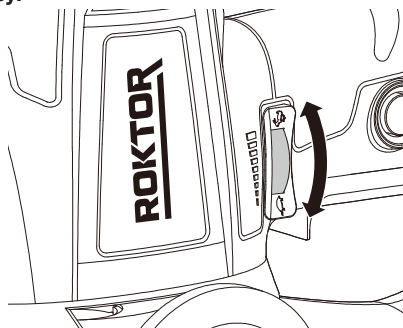


Figure 8

3. ADJUSTING SUCTION POWER (SEE FIG. 9)

Adjust the suction power according to the intended operation and working conditions.

Turn the vacuum speed control dial clockwise to increase the suction power, and turn it counter-clockwise to decrease the suction power.

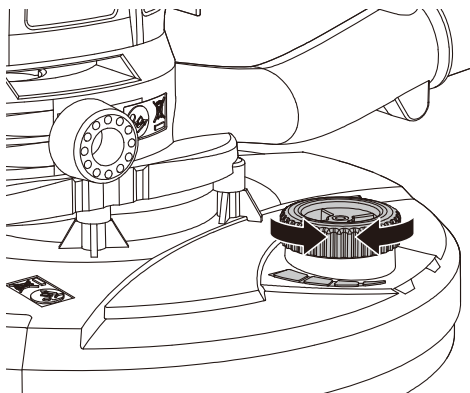


Figure 9

4. DETACHABLE GUARD (SEE FIG. 10-1 & 10-2)

The detachable guard allows you to reduce the distance between the sanding disc and adjacent surfaces such as walls or ceilings. Remove the detachable guard when sanding close to other objects (e.g. walls or ceilings) to reach edges more easily.



WARNING: Operate the tool without the detachable guard only when sanding surfaces close to other objects. Do not use the tool without the guard for general sanding operations.

To remove the detachable guard, press and hold the detachable guard lock button downward, then remove it from the fixed guard.

After operation, refit the detachable guard onto the fixed guard and ensure the lock button is fully engaged and locked in place.

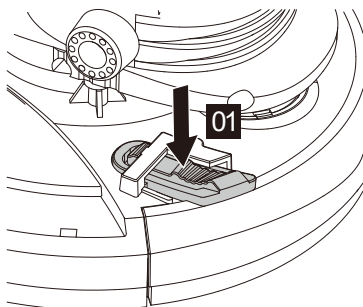


Figure 10-1

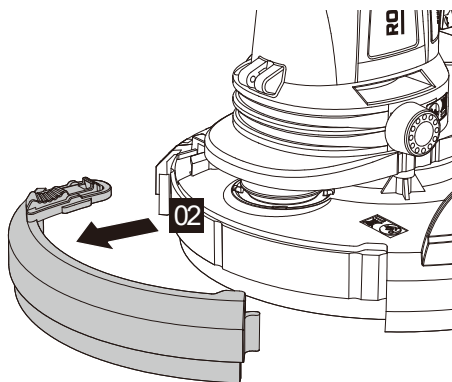


Figure 10-2

5. SANDING



WARNING: During operation, fine dust will be generated! Some dusts are highly flammable and explosive! Do not smoke during operation, keep heat sources and open flames out of the working area! Always use a dust extraction system (e.g. the dust bag with vacuum hose) and wear a dust mask to protect yourself against hazards resulting from fine dust!

Ensure the work surface is free of obstacles like nails or screws before operation. Remove them if required.

Attach a suitable sanding disc and choose an appropriate rotation speed.

Hang the dust bag with the strap on the shoulder.

Hold the tool with one hand on the main handle and with the other hand on the auxiliary handle.

Remove the detachable guard when the work surface is close to other objects (e.g. wall, ceiling).

Switch the tool on and wait until it runs at full speed before placing it on the work surface.

6. WORKING HINTS FOR YOUR DRYWALL SANDER

- 1) Always select the appropriate sanding disc grit according to the surface condition and finishing requirements. Start with a coarse grit for rough surfaces and switch to finer grits for final finishing.
- 2) Adjust the sanding speed and suction power to suit the material and sanding task. Lower speeds are recommended for coarse sanding, while higher speeds are suitable for fine finishing.
- 3) Keep the sanding head flat against the work surface and apply light, even pressure. Excessive pressure will reduce efficiency and may damage the surface or overload the tool.
- 4) Move the tool slowly and evenly across the surface. Avoid staying in one spot for too long to prevent uneven sanding marks.
- 5) When sanding close to walls or ceilings, remove the detachable guard if required, and reinstall it after finishing the edge work.
- 6) Always ensure the dust extraction system is properly connected and functioning to maintain a clean working environment and improve visibility.
- 7) Take regular breaks during prolonged operation to prevent fatigue and maintain consistent sanding quality.

CARE AND CLEANING

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Disconnect the power and allow the tool rotation to stop.
- Use a slightly damp cloth to clean the enclosure. Do not allow water to enter the tool.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with a soft cloth. If the dust is difficult to wipe away, rub it with soapy water.
- **WARNING!** Unplug the tool before cleaning.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Sander is not operating	• The plug is not fully inserted into the wall outlet • Faulty power switch	• Make sure that the plug is fully inserted into the AC wall outlet • Contact Customer Service Centre
Sander stops during operation	• Overloaded due to excessive pressure	• Reduce sanding pressure and allow the tool to run freely
Poor sanding performance	• Sanding disc worn or clogged • Incorrect grit selected • Speed setting too low	• Replace the sanding disc • Select the appropriate grit for the application • Increase the speed setting as required
Excessive vibration	• Sanding disc not properly attached	• Reattach the sanding disc correctly
Dust extraction is ineffective	• Dust bag full • Hose or dust outlet blocked • Sanding disc holes not aligned with extraction holes	• Empty the dust bag regularly • Clean the hose and dust outlet • Ensure sanding disc holes are properly aligned
Uneven sanding marks on surface	• Excessive pressure applied • Tool kept in one position too long	• Apply light, even pressure • Keep the tool moving continuously across the surface

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AJ034 (PWD122)

Product Description: 1220W Drywall Sander

1. Toolstation (company number 04372131)
This declaration of conformity is issued under the sole responsibility of Toolstation
2. Object of the declaration
The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:
 - Supply of Machinery (Safety) Regulations 2008
 - Electromagnetic Compatibility Regulations 2016
 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):
 - BS EN 62841-1
 - BS EN IEC 62841-2-3
 - BS EN IEC 55014-1
 - BS EN IEC 55014-2
 - BS EN IEC 61000-3-2
 - BS EN 61000-3-3
 - BS EN IEC 63000
4. Additional information:
Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China