




ORIGINAL USER INSTRUCTIONS

18V CORDLESS COMBI DRILL & IMPACT DRIVER TWIN PACK

SKU: AJ056

18V CORDLESS COMBI DRILL

MODEL: CDI218D8

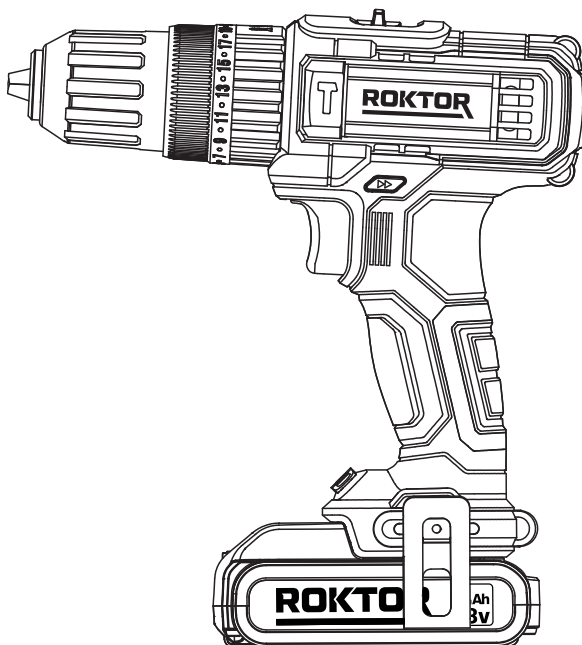

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	6
• IMPORTANT SAFETY WARNINGS-----	7
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	11
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	12
• CARE AND CLEANING-----	19
• TROUBLESHOOTING-----	19
• DECLARATION OF CONFORMITY / PERFORMANCE-----	20
• ENVIRONMENTAL INFORMATION-----	21
• WARRANTY-----	21
• CUSTOMER SUPPORT-----	22

WHAT'S IN THE BOX

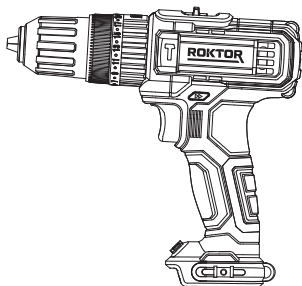


Combi drill



Belt clip



18V 2.0Ah battery

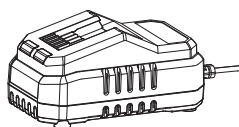

Charger 2.4A (Only one for kit)



User instruction manual

SPECIFICATIONS

- 18 V ---
- Variable speed with reverse function
- Two speed gear box
- LED work light

TECHNICAL DATA

Model		CDI218D8
Voltage		18 V ---
No-load speed		0-400/0-1,500 /min
Impact rate		0-6,400/0-24,000 bpm
Max. torque		40 Nm
Chuck capacity		13mm keyless
Clutch position		21+1+1
Max. drilling capacity	Steel	13mm
	Wood	30mm
	Concrete	13mm
Battery pack		AJ038 (ABP1820TD5)
Charger		AJ069 (ACG1824D)
Weight approx.(kg)		1.4 kg
A weighted sound pressure L_{pA} ($K_{pA}=5\text{dB(A)}$)		68.3dB(A) (no-load) 89.5dB(A) (drill concrete)
A weighted sound power L_{wA} ($K_{wA}=5\text{dB(A)}$)		76.3dB(A) (no-load) 97.5dB(A) (drill concrete)
Vibration emission value (Uncertainty $K=1,5\text{m/s}^2$)		
Drilling into metal		$a_{h,D} < 2.5\text{m/s}^2$
Impact drilling into concrete		$a_{h,ID} = 13.79\text{m/s}^2$

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, especially what kind of workpiece is processed, dependent on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut or drilled.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti-vibration and noise accessories are used.

- The tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep it well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

SUITABLE BATTERY PACKS

Item number	AJ038 (ABP1820TD5)	AJ062 (ABP1840TD5)	AJ061 (ABP1850TD5)
Battery capacity	2.0Ah	4.0Ah	5.0Ah

SUITABLE CHARGERS

Item number	AJ069 (ACG1824D)	AJ067 (ACG1840D1)
Charger input	100-240V~50/60Hz, 60 W	100-240V~50/60Hz, 100 W
Charger output	20V  2.4A	20V  4.0A
Charger protection class	 /II	 /II

Suitable battery packs or chargers are available on <https://www.toolstation.com>



WARNING: Only use genuine Toolstation battery packs listed above. Use of unapproved batteries may result in fire, explosion or electric shock.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read the instruction manual



Risk of damage or injury if the instructions in this manual are not followed



Wear eye protection



Wear ear protection



Wear a dust mask



Batteries may enter water cycle if disposed improperly, which can be hazardous for the ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn



Li-ion

Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



For indoor use only



Read the instruction manual



Positive terminal



Negative terminal

T 2.5A



Fuse



Double insulation



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, user must read the instruction manual

GENERAL SAFETY RULES FOR POWER TOOL



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
 - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
 - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
 - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*
- 4) Power tool use and care**
- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
 - b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
 - c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
 - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
 - e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
 - f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
 - g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
 - h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
- 5) Battery tool use and care**
- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
 - b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
 - c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
 - d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
 - e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
 - f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*

- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6) **Service**
 - a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
 - b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorised service providers.*

COMBI DRILL SAFETY WARNINGS

- 1) **Safety instructions for all operations**
 - a) **Wear ear protectors when impact drilling.** *Exposure to noise can cause hearing loss.*
 - b) **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory or fasteners may contact hidden wiring.** *Cutting accessory or fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*
- 2) **Safety instructions when using long drill bits**
 - a) **Never operate at higher speed than the maximum speed rating of the drill bit.** *At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.*
 - b) **Always start drilling at low speed and with the bit tip in contact with the workpiece.** *At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.*
 - c) **Apply pressure only in direct line with the bit and do not apply excessive pressure.** *Bits can bend causing breakage or loss of control, resulting in personal injury.*

SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** *When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.*
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Keep battery pack clean and dry.**
- g) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- h) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- i) **Do not maintain battery pack on charge when not in use.**
- j) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- k) **Recharge only with the charger specified by the manufacturer. Do not use any charger other than that specifically provided for use with the equipment.**
- l) **Do not use any battery pack which is not designed for use with the equipment.**

- m) **Keep battery pack out of the reach of children.**
- n) **Retain the original product literature for future reference.**
- o) **Remove the battery from the equipment when not in use.**
- p) **Dispose of properly.**
- q) **Do not mix cells of different manufacturers, capacity, size or type within a device.**
- r) **Keep the battery away from microwaves and high pressure.**
- s) **Warning! Do not use non-rechargeable batteries.**
- t) **The normal temperature range for charging the battery is 0-40°C.**
- u) **Do not expose the appliance or battery to excessive temperatures.**

SAFETY WARNINGS FOR BATTERY CHARGER



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger is matching the local AC supply.
5. For indoor use, or do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity "+/-" when charging.
10. Do not open the unit and keep out of the reach of children.
11. Do not charge the batteries of other manufacturers or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

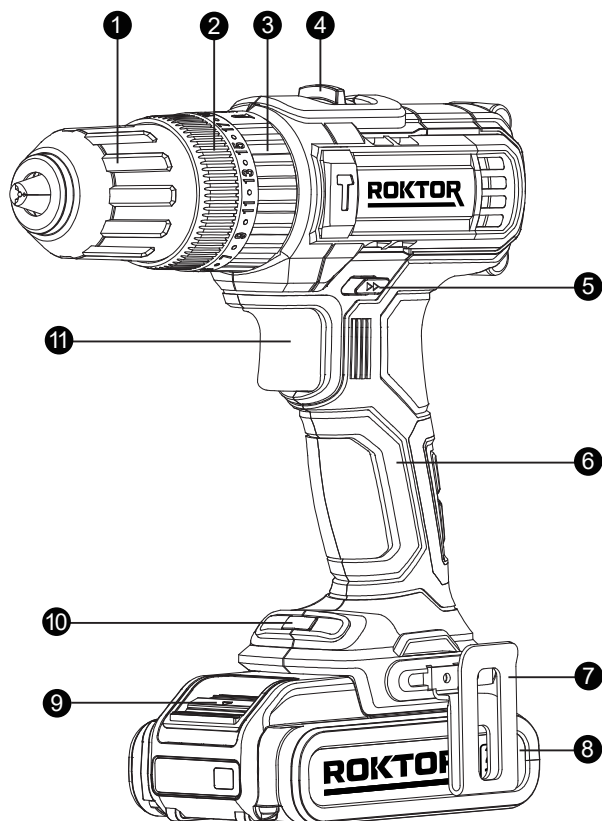

1. Keyless chuck
2. Torque adjustment ring
3. Function selection collar
4. Two-speed gear control
5. Forward/reverse rotation control
6. Soft grip handle
7. Belt clip
8. Battery pack
9. Battery pack release button
10. LED light
11. On/off switch

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction manual carefully.

The tool is packaged with some parts that are unattached and require a little simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached.

ASSEMBLY

1. CHARGING THE BATTERY PACK (SEE FIG. 1)

1) Plug the charger into an appropriate outlet.

2) Slide the battery pack into the charger. The light will become green and flash to show charging has started. After fully charged, the green light stays on.

NOTE: If the battery pack is locked in the charger, press the battery pack release button and remove it.

NOTE: Do not use any charger other than that specifically provided for use with the equipment. If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.

Please charge the battery to full capacity before storage. If the tool will not be used for long periods of time, charge the battery every 3 months.



WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full charge. Do not charge the battery on flammable surfaces or near combustible materials.

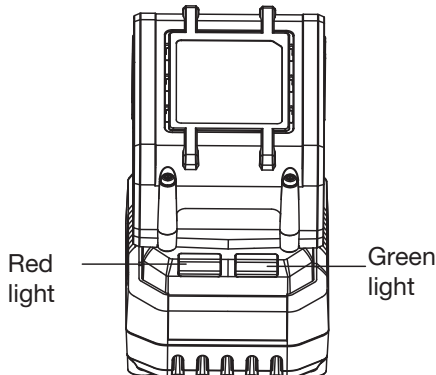


Figure 1

2. REMOVING OR INSTALLING BATTERY PACK (SEE FIG. 2-1 & 2-2)

Depress the battery pack release buttons to release and slide the battery pack out from your tool. After recharging, slide it back into your tool. A simple push and slight pressure will be sufficient.

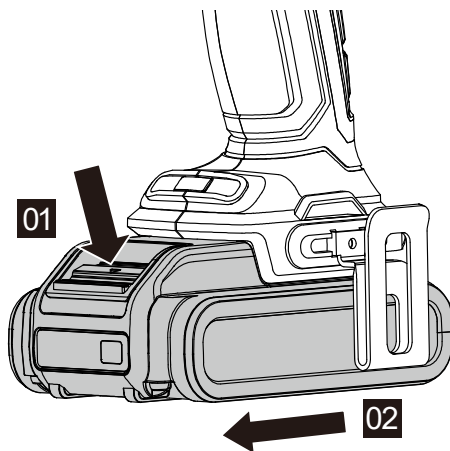


Figure 2-1

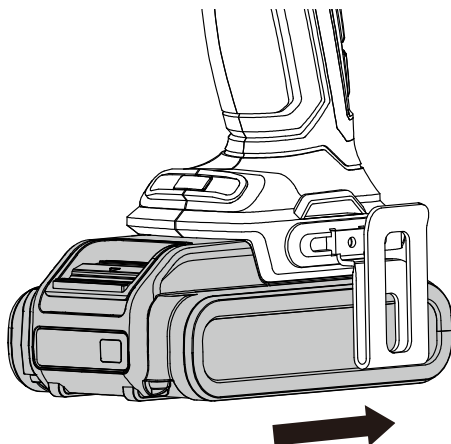


Figure 2-2

3. CHUCK ADJUSTMENT (SEE FIG. 3)

- 1) To open the chuck jaws, rotate the front section of the chuck.
- 2) Insert the drill bit or bit holder (not included) between the chuck jaws and rotate the front section in the opposite direction. Ensure the drill bit or bit holder is in the centre of the chuck jaws.
- 3) Finally, firmly rotate the front chuck section in the opposite direction. Your drill bit or bit holder is now clamped in the chuck.



WARNING: Always lock off the on/off switch and disconnect tool from power source when changing accessories. Insert the magnetic bit holder (not included) first when you use the short driving bit.

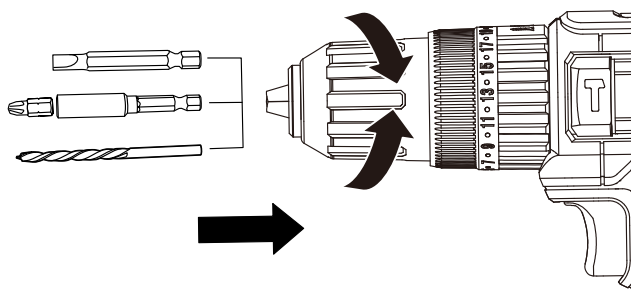


Figure 3

4. INSTALLING BELT CLIP (SEE FIG. 4)

Screw the belt clip on the tool with the screw provided. The belt clip can be clipped onto your belt or pocket, etc.

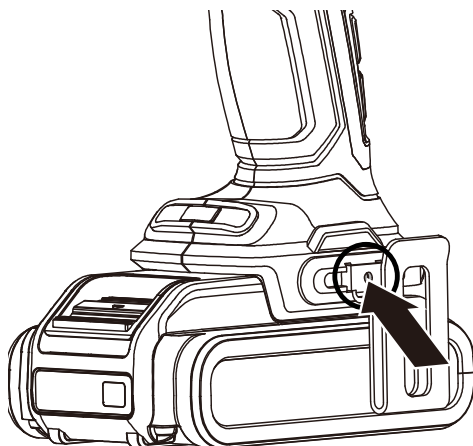


Figure 4

OPERATION INTENDED USE

The machine is intended for driving in and loosening screws as well as for drilling in wood, metal, plastic, masonry and concrete.

1. SWITCH LOCK (SEE FIG. 5)

The on/off switch can be locked in the OFF position. This helps to reduce the possibility of accidental starting when not in use. To lock the on/off switch, place the forward/reverse rotation control in the centre position.

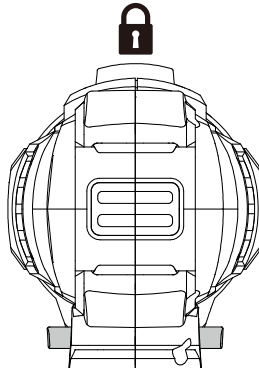


Figure 5

2. FORWARD AND REVERSE ROTATION CONTROL (SEE FIG. 6-1 & 6-2)

Forward rotation: push the forward/reverse rotation control to the left (the drill points away from you). It is used for driving screws, tightening bolts or nuts and drilling.

Reverse rotation: push the forward/reverse rotation control to the right (the drill points away from you). It is used for removing screws, loosening bolts or nuts and releasing a jammed drill bit.



WARNING: Never change the direction of rotation when the chuck is rotating, wait until it has stopped!

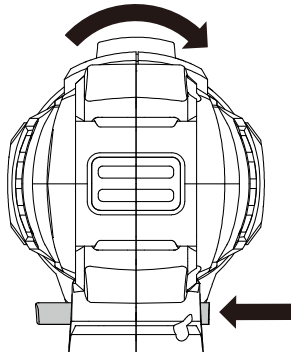


Figure 6-1

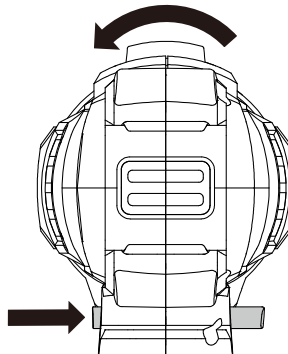


Figure 6-2

3. ON/OFF SWITCH (SEE FIG. 7)

Depress the on/off switch to start and release it to stop your tool. The on/off switch is fitted with a brake function which stops your chuck immediately when you quickly release the switch. It is also a variable speed switch that delivers higher speed and torque with increased trigger pressure. Speed is controlled by the amount of on/off switch depression.

NOTE: Do not operate for long periods at low speed because excess heat will be produced internally. When overload occurs, release the on/off switch immediately to avoid the motor overheating.

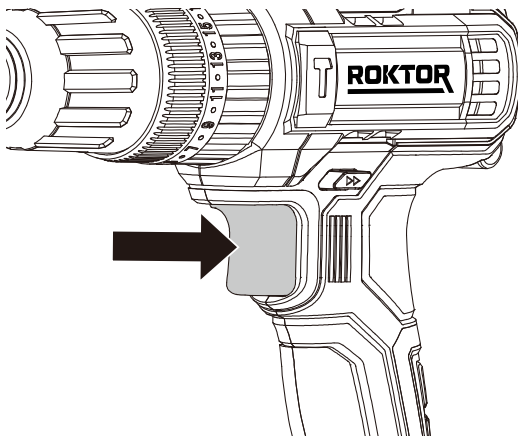


Figure 7

4. TORQUE ADJUSTMENT (SEE FIG. 8)

The torque is adjusted by rotating the torque adjustment ring. The torque is greater when the torque adjustment ring is set on a higher setting. The torque is less when the torque adjustment ring is set on a lower setting.

a. For the screwdriving function

To select the screwdriving function, rotate the function selection collar to align the screw symbol with the triangular indicator on the top of the drill housing.

To adjust the torque setting, rotate the torque adjustment ring to align the required torque setting number with the triangular indicator on the top of the drill. The higher the number, the higher the output torque.

b. For the drilling function

NOTE: When using the drilling function the torque control has no effect on the output of the drill.

To select the drilling function, rotate the function selection collar so the symbol of the drill bit aligns with the triangular indicator on the top of the drill housing.

The drilling function is used to drill holes in metal, non-ferrous material, wood, plastic and similar materials.

c. For the hammer function

NOTE: When using the hammer drilling function, the torque control has no effect on the output of the drill.

To select the hammer function, rotate the function selection collar so the symbol of the hammer function aligns with the triangular indicator on the top of the drill housing.

Make the setting as follows:

	1-4 for driving small screws
	5-8 for driving screws into soft material
	9-12 for driving screws into soft and hard material
	13-16 for driving screws into hard wood
	17-21 for driving larger screws
	for heavy drilling
	for drilling in masonry and concrete

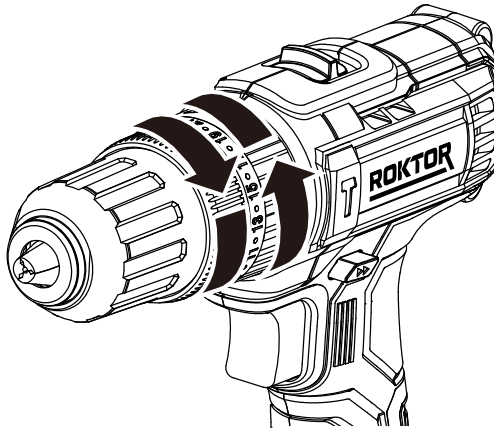


Figure 8

5. TWO-SPEED GEAR CONTROL (SEE FIG. 9)

The drill has a two-speed gear control designed for drilling or driving at LO (mark is 1) or HI (mark is 2) speeds. A slide switch is located on top of the tool to select either LO or HI speed.

When using the drill in the LO speed range, the speed will decrease and the drill will have greater power and torque. When using the drill in the HI speed range, the speed will increase and the drill will have less power and torque.

GEAR I

Low speed range: for screwdriving or working with large drilling diameters.

GEAR II

High speed range: for working with small drilling diameters.



WARNING: To prevent gear damage, always allow the chuck to come to a complete stop before changing the direction of rotation or the two-speed gear control.

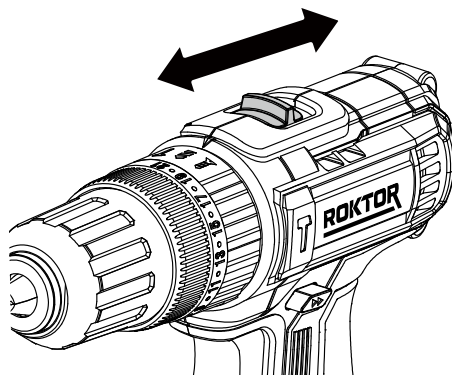


Figure 9

6. USING THE LED LIGHT

The LED light allows you to keep a clear view under less illuminated circumstances. To turn on the light, simply press the on/off switch. When you release the on/off switch, the light will be off.

7. DRILLING

When drilling into a hard smooth surface, use a centre punch to mark the desired hole location. This will prevent the drill bit from slipping off centre as the hole is started. Hold the tool firmly and place the tip of the bit at the point to be drilled. Depress the on/off switch to start the tool. Move the drill bit into the workpiece, applying only enough pressure to keep the bit cutting. Do not force or apply side pressure to elongate a hole.



WARNING: Tungsten carbide drill bits should always be used for concrete and masonry.

When drilling in metal, only use HSS drill bits in good condition. Always use a magnetic bit holder (not included) when using short screwdriver bits. When screwdriving, apply a small quantity of liquid soap or similar to the screw threads to ease insertion.

8. OVERLOAD PROTECTION

When overloaded, the motor comes to a stop. Relieve the load on the machine immediately and allow cooling for approx. 30 seconds at the highest no-load speed.

9. TEMPERATURE DEPENDENT OVERLOAD PROTECTION

When used as intended, the power tool cannot be subject to overload. When the load is too high or the allowable battery temperature of 75°C is exceeded, the electronic control switches off the power tool until the temperature is in the optimum temperature range again.

10. PROTECTION AGAINST DEEP DISCHARGING

The Li-ion battery is protected against deep discharging by the "Discharging Protection System". When the battery is empty, the machine is switched off by means of a protective circuit: The inserted tool no longer rotates.

CARE AND CLEANING

Remove the battery pack from the machine before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

For battery tools:

The ambient temperature range for tool and battery use and storage is 0°C-45°C.

The recommended ambient temperature range for the charging system during charging is 0°C-40°C.

- Remove the battery pack and allow the tool rotation to stop.
- Use a slightly damp cloth to clean the enclosure. Do not allow water to enter the tool.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with a soft cloth. If the dust is difficult to wipe away, rub it with soapy water.
- Store the tool and battery pack in a dry, frost-free place, away from direct sunlight and heat sources.
- **WARNING!** Remove the battery pack before cleaning.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The tool is not operating.	• Battery discharged. • Battery too hot/cold. • The forward/reverse rotation control is locked. • Motor is broken.	• Recharge battery. • Allow the battery to cool/warm. • Push the forward/reverse rotation control to left or right at first, then press the on/off switch. • Contact Customer Service Centre.
Reduced drilling power or speed	• Dull or damaged drill bit • Low battery power • Incorrect speed setting	• Replace or sharpen the drill bit. • Recharge battery. • Adjust the drill speed to match the material being drilled.
Chuck slipping or won't hold the bit	• Loose chuck • Damaged chuck	• Tighten the chuck securely. • Contact Customer Service Centre.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: CDI218D8

Product Description: 18V Cordless Combi Drill

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
- The Batteries and Accumulators (Placing on the Market) Regulations 2008 (as amended) and the Waste Batteries and Accumulators Regulations 2009 (as amended)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- Electrical Equipment (Safety) Regulations 2016

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):

- BS EN 62841-1
- BS EN 62841-2-1
- BS EN IEC 55014-1
- BS EN IEC 55014-2
- BS EN IEC 63000
- BS EN 62133-2
- BS EN 60335-1
- BS EN 60335-2-29
- BS EN 62233
- BS EN IEC 61000-3-2
- BS EN 61000-3-3

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China



ORIGINAL USER INSTRUCTIONS


18V CORDLESS COMBI DRILL & IMPACT DRIVER TWIN PACK

SKU: AJ056

18V CORDLESS IMPACT DRIVER

SKU: AJ049

MODEL: CID18D1

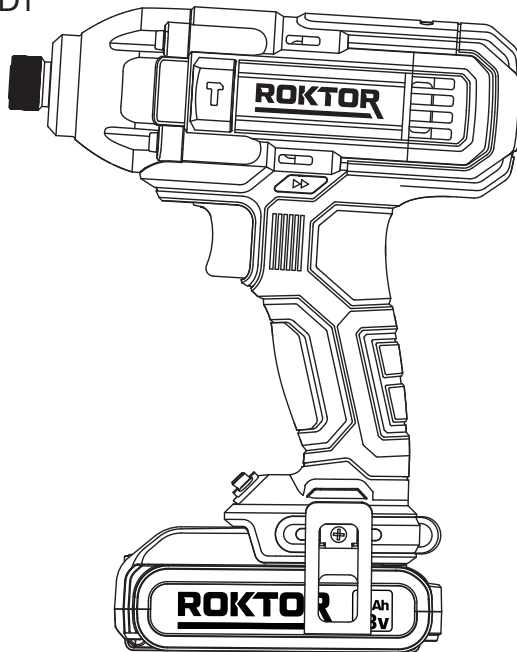

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

CONTENTS

• WHAT'S IN THE BOX-----	25
• SPECIFICATIONS-----	26
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	28
• IMPORTANT SAFETY WARNINGS-----	29
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	33
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	34
• CARE AND CLEANING-----	40
• TROUBLESHOOTING-----	40
• DECLARATION OF CONFORMITY / PERFORMANCE-----	41
• ENVIRONMENTAL INFORMATION-----	42
• WARRANTY-----	42
• CUSTOMER SUPPORT-----	44

WHAT'S IN THE BOX

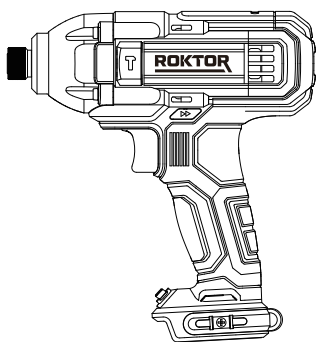


Impact driver



Belt clip



18V 2.0Ah battery

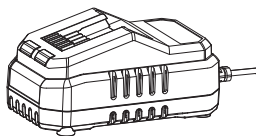

Charger 2.4A (Only one for kit)



User instruction manual

SPECIFICATIONS

- 18 V 
- Variable speed with reverse
- Metal gear box
- Rubber overmould grip

TECHNICAL DATA

Model	CID18D1
Voltage	18 V 
No-load speed	0-2,900 /min
Impact rate	0-3,000 bpm
Max. torque	180 Nm
Chuck capacity	1/4" (6.35mm) Hex
Battery pack	AJ038 (ABP1820TD5)
Charger	AJ069 (ACG1824D)
Weight approx.(kg)	1.7kg
A weighted sound pressure L_{pA} ($K_{pA}=3dB(A)$)	89.4dB(A)
A weighted sound power L_{wA} ($K_{wA}=3dB(A)$)	97.4dB(A)
Vibration emission value (Uncertainty $K=1,5m/s^2$)	$a_h = 12.9m/s^2$

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.



WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, especially what kind of workpiece is processed, dependent on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut or drilled.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti-vibration and noise accessories are used.
- The tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.



WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep it well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

SUITABLE BATTERY PACKS

Item number	AJ038 (ABP1820TD5)	AJ062 (ABP1840TD5)	AJ061 (ABP1850TD5)
Battery capacity	2.0Ah	4.0Ah	5.0Ah

SUITABLE CHARGERS

Item number	AJ069 (ACG1824D)	AJ067 (ACG1840D1)
Charger input	100-240V~50/60Hz, 60 W	100-240V~50/60Hz, 100 W
Charger output	20V  2.4A	20V  4.0A
Charger protection class	 /II	 /II

Suitable battery packs or chargers are available on <https://www.toolstation.com>



WARNING: Only use genuine Toolstation battery packs listed above. Use of unapproved batteries may result in fire, explosion or electric shock.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read the instruction manual



Risk of damage or injury if the instructions in this manual are not followed



Wear eye protection



Wear ear protection



Wear a dust mask



Batteries may enter water cycle if disposed improperly, which can be hazardous for the ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn



Li-ion

Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



For indoor use only



Read the instruction manual



Positive terminal



Negative terminal

T 2.5A



Fuse



Double insulation



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce the risk of injury, user must read the instruction manual

GENERAL SAFETY RULES FOR POWER TOOL



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
 - e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
 - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
 - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
 - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*
- 4) Power tool use and care**
- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
 - b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
 - c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
 - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
 - e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
 - f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
 - g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
 - h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
- 5) Battery tool use and care**
- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
 - b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
 - c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
 - d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
 - e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*

- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
 - g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6) **Service**
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
 - b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorised service providers.*

IMPACT DRIVER SAFETY WARNINGS

- 1) **Hold the power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring.** *Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*

SAFETY WARNINGS FOR BATTERY PACK

- a) **Do not dismantle, open or shred cells or battery pack.**
- b) **Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.** *When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.*
- c) **Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.**
- d) **Do not subject battery pack to mechanical shock.**
- e) **In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.**
- f) **Keep battery pack clean and dry.**
- g) **Wipe the battery pack terminals with a clean dry cloth if they become dirty.**
- h) **Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.**
- i) **Do not maintain battery pack on charge when not in use.**
- j) **After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.**
- k) **Recharge only with the charger specified by manufacturer. Do not use any charger other than that specifically provided for use with the equipment.**
- l) **Do not use any battery pack which is not designed for use with the equipment.**
- m) **Keep battery pack out of the reach of children.**
- n) **Retain the original product literature for future reference.**
- o) **Remove the battery from the equipment when not in use.**
- p) **Dispose of properly.**
- q) **Do not mix cells of different manufacturers, capacity, size or type within a device.**
- r) **Keep the battery away from microwaves and high pressure.**
- s) **Warning! Do not use non-rechargeable batteries.**
- t) **The normal temperature range for charging the battery is 0-40°C.**
- u) **Do not expose the appliance or battery to excessive temperatures.**

SAFETY WARNINGS FOR BATTERY CHARGER



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger is matching the local AC supply.
5. For indoor use, or do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity "+/-" when charging.
10. Do not open the unit and keep out of the reach of children.
11. Do not charge the batteries of other manufacturers or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

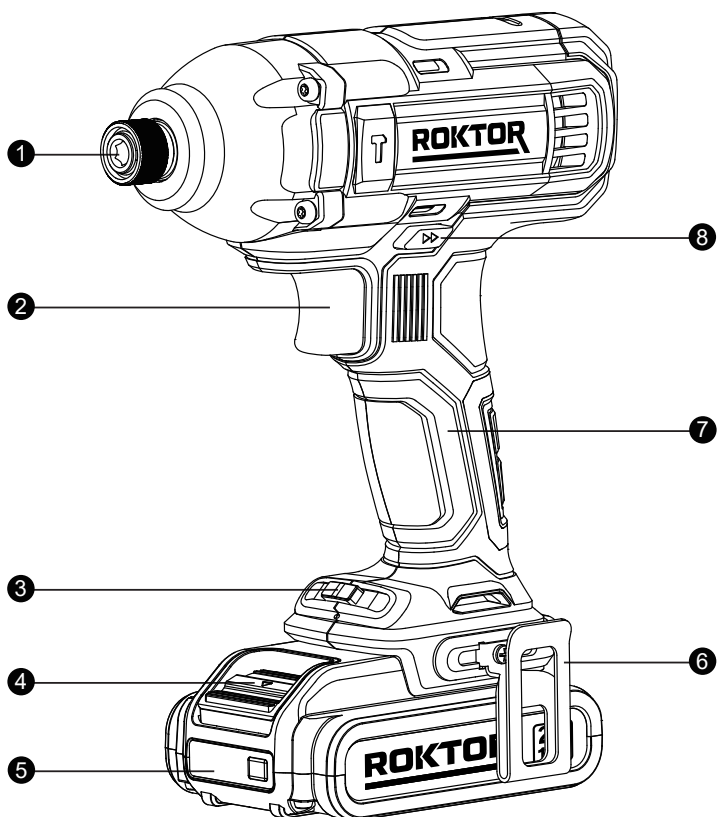

1. Collet locking sleeve
2. On/off switch with variable speed control
3. LED light
4. Battery pack release button
5. Battery pack
6. Belt clip
7. Soft grip handle
8. Forward/reverse rotation control

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

The tool is packaged with some parts that are unattached and require a little simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached.

ASSEMBLY

1. CHARGING THE BATTERY PACK (SEE FIG. 1)

1) Plug the charger into an appropriate outlet.

2) Slide the battery pack into the charger. The light will become green and flash to show charging has started. After fully charged, the green light stays on.

NOTE: If the battery pack is locked in the charger, press the battery pack release button and remove it.

NOTE: Do not use any charger other than that specifically provided for use with the equipment. If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.

Please charge the battery to reach full before storage. If the tool will not be used for long periods of time, charge the battery every 3 months.



WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full charge. Do not charge the battery on flammable surfaces or near combustible materials.

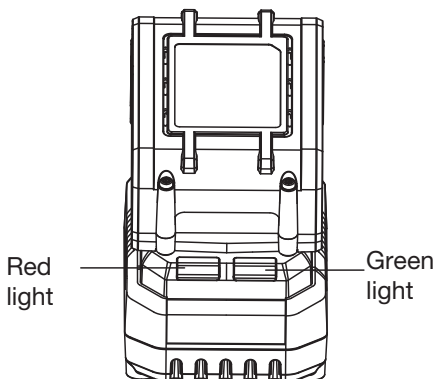


Figure 1

2. REMOVING OR INSTALLING BATTERY PACK (SEE FIG. 2-1 & 2-2)

Depress the battery pack release button to release and slide the battery pack out of your tool. After recharging, slide it back into your tool. A simple push and slight pressure will be sufficient.

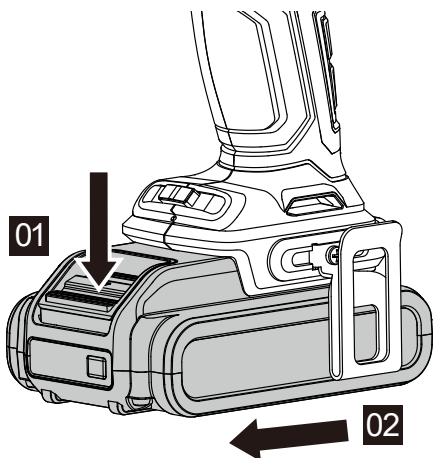


Figure 2-1

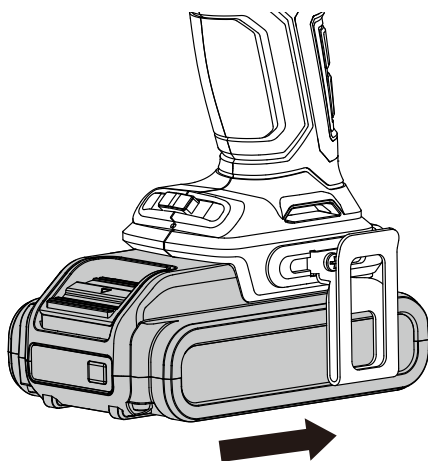


Figure 2-2

3. INSERTING & REMOVING THE BIT (NOT SUPPLIED) (SEE FIG. 3-1 & 3-2)

To insert the screwdriver bit, pull the collet locking sleeve forward first, then fully insert the bit into the collet and release the chuck sleeve.



WARNING: Try to pull the bit after releasing the collet locking sleeve to make sure the bit is fully locked in the collet.

To remove the screwdriver bit, pull the collet locking sleeve forward first, then remove the bit from the collet and release the chuck sleeve.

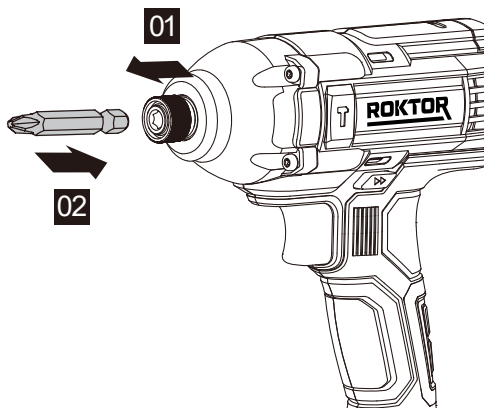


Figure 3-1

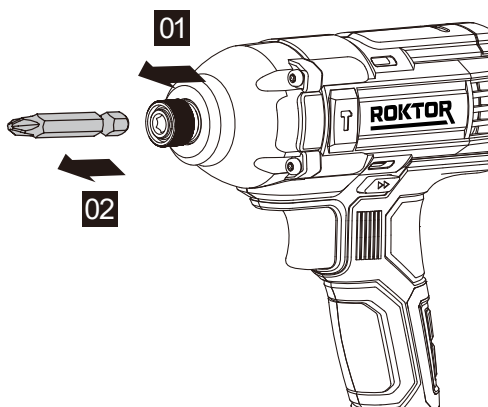


Figure 3-2

4. USING BELT CLIP (SEE FIG. 4)

Tighten the belt clip on the tool with the screw. The belt clip can be hooked on your belt or pocket, etc.

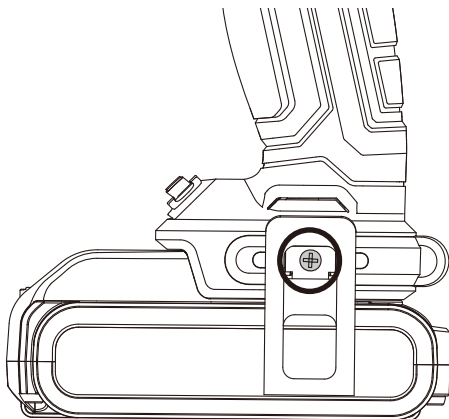


Figure 4

OPERATION

INTENDED USE

The machine is intended for fastening and loosening of bolts, nuts and various threaded fasteners. This tool is not intended for use as a drill.

1. SWITCH LOCK (SEE FIG. 5)

The on/off switch can be locked in the OFF position. This helps to reduce the possibility of accidental starting when not in use.

To lock the switch, place the forward/reverse rotation control in the centre position.

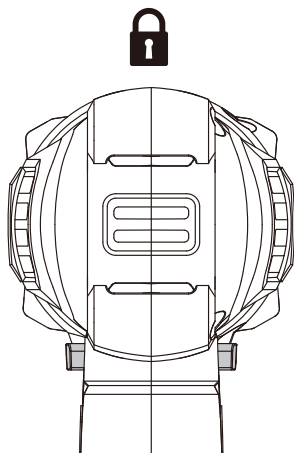


Figure 5

2. FORWARD / REVERSE ROTATION CONTROL (SEE FIG. 6-1 & 6-2)

Forward rotation: push the forward/reverse rotation control to the left (the driver points away from you). It is used for driving screws or tightening bolts.

Reverse rotation: push the forward/reverse rotation control to the right (the driver points away from you). It is used for removing screws or loosening bolts.



WARNING: Never change the direction of rotation when the chuck is rotating, wait until it has stopped!

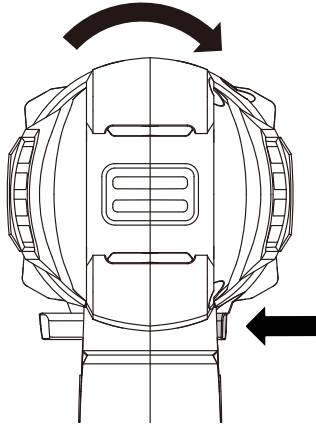


Figure 6-1

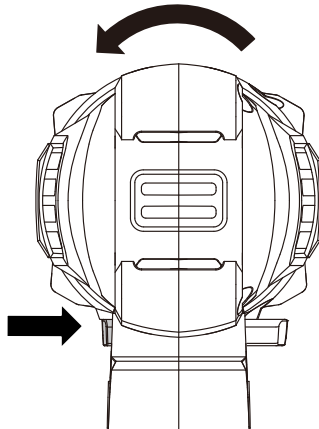


Figure 6-2

3. ON/OFF SWITCH (SEE FIG. 7)

Depress the on/off switch to start and release it to stop your tool.

The on/off switch is fitted with a brake function which stops your chuck immediately when you quickly release the switch. It is also a variable speed switch that delivers higher speed and torque with increased trigger pressure. Speed is controlled by the amount the switch trigger is depressed.

NOTE: The on/off switch can only be activated by pushing the rotation control to the left or right side.



WARNING: Do not operate for long periods at low speed, because excess heat will be produced internally.

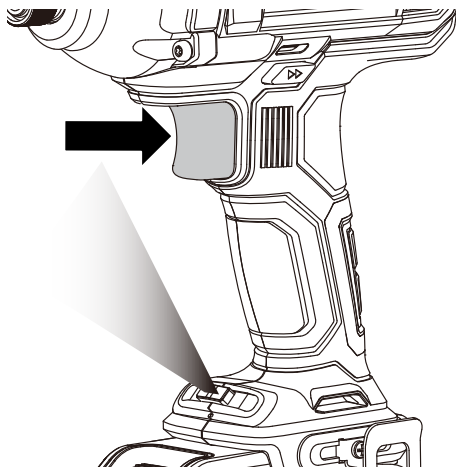


Figure 7

4. USING THE LED LIGHT (SEE FIG. 7)

To turn on the light, simply press the on/off switch. When you release the on/off switch, the light will be off. LED lighting increases visibility in dark or enclosed areas.

5. OVERLOAD PROTECTION

When overloaded, the motor comes to a stop. Relieve the load on the machine immediately and allow cooling for approximately 30 seconds at the highest no-load speed.

6. TEMPERATURE DEPENDENT OVERLOAD PROTECTION

When used as intended, the power tool cannot be subject to overload. When the load is too high or the allowable battery temperature is too hot, the electronic control switches off the power tool until the temperature is in the optimum temperature range again.

7. PROTECTION AGAINST DEEP DISCHARGING

The Li-ion battery is protected against deep discharging by the "Discharging Protection System". When the battery is empty, the machine is switched off by means of a protective circuit: The inserted tool no longer rotates.

CARE AND CLEANING

Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

For battery tools:

The ambient temperature range for tool and battery use and storage is 0°C-45°C.

The recommended ambient temperature range for the charging system during charging is 0°C-40°C.

- Remove the battery pack and allow the tool rotation to stop.
- Use a slightly damp cloth to clean the enclosure. Do not allow water to enter the tool.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with a soft cloth. If the dust is difficult to wipe away, rub it with soapy water.
- Store the tool and battery pack in a dry, frost-free place, away from direct sunlight and heat sources.
- **WARNING!** Remove the battery pack before cleaning.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The tool is not operating.	• Battery discharged. • Battery too hot/cold. • Motor is broken. • Internal wiring of machine damaged.	• Recharge battery. • Allow the battery to cool/warm. • Contact Customer Service Centre. • Contact Customer Service Centre.
Overheating during use	• Prolonged operation without breaks. • Dust or debris blocking airflow.	• Let the driver rest periodically during heavy use. • Clean the vents regularly.
Low power or weak impact	• Battery power is low • Internal damage	• Recharge or replace the battery • Contact Customer Service Centre.
Driver stops during use	• Battery protection activated • Tool overheated	• Let the driver rest and wait to cool • Let the driver rest and cool down, or clean the ventilation slots regularly
Bit keeps slipping or falling out	• Bit not properly inserted • Worn-out bit • Impact mechanism not engaging	• Reinsert bit securely • Replace worn bit • Contact Customer Service Centre.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: CID18D1

Product Description: 18V Cordless Impact Driver

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
- The Batteries and Accumulators (Placing on the Market) Regulations 2008 (as amended) and the Waste Batteries and Accumulators Regulations 2009 (as amended)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- Electrical Equipment (Safety) Regulations 2016

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):

- BS EN 62841-1
- BS EN 62841-2-2
- BS EN IEC 55014-1
- BS EN IEC 55014-2
- BS EN IEC 63000
- BS EN 62133-2
- BS EN 60335-1
- BS EN 60335-2-29
- BS EN 62233
- BS EN IEC 61000-3-2
- BS EN 61000-3-3

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China