


## WD 4 / WD 4 S / WD 4 P / WD 4 PS KWD 4 / KWD 4 S / KWD 4 P / KWD 4 PS

English

العربية

5



12












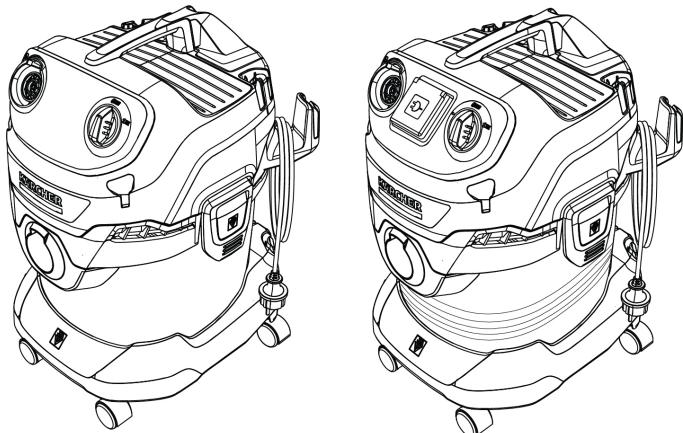














Register  
your product  
[www.kaercher.com/welcome](http://www.kaercher.com/welcome)



59512400 (09/23)

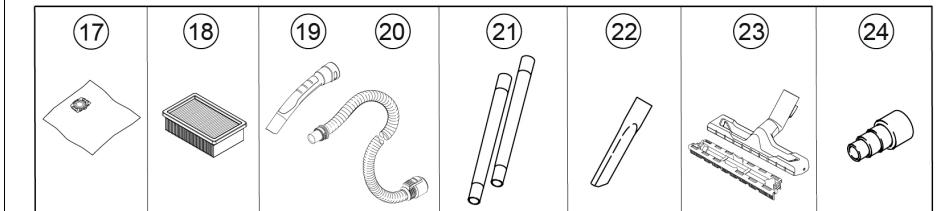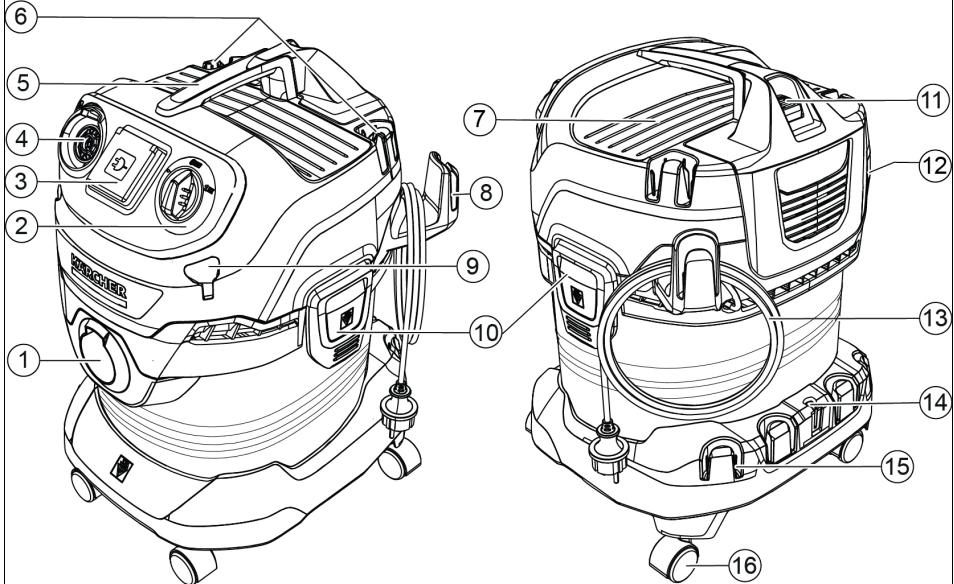**A****WD 4 P S / KWD 4 P S**

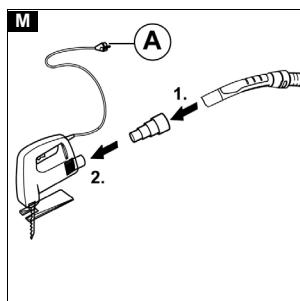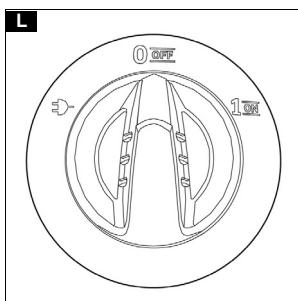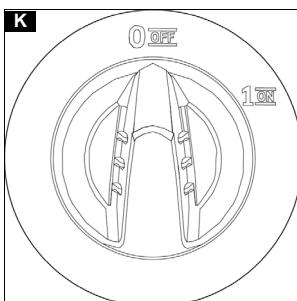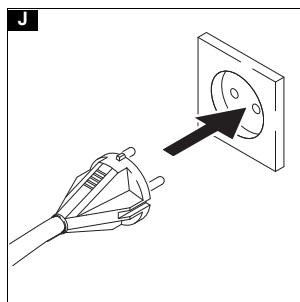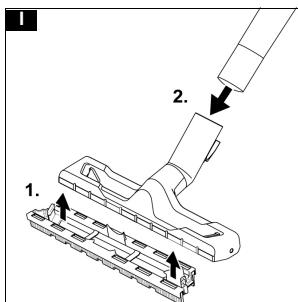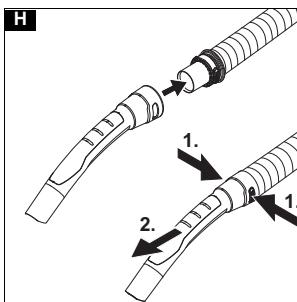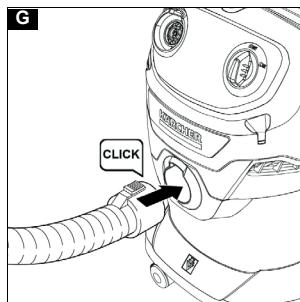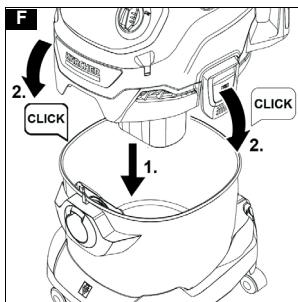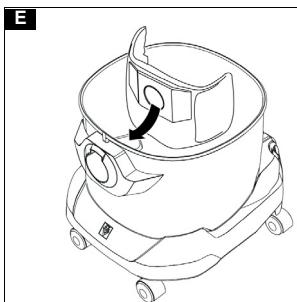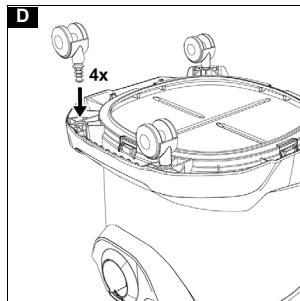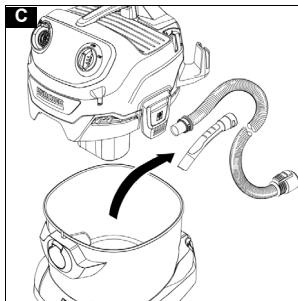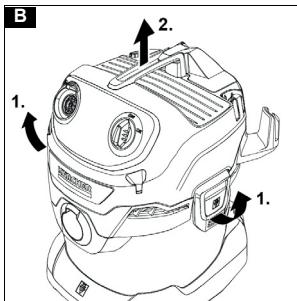

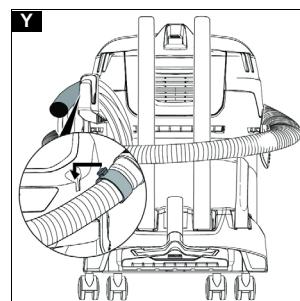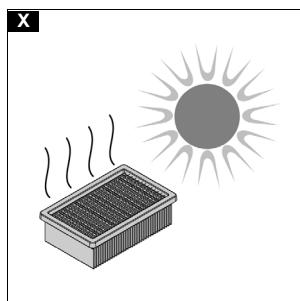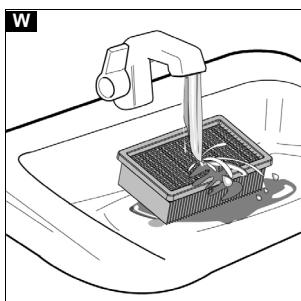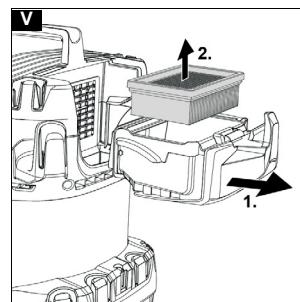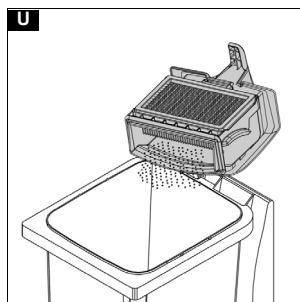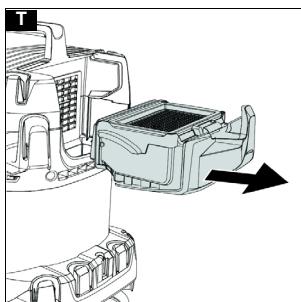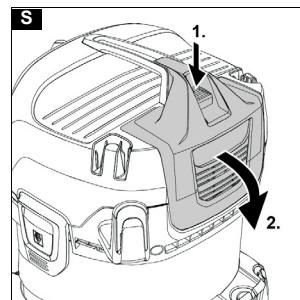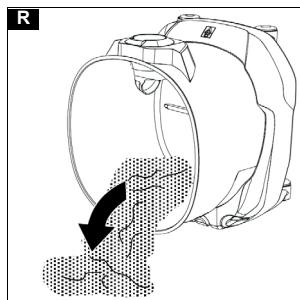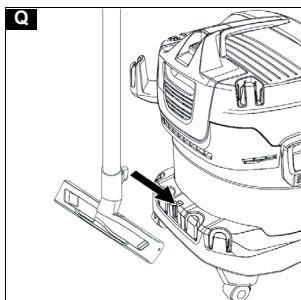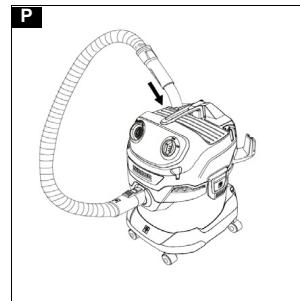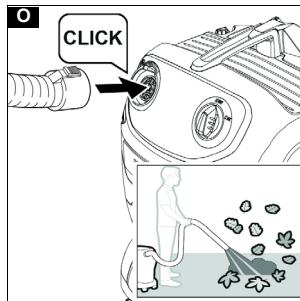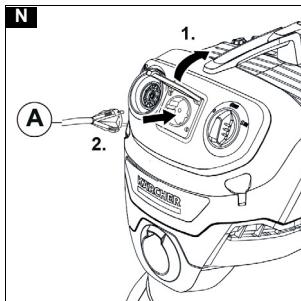

## Safety instructions



Read these safety instructions and the original instructions before using the device for the first time. Act in accordance with them. Keep the book for future reference or for future owners.

- In addition to the notes in the operating instructions, you also need to take into consideration the general safety regulations and accident prevention guidelines applicable by law.
- Warnings and information notices attached to the device provide important information for hazard-free operation.

### Hazard levels

#### ⚠ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

#### ⚠ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

#### ⚠ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

#### ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

### General safety instructions

⚠ DANGER • Risk of asphyxiation. Keep packaging film out of the reach of children.

⚠ WARNING • Only use the device for its proper use. Take into account the local conditions and beware of third parties, in particular children, when working with the device. • Persons with reduced physical, sensory or mental capabilities and persons lacking experience and knowledge may only use the appliance if they are properly supervised, have been instructed on use of the appliance safely by a person responsible for their safety, and understand the resultant hazards involved. • Only people who have been instructed on how to use the device, or have proven their ability to operate it, and have been explicitly instructed to use it, must use the device. • Children must not operate the device. • Children from the minimum age of 8 may use the appliance if they are properly supervised or have been instructed in its use by a person responsible for their safety, and if they have understood the resultant hazards involved. • Children must be supervised to prevent them from playing with the appliance. • Children may only perform cleaning work and user maintenance under supervision.

⚠ CAUTION • Safety devices are provided for your own protection. Never modify or bypass safety devices.

### Risk of electric shock

⚠ DANGER • Only connect the device to alternating current. The voltage indicated on the type plate must match the voltage of the power source. • Never touch the mains plug and socket with wet hands. • Only operate the device via a fault current protection switch (maximum 30 mA). • Do not immerse the device in water.

⚠ WARNING • Only connect the device to an electrical connection which has been set up by a quali-

fied electrician as per IEC 60364-1. • Check the power supply cable with mains plug for damage before operation each time. Do not put the device into operation with a damaged power supply cable. Have a damaged power supply cable replaced immediately by the authorised customer service / qualified electrician. • Do not damage the power supply and extension cable by running over it, crushing or yanking it or similar. Protect the power supply cable from heat, oil and sharp edges.

⚠ CAUTION • In case of longer breaks in operation and after use, switch off the device at the main switch / device switch and pull the mains plug. • Switch off the device and unplug the mains plug before performing cleaning/maintenance. • When using the device, pull the power supply cable fully out of the device. If the cable is wrapped around the cable hook, you must undo it completely. • Do not carry/transport the device using the power supply cable. • Do not pull the mains plug out of the socket using the power supply cable.

### Wet vacuum cleaning

#### ⚠ WARNING

- In case of any foam formation or escaping liquids, switch off the device immediately and remove the mains plug.

### Operation

#### ⚠ DANGER

- Operation in explosive atmospheres is prohibited.
- Risk of explosion
- Never use the device to vacuum up combustible gases, liquids or dusts.
- Never use the device to vacuum up reactive metal dusts (e.g. aluminium, magnesium, zinc).
- Never use the device to vacuum up undiluted brine or acids.
- Never use the device to vacuum up any burning or smouldering objects/matter.

These substances can corrode the materials in use on the device.

#### ⚠ WARNING

- Risk of injury. Do not use the nozzle and suction pipe at head height.

#### ⚠ CAUTION

- Never leave the device unsupervised while it is in operation.
- Accidents or damage due to the device falling over. Before all actions with or on the device, you must make sure that it is stable.

#### ATTENTION

- Protect the device from extreme weather conditions, moisture and heat.
- Never use the device without a filter, this can lead to device damage.

### Care and service

#### ⚠ WARNING

- Switch off the device immediately and remove the mains plug before performing any care and service work.

#### ⚠ CAUTION

- Have repair work and work on electrical components carried out by the authorised customer service only.

## **ATTENTION**

- Do not use scouring agents, glass or multi-purpose cleaner for cleaning.

## **Transport**

### **⚠ CAUTION**

- In order to prevent accidents or injuries, you must observe the weight of the device when transporting it.

## **Intended use**

Only use the device in private households.

In accordance with the descriptions and the safety information in these operating instructions, the device is intended for use as a wet and dry vacuum cleaner.

Cold ashes may only be vacuumed with suitable accessories.

Protect the device from rain and do not store it outdoors.

### **Note**

The manufacturer accepts no liability for possible damage caused by improper use or incorrect operation.

## **Environmental protection**

 The packing materials can be recycled. Please dispose of packaging in accordance with the environmental regulations.

 Electrical and electronic devices contain valuable, recyclable materials and often components such as batteries, rechargeable batteries or oil, which - if handled or disposed of incorrectly - can pose a potential danger to human health and the environment. However, these components are required for the correct operation of the device. Devices marked by this symbol are not allowed to be disposed of together with the household rubbish.

### **Notes on the content materials (REACH)**

Current information on content materials can be found at: [www.kaercher.de/REACH](http://www.kaercher.de/REACH)

## **Accessories and spare parts**

Only use original accessories and original spare parts. They ensure that the appliance will run fault-free and safely.

Information on accessories and spare parts can be found at [www.kaercher.com](http://www.kaercher.com).

## **Scope of delivery**

The scope of delivery for the appliance is shown on the packaging. Check the contents for completeness when unpacking. If any accessories are missing or in the event of any shipping damage, please notify your dealer.

## **Warranty**

The warranty conditions issued by our sales company responsible apply in all countries. We shall remedy possible malfunctions on your device within the warranty period free of cost, provided that a material or manufacturing defect is the cause. In a warranty case, please contact your dealer (with the purchase receipt) or the next authorised customer service site.  
(See overleaf for the address)

## **Description of the device**

The illustration of the description of the device show the device with the best possible equipment (WD 4 P S / KWD 4 P S).

Depending on the model selected, there are differences in the equipment. The specific equipment is described on the device packaging.

For the illustrations, refer to the graphics page.

### **Illustration A**

- ① Suction hose connection
- ② Turn switch
- ③ Device socket
- ④ Blowing function
- ⑤ Carrying handle
- ⑥ Parking position handle / accessory holder
- ⑦ Storage area
- ⑧ Cable hook
- ⑨ Hose storage (both sides)
- ⑩ Container closure
- ⑪ Filter box with unlocking button
- ⑫ Rating plate with technical data (e.g. container size)
- ⑬ Mains connection with mains plug
- ⑭ Parking position for floor nozzle
- ⑮ Accessory storage
- ⑯ Steering roller
- ⑰ Filter bag
- ⑱ Flat pleated filter
- ⑲ Removable handle
- ⑳ Suction hose with connection piece
- ㉑ Suction tubes 2 x 0.5 m
- ㉒ Crevice nozzle
- ㉓ Floor nozzle
- ㉔ \*\* Adapter for connecting power tools

\*\* optional

## **Installing the steering rollers**

1. Before initial startup, remove the contents from the container and mount the steering rollers.

### **Illustration B**

### **Illustration C**

### **Illustration D**

### **Note**

For versions with stainless steel tubes, remove the protective cover before initial startup.

## **Initial startup**

### **Inserting the filter bag**

1. Fully unfold the filter bag.
2. Attach the filter bag to the device connection and press it on firmly.
3. Fit and lock the device head.

### **Illustration E**

### **Illustration F**

### **Note**

We recommend using a filter bag to vacuum fine dust.

## Installing the hose, pipes, floor nozzle

1. Connect the suction hose.  
**Illustration G**
2. Connect the suction hose to the handle.  
**Illustration H**

### Note

For convenient vacuuming in confined spaces, the handle can be removed, and the accessories plugged directly onto the suction hose.

To release the handle, the grey areas on both sides of the handle must be pressed, and the handle pulled from the hose.

3. Install the floor nozzle.
  - Install the insert in the floor nozzle.
  - Connect the floor nozzle to the suction pipes.

## Illustration I

## Starting up the device

1. Plug the mains plug into the socket.

## Illustration J

### Devices without a socket

2. Set the trigger into the desired position.

## Illustration K

- Position "1 ON": The suction / blower function is activated.
- Position "0 OFF": The device is switched off.

### Devices with a socket

3. Set the trigger into the desired position.

## Illustration L

- Position "1 ON": The suction / blower function is activated.
- Position : When the power tool is connected, the suction is activated automatically.
- Position "0 OFF": The device is switched off.

### Note

As long as the device is supplied with power, the device socket can be used as a power source.

### Note

Limited for Switzerland only: The socket outlet shall only be used during operation in dry condition.

## Operation

### ATTENTION

#### Flat pleated filter missing

##### Device damage

Always work with the flat pleated filter inserted.

##### Note

Pay attention to the latest part numbers when purchasing and installing filter bags and flat pleated filters.

Information on accessories and spare parts can be found at [www.kaercher.com](http://www.kaercher.com).

## Dry vacuuming

### ATTENTION

#### Vacuuming cold ashes

##### Device damage

Only vacuum cold ash with an ash pre-separator.

### ATTENTION

#### Defective or wet flat pleated filter

##### Device damage

Before initial startup, check the flat pleated filter for damage and replace it if necessary.

Only vacuum with a dry flat pleated filter.

##### Note

Replace the filter bag in good time, as a filter bag that is too full could be damaged. The fill degree of the filter bag depends on the amount of dirt vacuumed. The filter

bag should be replaced more frequently when vacuuming fine dust, sand, etc.

## Wet vacuuming

### ATTENTION

#### Wet vacuuming with a filter bag

##### Device damage

Do not use a filter bag when vacuuming wet.

### ATTENTION

#### Operation with full container

When the container is full, a float switch closes the suction opening and the device runs at a higher speed. Switch off the device immediately and empty the container.

##### Note

If the device falls over, the float can also close. To make the device capable of vacuuming again, set up the device, switch it off, wait 5 seconds and then switch it on again.

## Working with power tools (only for devices with a built-in socket)

### ⚠ CAUTION

#### Unintentional starting of the power tool

##### Injury or property damage

Make sure that the power tool is ready for operation as soon as it is connected to the device socket.

1. Connect the suction hose.

## Illustration G

2. If necessary, adjust the adapter to the connection diameter of the power tool using a suitable tool.
3. Put the adapter on the handle of the suction hose.
4. Mount the suction hose with the adapter on the power tool.

## Illustration M

5. Plug the mains plug of the power tool into the device socket.

## Illustration N

6. Set the trigger to .

## Illustration L

The suction is activated automatically.

##### Note

Note the maximum connected load (see information on the device socket).

##### Note

As soon as the power tool is switched on, the suction turbine starts up with a 0.5 second delay. If the power tool is switched off, the suction turbine continues to run for approx. 5 seconds in order to suck in the residual dirt dirt in the suction hose.

## Blower function

The blower function can be used to clean areas that are difficult to reach or where vacuuming is not possible, e.g. leaves in a gravel bed.

- Insert the suction hose into the blower connection. The blower function is now activated.

## Illustration O

## Interrupting operation

1. Set the trigger to "0 OFF".  
The device is switched off.
2. Variant 1: Place the handle of the suction hose in the intermediate parking position.

## Illustration P

Variant 2: Attach the floor nozzle in the parking position.

## Illustration Q

## **Ending operation**

1. Set the trigger to "0 OFF".  
The device is switched off.
2. Pull out the mains plug.
3. Remove the device head.  
**Illustration B**
4. Empty the container.  
**Illustration R**
5. Storage possibility:  
**Illustration Y**

### **Note**

*The suction hose can be wrapped around the device head and attached to the device head with the help of the hose collar.*

6. Store the device in a dry and frost-proof room.

## **Technical data**

### **Note**

*The technical data can be found on the type plate.*

## **Care and service**

### **General care instructions**

- Clean the device and plastic accessory parts with a commonly available plastic cleaner.
- Rinse the container and accessories with water, as necessary, and dry them before further use.

### **Clean the filter box / flat pleated filter**

1. Unlock the filter box and fold it out.  
**Illustration S**

2. Remove the filter box.  
**Illustration T**

3. Empty the filter box into a waste container. In the case of heavy soiling, tap the filter box against the edge of the waste container. The flat pleated filter does not have to be removed from the filter box.  
**Illustration U**

If necessary, clean the flat pleated filter separately.

4. To do this, remove the flat pleated filter from the filter box.  
**Illustration V**

5. Clean the flat pleated filter under running water. Do not rub or brush off.  
**Illustration W**

6. Allow the flat pleated filter to dry completely before reusing.  
**Illustration X**

### **Note**

*We recommend cleaning the flat pleated filter after each use.*

## **Troubleshooting guide**

Malfunctions often have simple causes that you can remedy yourself using the following overview. When in doubt, or in the case of malfunctions not mentioned here, please contact your authorised Customer Service.

### **Declining suction performance**

Accessories, the suction hose or the suction tubes are clogged.

- Remove the clog with a suitable aid.

The filter bag is full

- Replace the filter bag.

The flat pleated filter is dirty.

- Clean the flat pleated filter (see Chapter *Clean the filter box / flat pleated filter*).

The flat pleated filter is damaged.

- Replace the flat pleated filter.

## **مساعدة في حالة حدوث أعطال**

في الغالب تكون للاختلالات أسباب بسيطة يمكنك التغلب عليها ببساطة بالاستعانة بالعرض العام التالي. في حالات الشك أو عند حدوث اختلالات غير مذكورة هنا فيرجح التوجه إلى خدمة العملاء المعتمدة.

### **تقليل قوة الشفط**

الملحقات أو خرطوم الشفط أو أنابيب الشفط مسدودة.

- أزل الأنسداد باستخدام وسائل مساعدة مناسبة.
- الفلت الكيسى متصل.
- استبدل الفلت الكيسى.
- الفلت المطوى المسطح منته.
- نظف الفلت المطوى المسطح (انظر الفصل تطهير علبة الفلت) /الفلت المطوى المسطح.
- الفلت المطوى المسطح تالف.
- استبدل الفلت المطوى المسطح.

## **البيانات الفنية**

### **ارشاد**

يمكن العثور على البيانات الفنية على لوحة الموصفات.

3. أفرغ عليه الفلتر في سلة المهامات. إذا كانت شديدة الاتساخ، فاضغط على علبة المرشح مقابل حافة سلة القمامه. لا يجل إزالة الفلتر المطوى المسطح من علبة الفلتر.

### **صورة إيضاحية U**

إذا لزم الأمر، فقم بتنظيف الفلتر المطوى المسطح بشكل منفصل. وللقيام بذلك، أزل الفلتر المطوى المسطح من علبة الفلتر.

### **صورة إيضاحية 7**

5. نظف الفلتر المطوى المسطح تحت المياه الجارية. عدم استخدام الفرك أو التنظيف بالفرشاة.

### **صورة إيضاحية W**

6. انرك الفلتر المطوى المسطح يجف تماماً قبل إعادة استخدامه.

### **صورة إيضاحية X**

### **ارشاد**

نوصي بتنظيف الفلتر المطوى المسطح بعد كل استخدام.

- توصيل خرطوم الشفط.
  - صورة إيضاحية G**
  - 2. إذا لزم الأمر، فقم بتكييف المحلول وفقاً لقطر توصيل الأداة الكهربائية باستخدام أداة مناسبة.
  - 3. ضع المحلول على المقاييس اليدوي لخرطوم الشفط.
  - 4. ركب خرطوم الشفط بالمحلول على الأداة الكهربائية.
  - صورة إيضاحية M**
  - 5. أدخل قابس الشبكة للأداة الكهربائية في المقاييس.
  - صورة إيضاحية N**
  - 6. مفتاح الجهاز ي ينبغي أن يتم ضبطه.
  - صورة إيضاحية L**
  - يتم تشغيل الشفط تلقائياً.
- ارشاد**  
لأخطى الحد الأقصى للحمل المتصل (انظر المعلومات الموجودة على مقاييس الجهاز).

**ارشاد**  
يمجرد تشغيل الأداة الكهربائية، بينما توربين الشفط في العمل مع تأخير 0.5 ثانية، إذا تم إيقاف تشغيل الأداة الكهربائية، يستمر توربين الشفط في العمل لمدة 5 ثوانٍ تغرياً لشفط الأوساخ المتبقية في خرطوم الشفط.

### وظيفة النفخ

يمكن استخدام وظيفة النفخ لتسطيف المناطق التي يصعب الوصول إليها أو حيث يتعدى التنظيف بالمكبس الكهربائية، مثل أوراق النجف في طقة الأرض.

- أدخل خرطوم الشفط في وصلة المنفخ. وظيفة النفخ مفعلة الآن.

**صورة إيضاحية O**

### قطع عملية التشغيل

- 1. انقل مفتاح الجهاز إلى الوضع "OFF".
- الجهاز متوقف.
- 2. الاصدار 1: ضع المقاييس اليدوي لخرطوم الشفط في حامل الركن المتوسط
- الاصدار 2: قم بتعليق فوهة الأرضية في حامل الركن.
- صورة إيضاحية Q**

### إيقاف التشغيل

- 1. انقل مفتاح الجهاز إلى الوضع "OFF".
  - الجهاز متوقف.
  - 2. تنزع قابس الشبكة.
  - 3. أزل رأس الجهاز.
  - صورة إيضاحية B**
  - 4. قم بفك الوعاء.
  - صورة إيضاحية R**
  - 5. خارج التخزين.
  - صورة إيضاحية Y**
- ارشاد**

يمكن لف خرطوم الشفط حول رأس الجهاز وتوصيله برأس الجهاز بمساعدة طوق الخرطوم.

- 6. احرص على تخزين الجهاز في غرفة جافة وآمنة ضد الصدمة.

## العناية والصيانة

### تعليمات العناية العامة

- نظف الجهاز وأجزاء الملحقات البلاستيكية باستخدام منظف بلاستيك شائع الاستخدام.
- اشطف الحاجوة والملحقات بالماء، حسب اللزوم، وجففها قبل الاستخدام مرة أخرى.

### تنظيف علبة الفلتر/الفلتر المطوى المسطح

- 1. افتح علبة الفلتر وقم بطيئها للخارج.
- صورة إيضاحية S**
- 2. أزل علىة الفلتر.
- صورة إيضاحية T**

● الوضع "OFF": الجهاز متوقف.

**الجهاز المزود بمقاييس**  
3. أضيّص المقاييس اليدوي إلى الموضع المرغوب.

**صورة إيضاحية L**

● الوضع "ON": تم تشغيل وظيفة الشفط/النفخ.

● الوضع : عند توصيل الأداة الكهربائية، يتم تشغيل نظام الشفط تلقائياً.

● الوضع "OFF": الجهاز متوقف.

**ارشاد**  
طالما أن الجهاز مزود بالطاقة، يمكن استخدام مقاييس الجهاز كمصدر للطاقة.

**ارشاد**  
 صالح لسوسيرا فقط: يجب استخدام المقاييس فقط أثناء التشغيل في محيط جاف.

## التشغيل

### تنبيه

**الفلت المطوى المسطح مفروم**

تضرك الجهاز

اعمل دائماً مع إدخال الفلتر المطوى المسطح.

### تنبيه

اشتري عند شراء أكياس الفلتر والفلتر المطوى إلى أرقام القطع

الحالية.

تجد المعلومات الخاصة بالملحقات التكميلية وقطع الغيار على

الموقع [www.kaercher.com](http://www.kaercher.com).

## الشفط الجاف

### تنبيه

**كتس الأثير الباردة**

تلف الجهاز

افتصر على كتس الأثير الباردة باستخدام فاصل الأثير الأولى.

### تنبيه

**الفلت المطوى المسطح تالف أو رطب**

تضرك الجهاز

قبل إدخال التشغيل، افحص الفلتر المطوى المسطح بحثاً عن التلف

واستبدل إذا لزم الأمر.

نظف بالمكبس الكهربائية الفلتر المطوى المسطح الجاف فقط.

### تنبيه

استبدل الفلتر الكيسى في الوقت المناسب، لأن الفلتر الكيسى

الممليطن للغاية قد يتلف.

يتعلق امتداء الفلتر الكيسى بالأوساخ التي

تم شفطها. يجب أن يتم استبدال الفلتر الكيسى بشكل متكرر عند

استخدامه لشفط الغيار والرمل وما إلى ذلك.

## الشفط الرطب

### تنبيه

**الكتس الرطب بكيس الفلتر**

تلف الجهاز

لا تستخدم كتس الفلتر عند التطهير الرطب بالمكبس الكهربائية.

### تنبيه

**الكتس الرطب بحاوية ممتنة**

عندما تكون الحاوية ممتنة، يغلق المفتاح العوامة فتحة الشفط

ويعمل الجهاز بسرعة أعلى.

أغلق الجهاز قفراً وأفرغ الحاوية.

### تنبيه

إذا سقط الجهاز، فقد تتلف العوامة أيضاً. ليكون الجهاز قادرًا على

التطهير مرة أخرى، اضيّص الجهاز وأوقف تشغيله وانتظر 5 ثوانٍ ثم

اعد تشغيله مرة أخرى.

**العمل مع الأدوات الكهربائية (فقط للأجهزة ذات المدمج)**

### ▲ تنبيه

**بعد التشغيل غير المقصود للأداة الكهربائية**

إصابة أو ضرر في الممتلكات

تأكد من أن الأداة الكهربائية جاهزة للاستخدام بمجرد توصيلها

بال المقاييس.

## الغرض من الاستخدام

- ١٠ سداد الوعاء  
١١ عملية فلتر مزودة برب تحرير  
١٢ لوجة مواصفات مزودة ببيانات الفنية (مثل حجم الوعاء)  
١٣ وصلة الشبكة مع قابس الشبكة  
١٤ فوهة أرضية لحامل الركن  
١٥ مكان إدخال الملحقات  
١٦ عجلة التوجيه  
١٧ فلتر كيسى  
١٨ فلتر مطوى مسطح  
١٩ مقبض يدوى قابل للفك  
٢٠ خرطوم شفط متعدد بموصل  
٢١ أنابيب شفط  $2 \times 0.5 \text{ م}$   
٢٢ فوهة الشفوط  
٢٣ فوهة الأرضية  
٢٤ \*\* محول لتوصيل الأدوات الكهربائية  
\*\* اختياري

## تركيب العجلات الدوارة

١. قبل الاستخدام لأول مرة، قم بإزالة المحتويات من الحاوية وقم بتركيب العجلات الدوارة.

B صورة إيضاحية  
C صورة إيضاحية  
D صورة إيضاحية

إرشاد  
بالنسبة للإصدارات المزودة بأنابيب فوئازية، يجب إزالة الغطاء الواقي قبل الاستخدام عند أول مرة.

## بعد التشغيل

### [دخول الفلتر الكيسى]

١. افتح الفلتر الكيسى بالكامل.
٢. قم بتركيب كيس الفلتر بوصلة الجهاز واضغط عليه بقوة.
٣. تركيب رأس الجهاز وتأمينه.

إرشاد  
توصي باستخدام فلتر كيسى لتنظيف الغبار الناعم.

### الخرطوم، الأنابيب، فوهة الأرضية

١. توصيل خرطوم الشفط.

E صورة إيضاحية

٢. توصيل خرطوم الشفط بالمقبض اليدوى.

F صورة إيضاحية

إرشاد  
للستعمال بمكبسه كهربائية مزروحة في الأماكن الضيقه، يمكن إزالة المقبض اليدوى وتوصيل الملحقات مباشرة بخرطوم الشفط.  
لتحرير المقبض اليدوى، اضغط على المانطاد الرمادي على جانبي المقبض اليدوى واسحب المقبض اليدوى بعيدا عن الخرطوم.

٣. تركيب فوهة الأرضية.
  - تركيب الملحق في فوهة الأرضية.
  - توصيل فوهة الأرضية بأنابيب الشفط.

A صورة إيضاحية

## تشغيل الجهاز

١. إدخال قابس الشبكة في المقبس.

L صورة إيضاحية

الجهاز بدون مقبس

٢. أضفط المقبض اليدوى إلى الموضع المرغوب.

K صورة إيضاحية

● الوضع "ON": تم تشطيط وظيفة الشفط/النفخ.

افتصر على استخدام الجهاز في المنزل.  
الجهاز مصمم للاستخدام كمكبسه كهربائية للتقطيف الربط والجاف  
وفقاً للشروط ومعلومات السلامة الواردة في تعليمات التشغيل  
هذه.

لا يجوز كسر الأثيرية الباردة إلا باستخدام ملحقات مناسبة.  
احرص على حماية الجهاز من المطر ولا تخزنه بالخارج.

/رشاد  
لا تحمل الشركة الصانعة أية مسؤولية عن الأضرار المحتملة  
التي تحدث عن الاستخدام غير السليم أو التشغيل غير الصحيح.

## حماية البيئة

المواد المستخدمة في التغليف قابل لإعادة التدوير، يرجى التخلص من مواد التغليف بطريقة تحافظ على البيئة.  
✓ تحتوي الأجهزة الكهربائية والالكترونية على مواد قيمة قابلة لإعادة التدوير وغالباً ما تحتوي أيضاً على مكونات مثل البطاريات أو المراكمات أو الرزقون والتي قد تشكل خطورة على صحة الإنسان والبيئة في حالة التعامل معها بشكل غير صحيح أو إذا تم التخلص منها بصورة خاطئة، إلا أن هذه المكونات ضرورية لتشغيل الجهاز بصورة سليمة. لا يجوز التخلص من الأجهزة المميزة بهذه الرمز مع النفايات المنزلية.

ارشادات حول مواد المحتويات (REACH)

تعد المعلومات المأهولة حول المحتويات على الموقع:  
[www.kaercher.de/REACH](http://www.kaercher.de/REACH)

## الملحقات التكميلية وقطع الغيار

استخدام الملحقات التكميلية الأصلية وقطع الغيار الأصلية فقط.  
والتي تضمن تشغيل الجهاز بشكل آمن وحال من الاختلالات.  
تحدد المعلومات الخاصة بالملحقات التكميلية وقطع الغيار على الموقع [www.kaercher.com](http://www.kaercher.com).

## محتوى التسلیم

محتوى تسليم الجهاز مصور على العبوة. تأكيد من وجود جميع محتويات العبوة عند فتحها. وفي حالة نقص أية ملحقات تكميلية أو اكتشاف أي تلف بها تابع عن عملية النقل، يرجى اخطار البائع.

## الضمان

يسري في كل دولة شروط الضمان التي تضعها شركة التسويق المتخصصة التابعة لها. نحن نتوى إصلاح الأخطاء التي قد تطرأ على جهازك خلال فترة الضمان بدون مقابل، عندما يكون سبب هذه الاعطال ناجم عن عيب في المواد المستخدمة أو في عملية الصنع. في حالة استحقاق الضمان، توجه من فضلك بقسمة الشراء إلى أقرب موقع أو مركز خدمة عملاء معتمد.  
(العنوان على الصفحة الخلفية)

## وصف الجهاز

يوضح الرسم التوضيحي لوصف الجهاز بالجهاز بأفضل المعدات الممكنة (WVD 4 P S / KWD 4 P S)  
يوجد اختلاف في المعدات اعتماداً على الطراز المحدد. يتم وصف المعدات المحددة على عبوة الجهاز  
للأسئلة، انظر صفحة الصور.

A صورة إيضاحية

١) وصلة خرطوم الشفط

٢) مفتاح دوار

٣) مقبس الجهاز

٤) وظيفة النفخ

٥) مقبض الحمل

٦) مقبض يدوى لحامل الركن/مكان إدخال الملحقات

٧) مساحة تخزين

٨) خطاف الكابل

٩) تخزين الخرطوم (كلا الجانبين)

## إرشادات السلامة



- ⚠ **تنبيه** • يجب عند التوقف عن العمل لفترة استراحة طويلة وبعد الاستخدام إيقاف الجهاز عن طريق المفتاح الرئيسي / مفتاح الجهاز وكذلك فصل القابس الكهربائي أيضاً • وقف تشغيل الجهاز قبل كل استخدام تجاهز بمنفذ / صيانة، وأسحب قابس الشارك الكهربائي.
- عند استخدام الجهاز اسحب كابل مصدر الطاقة بالكامل خارج الجهاز إذا كان الكابل ملتفا حول خطاف الكابل، فيجب أرجاعه تماماً • لا تحمل/لا تنقل جهاز الشحن من كابل وصلة الشبكة.
- تشد قابس الشبكة من كابل الشحن من المقاييس.
- التنظيف** الرطب بالمكنسة الكهربائية

- ⚠ **تحذير** • في حالة ت تكون رغوة أو تسرب سائل، أوقف الجهاز فوراً وافصل القابس الكهربائي.

### التشغيل

- ⚠ **خطير** • يمنع منعاً باتاً التشغيل في المناطق القابلة للانفجار • خطر الانفجار تجنب استخدام الجهاز في شفط الأتربة أو السوائل أو الغازات القابلة للانشتعال • تجنب استخدام الجهاز في شفط غبار المعادن الفعالية (على سبيل المثال، الألومنيوم، والمغنيسيوم، والزنك). • تجنب استخدام الجهاز في شفط الماء المالح أو الأحماض غير المخفة. • تجنب استخدام الجهاز لشفط أي مواد/أجسام تحرق أو يتضاعد منها الدخان.
- قد تسبب هذه المواد في تأكل المواد المستخدمة في الجهاز.

- ⚠ **تحذير** • خطير الاصابة. لا تستخدم الفوهة وأنبوب الشفط بارتفاع رأسى.

- ⚠ **تنبيه** • لا ترك الجهاز دون مراقبة أبداً طالما يكون مشغلاً. • حواتن وأضداد ناتجة عن سقوط الجهاز. يجب عليك ضمان السلامة قبل إجراء أي عمل على الجهاز أو قبل استخدام الجهاز

- ⚠ **تنبيه** • قم بحماية الجهاز من طروف الطقس القاسية والرطوبة والحرارة. • تجنب استخدام الجهاز دون فلت، فقد يؤدي ذلك إلى تلف الجهاز

### العناية والخدمة

- ⚠ **تحذير** • أوقف تشغيل الجهاز على الفور وانزع القابس الرئيسي قبل القيام بأى من أعمال العناية والخدمة.

- ⚠ **تنبيه** • على إجراء أعمال الإصلاح أو الأعمال الأخرى على القطع الكهربائية من قبل مركز خدمة معتمدة فقط.

- ⚠ **تنبيه** • لا تستخدم المواد الكاشطة أو منظف الزجاج أو منظف متعدد للأغراض في التنظيف.

### النقل

- ⚠ **تنبيه** • لتفادي وقوع الحوادث أو الإصابات، يتعين عليك مراعاة وزن الجهاز عند نقله.

- اقرأ تعليمات السلامة هذه والتعليمات الأصلية قبل استخدام الجهاز لأول مرة. التصرف وفقاً له، احتفظ بالكتاب المرجع إليه في المستقبل أو لأصحابه في المستقبل.
- يجب عليك إلى جانب الإرشادات الواردة في دليل التشغيل مراعاة القواعد العامة للسلامة والوقاية من الحوادث والتي يحددها المشرع القانوني.
- تشير علامات الإرشاد والتذكرة الموجودة على الجهاز إلى إرشادات الهمة للتشغيل الآمن.

### درجات الخطير

#### ⚠ **خطير**

- إشارة إلى خطير مباشر وشيك الحدوث وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

#### ⚠ **تحذير**

- إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

#### ⚠ **تنبيه**

- إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى إصابات بسيطة.

#### ⚠ **تنبيه**

- إشارة إلى موقف قد تجده المخاطر وقد يؤدي إلى حدوث أضرار مادية.

### إرشادات السلامة العامة

- ⚠ **خطير** • خطير الاختناق. يجب عليك ابعاد أكياس التعبئة والغليف عن متناول الأطفال.

- ⚠ **تحذير** • استخدم الجهاز وفقاً للغرض المحدد له فقط. على مراعاة الظروف المحيطة والآمنة عند استخدام الجهاز إلى الآشخاص الآخرين وخاصة الأطفال منهم. • يسمح لأشخاص الذين لديهم قدرات بدنية أو حسية أو عقلية محدودة أو الذين لا توافق لديهم الخبرة والمعرفة الكافية. أن يستخدموا الجهاز بشرط الاشراف عليهم بشكل صحيح أو إذا تم بعد صدور لهم على تعليمات بشأن كيفية الاستخدام الأمان للجهاز من قبل شخص مسؤول عن سلامتهم ومعفهم بالمخاطر المرتبطة به. • لا يسمح باستخدام الجهاز إلا من قبل الأشخاص الذين تم إرشادهم إلى كيفية استخدام الجهاز أو الذين أثروا قدرتهم على استخدام الجهاز وتم تكليفهم صراحة باستخدامه. • لا يسمح للأطفال بتشغيل الجهاز. • يمكن أن يتم استخدام الجهاز من قبل صغار السن بدءاً من 8 سنوات على الأقل بشرط أن يتم المحافظة على سلامتهم عن طريق تعليمهم كيفية استخدام الجهاز من قبل شخص متخصص ووضفهم تحت المراقبة وذلك فهمهم بالجهاز. • يسمح للأطفال القيام بعمليات التنظيف والصيانة بشرط أن يتم الإشراف عليهم.
- ⚠ **تنبيه** • تجهيزات السلامة تخدم حمايتك. لا تقم بتغيير أو تجاوز تجهيزات السلامة أبداً.

### خطير الصدمة الكهربائية

- ⚠ **خطير** • قم بتوصيل الجهاز بتيار متعدد فقط. يجب أن تتوافق الجهود الموجود على لوحة الطراز مع جهد مصدر التيار. • لا تلمس القابس الكهربائي والمقاييس بأيديك مبتلة بالماء نهايـاً. • استخدم الجهاز عن طريق قاطع الدائرة الكهربائية قعط (30 مللي أمبير حد أقصى). • تجنب عمر الجهاز في الماء.

- ⚠ **تحذير** • قم بتوصيل الجهاز بوصلة كهربائية يكون تم شرائها من متجر متخصص ببيع الأجهزة الكهربائية وفقاً لمعيار IEC 60364-1. • افحص كابل التوصيل الكهربائي المزود بقياس قبل كل عملية تشغيل. لا تقم بتشغيل الجهاز عندما يكون كابل التوصيل الكهربائي تالف. قم بغير كابل التوصيل الكهربائي التالف فوراً من قبل خدمة العمال المعتمدة تفني كهربائي. • لا تقم بالحادق أضلاع أو اثنان كابل التوصيل الكهربائي وكابل التمديد الكهربائي عن طريق الدقنس، سحق، الشد أو فعل شيء به من هذا القبيل. قم بحماية كابل التوصيل الكهربائي من الحرارة، الزيت والحواف الحادة.









# THANK YOU!

## MERCI! DANKE! ¡GRACIAS!



Registrieren Sie Ihr Produkt und profitieren Sie von vielen Vorteilen.

Register your product and benefit from many advantages.

Enregistrez votre produit et bénéficier de nombreux avantages.

Registre su producto y aproveche de muchas ventajas.

**[www.kaercher.com/welcome](http://www.kaercher.com/welcome)**



Bewerten Sie Ihr Produkt und sagen Sie uns Ihre Meinung.

Rate your product and tell us your opinion.

Évaluer votre produit et dites-nous votre opinion.

Reseña su producto y díganos su opinión.



**[www.kaercher.com/dealersearch](http://www.kaercher.com/dealersearch)**

**Alfred Kärcher SE & Co. KG**

Alfred-Kärcher-Str. 28-40

71364 Winnenden (Germany)

