Basin Taps, Bath Taps, Sink Taps

Fitting instructions

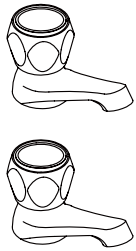

82199

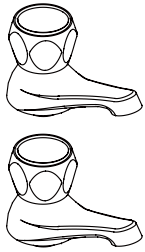

90734

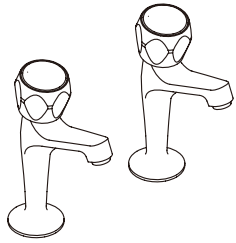

52398



26452

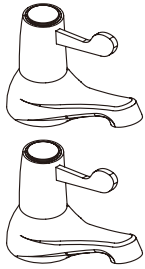

62548

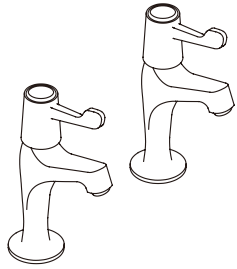

31110

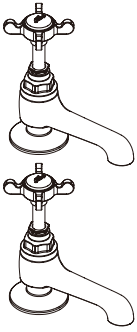

72675

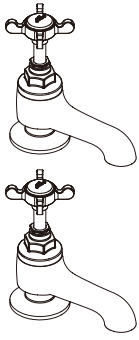

75151

Please keep these instructions for future reference.

Contents

	Page
1. Tools required	3
2. Parts Supplied	3
3. Specifications	3
4. Installation	4
5. Aftercare	4

Tools required
(Tools not supplied)

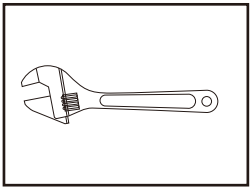

Parts Supplied

NO.	Description	Qty
1	Tap Body	2
2	Anti-Rotational Washer	2
3	Backnuts	2

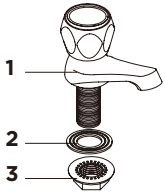

Specifications

The taps is suitable for use at water supply pressures of 0.1 bar (min.) to 5 bar (max.).

This taps should be installed in compliance with Water Regulations. For further details contact your Local Water Authority.

(a) Identify all components and check pack contents.

(b) Turn off water mains supply.

Installation

1. **Fit Tap Body (1) to basin/bath/sink, ensuring that the Anti-Rotational Washer (2) is fitted between the Tap Body (1) and the basin/bath/sink.**
2. **Fit Backnuts (3) to the inlet legs and tighten. DO NOT OVERTIGHTEN.**
3. **Connect to the water supply using suitable plumbing joints. Note: the Hot tap is fitted to the left-hand side and the Cold is fitted to the right-hand side.**
4. **Turn on the hot and cold and mains water supply. Check for leaks immediately. It is always advisable at this stage to flush out the system. To do this, open both valves fully and allow water to flow for approx. 1 minute. This will remove any foreign matter within the installation.**
5. **Finally turn on all the water heating arrangements.**

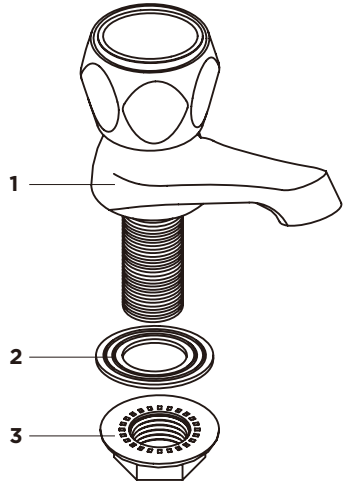

Aftercare

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your product is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.