



User Instructions Premium Sprung Bolt Through Tubular Mortice Latch Electro Brass

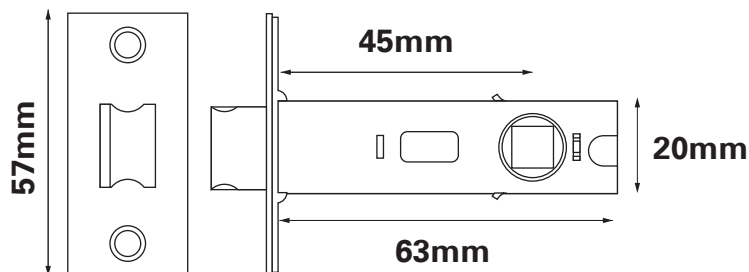

PACK CONTENTS

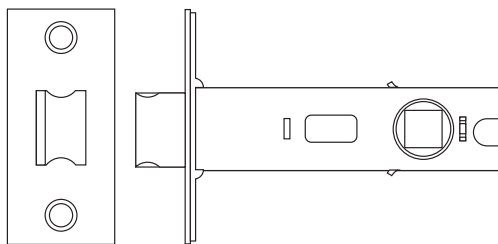

Bolt Through Tubular Mortice Latch



Screws x 2

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE

TOOLS REQUIRED

- Drill & 25mm (1") drill bit
- 12mm drill bit
- Mallet
- Chisel
- Pozidrive Screwdriver
- Pencil/Marker
- Masking Tape

SPECIFICATION

Material:	Steel
Finish:	Electro Brass
Pack:	1 Latch, Face Plate & Fixings

HEALTH AND SAFETY

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- This product must be installed by a competent adult.
- The provided screws are designed for mounting the product on wooden doors.
- Ensure children and pets are kept at a safe distance during installation.

FITTING INSTRUCTIONS

1. **Mark the Latch Position**
Choose a central point on the door's edge (around mid-height). Avoid cutting into any joints. Hold the latch body in place and mark its top and bottom edges.
2. **Drill the Latch Hole**
Mark a vertical centerline on the door edge. Drill a 25mm hole 70mm deep. Use tape on the drill bit to mark the depth.
3. **Chisel for the Faceplate**
Insert the latch into the hole and place the loose faceplate over the fixed one. Mark around it, remove the latch, and chisel a recess so the plate sits flush with the door edge.
4. **Drill for the Spindle**
Hold the latch body in position on the door face, aligned with the mortice. Mark and drill a 12mm hole for the spindle through the door.
5. **Fit the Latch and Handles**
Screw the latch and faceplate into the door, making sure the spindle fits freely. Cut the spindle if needed, then attach the handles. Test the latch works smoothly.
Note: Make sure the angled edge of the latch bolt faces the doorframe. If not, remove the plate, reverse the latch bolt, and refit.
6. **Mark the Frame**
With the door slightly open, mark the top and bottom of the latch bolt on the frame.
7. **Position and Fit the Striker Plate**
Transfer those marks to the inside of the frame. Add a line 2mm above the top mark for clearance. Close the door to mark the horizontal edge of the striker hole.
Hold the striker plate in position, mark around it, and chisel out the recess to fit the striker flush with the frame.

CARE AND CLEANING

To ensure a longer-lasting finish for your product, please adhere to the following requirements:

- Avoid using cleaners or acidic chemicals to polish or clean the product to prevent oxidation.
- Refrain from scrubbing handles with heavy or sharp-edged objects.
- Regularly check the components to ensure all screws are tightened securely.

CUSTOMER SUPPORT

www.toolstation.com/contact

Call us 0808 100 7211

Mobile friendly 0330 333 3303

Email info@toolstation.com

www.travisperkins.co.uk/content/get-in-touch

Call us 0330 123 3846

Email customerservice@travisperkins.co.uk

Imported by Toolstation (company number 04372131)

Lockworks is a Toolstation brand

Toolstation is a Travis Perkins company