



## Fittings

Shelf Stud

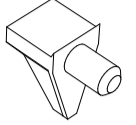


**x 5**

Turnfaster Fitting




**x 2**

Adjustable Leg



**x 5**

Leg boss

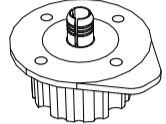


**x 5**

Springfit Dowel




**x 2**

Plinth Clip

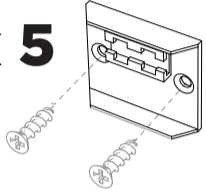


**x 2**

Hinge Mounting Plate

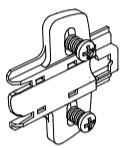


**x 4**

Circular Leg Clip

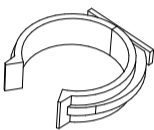


**x 2**

N 15mm Screws





**x 32**

Standard Hinge

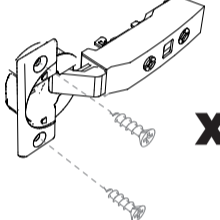


**x 4**

- (A) Base End Panel
- (B) Top/Bottom Panel
- (C) Back Panel
- (D) Shelf
- (E) Centre Mullion
- (F) Door

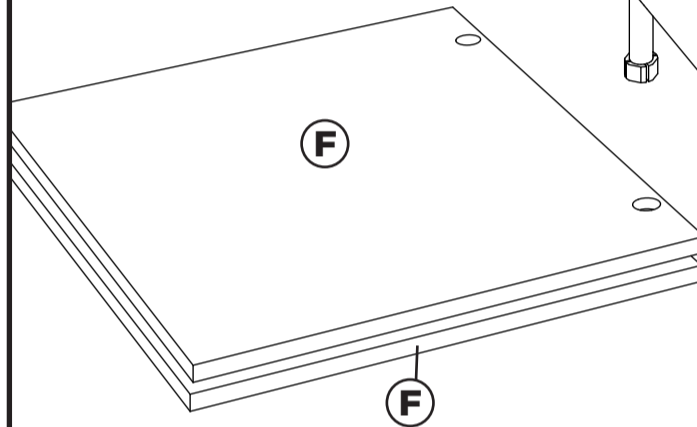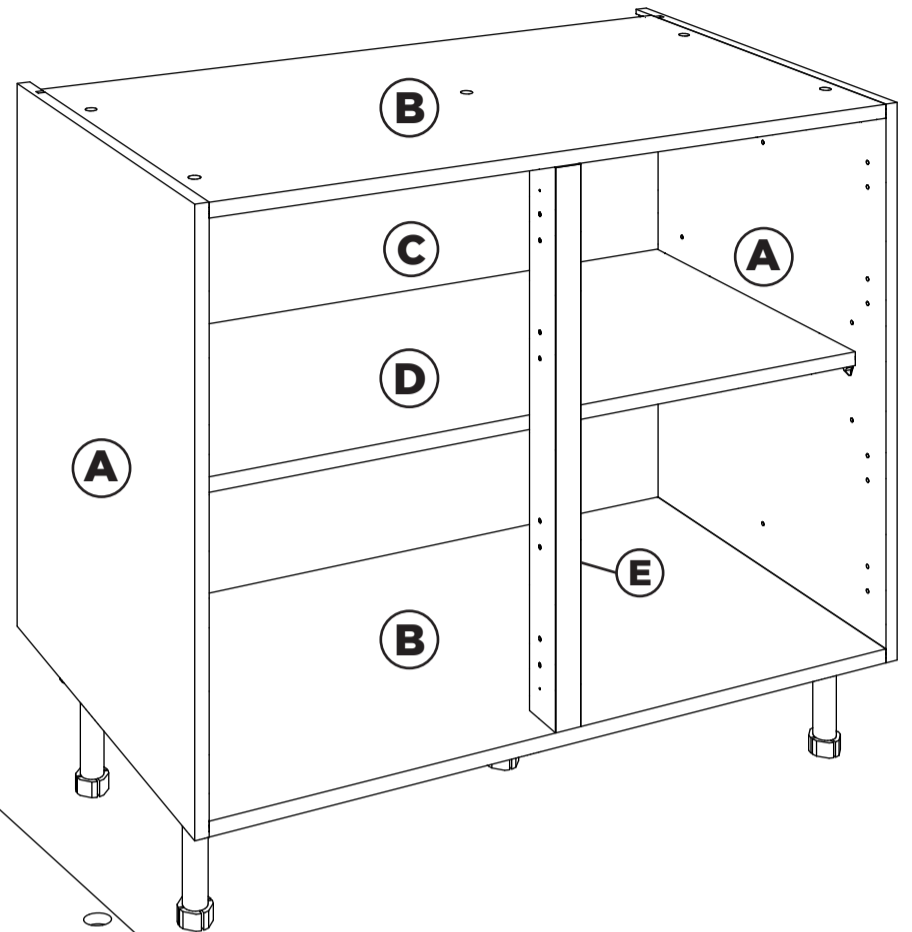


## Assembly

**1**

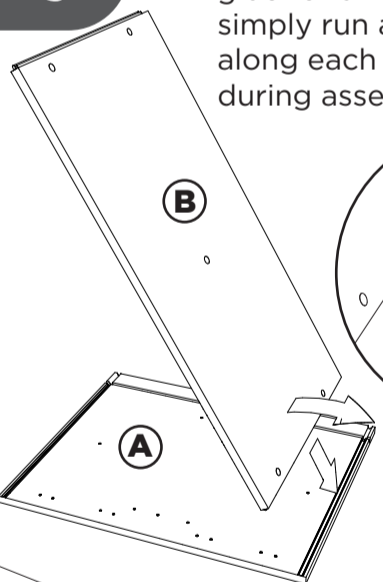


We recommend using PVA glue for an additional bond - simply run a bead of glue along each joint line during assembly

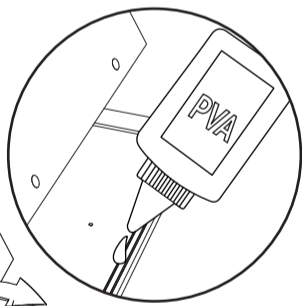


Carefully align front edges

**2**

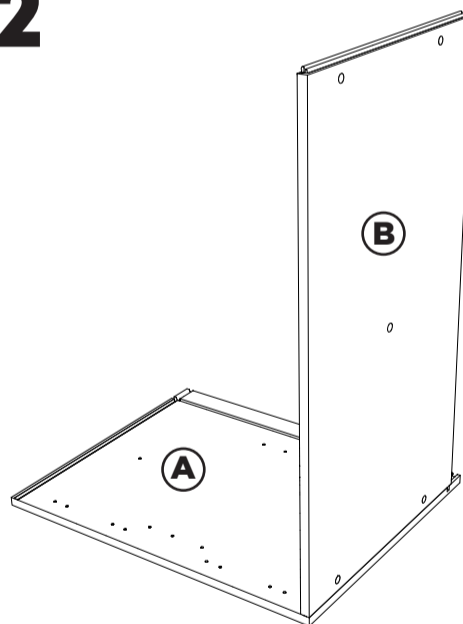


**3**

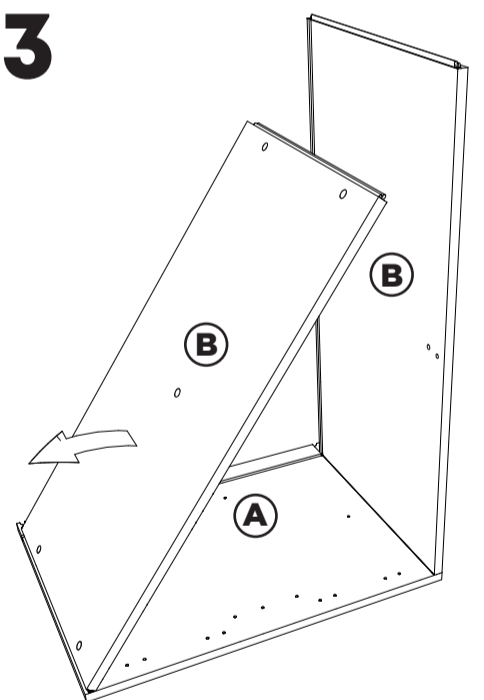


**4**

Slide back panel C into place

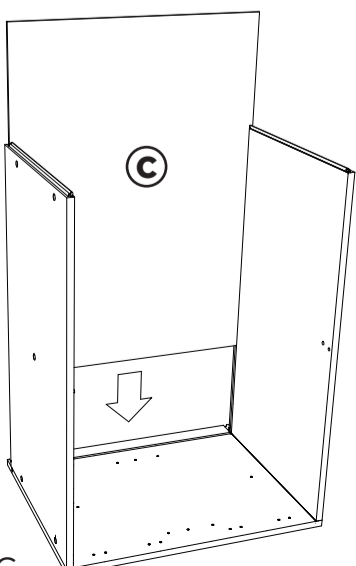

**5**


Press end panel A into top/bottom panels B and gently tap with a mallet

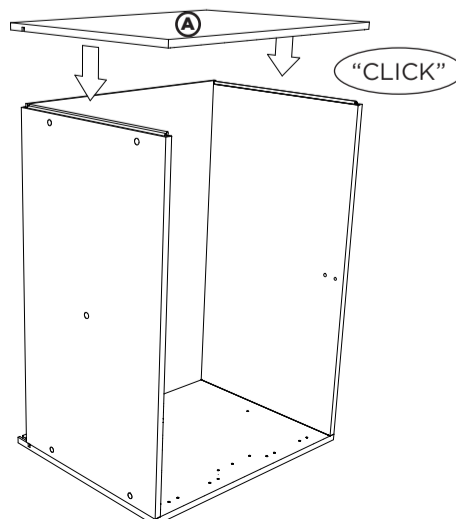


"CLICK"

**6**


Insert shelf studs

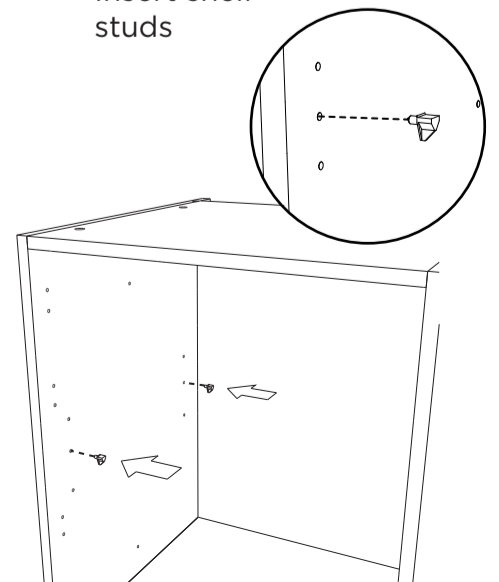


**7** Gently tap leg boss into place

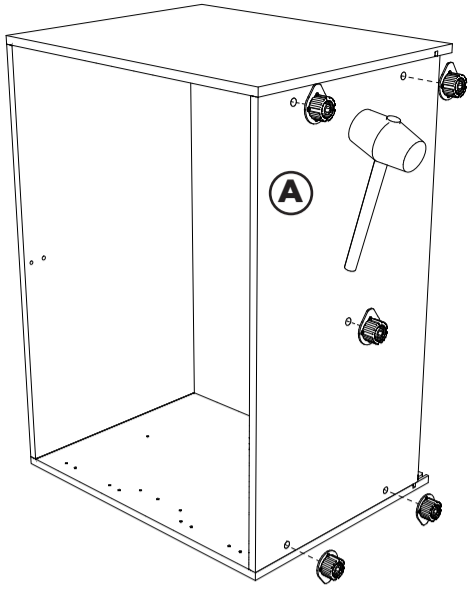

**8** Screw leg boss in place

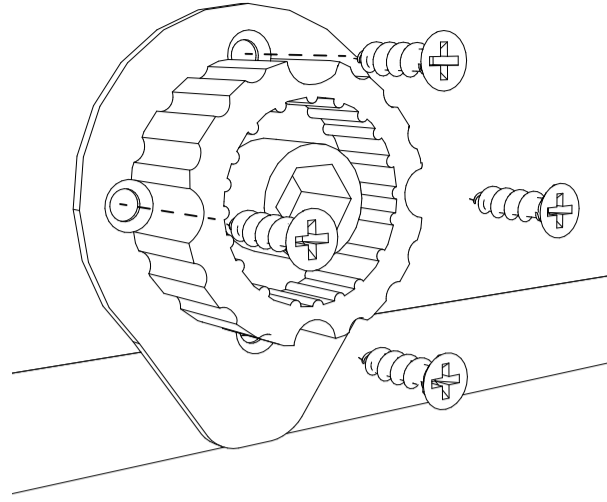

**9** Insert adjustable legs into leg boss

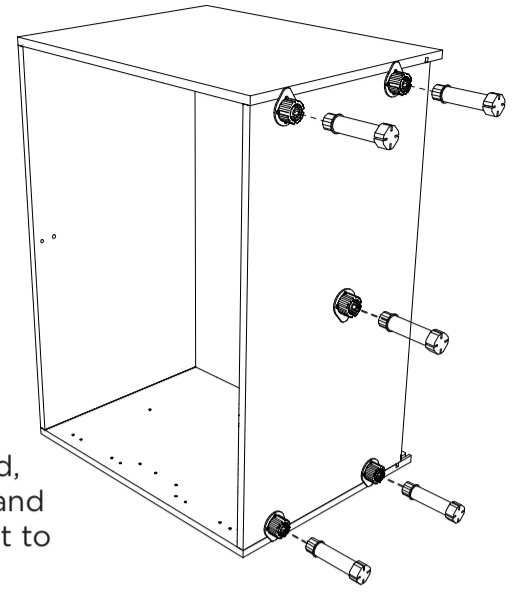


Once assembled, measure and adjust feet to 150mm

**10** Insert turnfaster fittings to inside base panel B




Rotate to lock in place


**11** Press springfit dowels into top and bottom of centre mullion

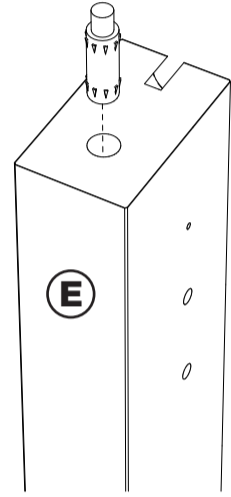


**12** Once dowels are pressed in slide centre mullion into place

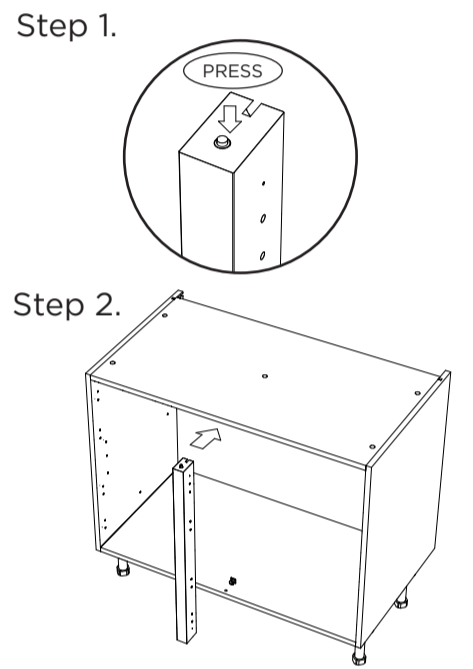


**13** Insert shelf studs into centre mullion

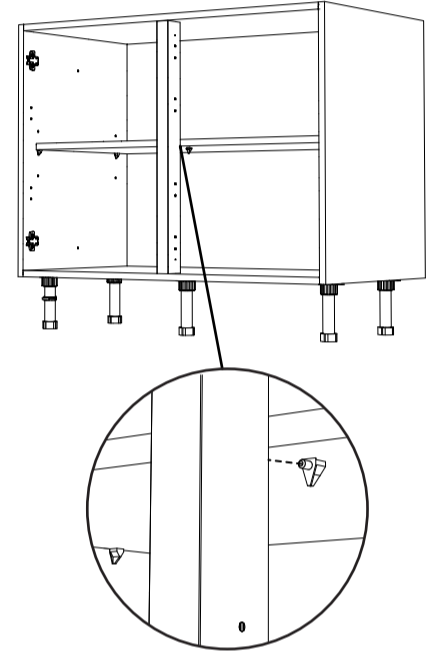


**14** Slide shelf D into position

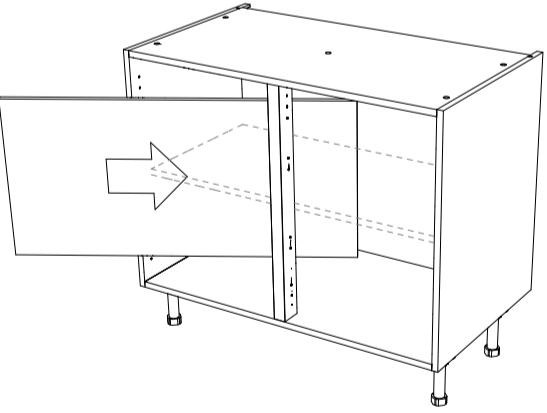


**15** Attach plinth clip to plinth

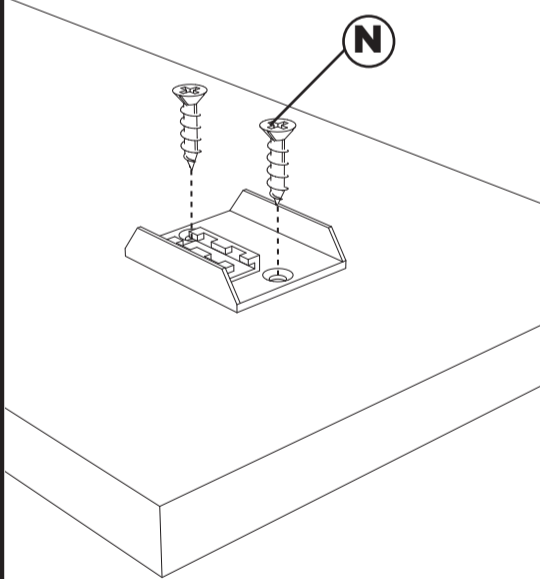


**16** Slide circular leg clip into plate

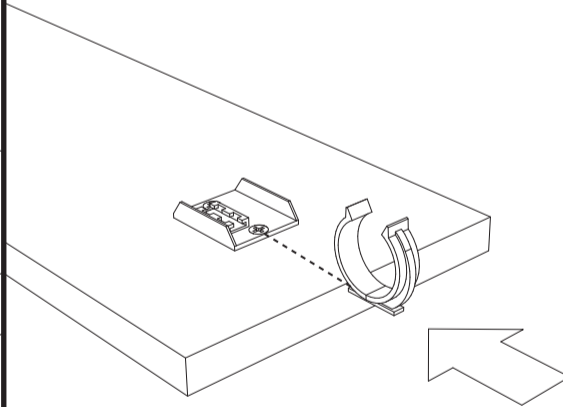

**17** Fix plinth into place

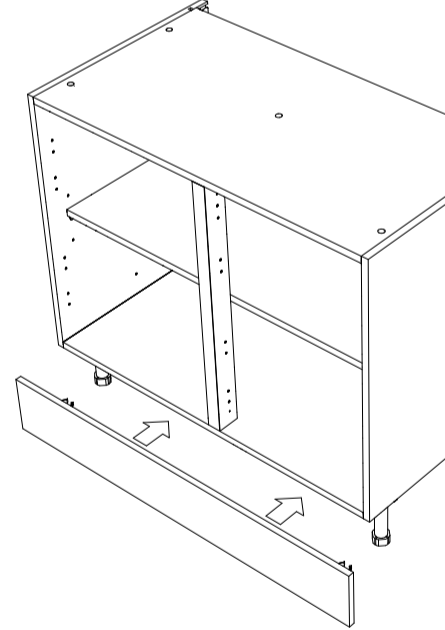


**18** Attach hinge mounting plate to inside of end panel A

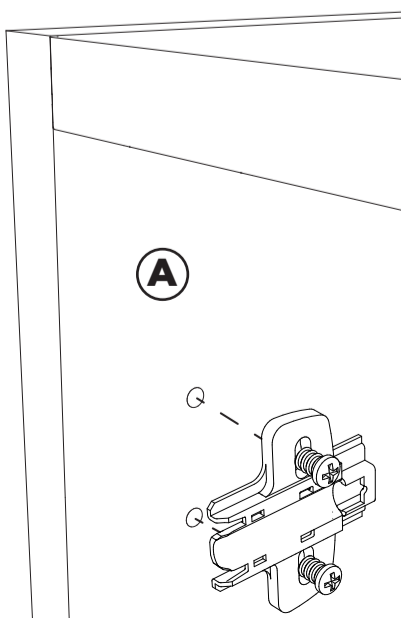


Ensure the front edge faces forward as shown

**19** Ensure the hinge arm is at 90 degrees to the door before fixing in position with 15mm screws as shown

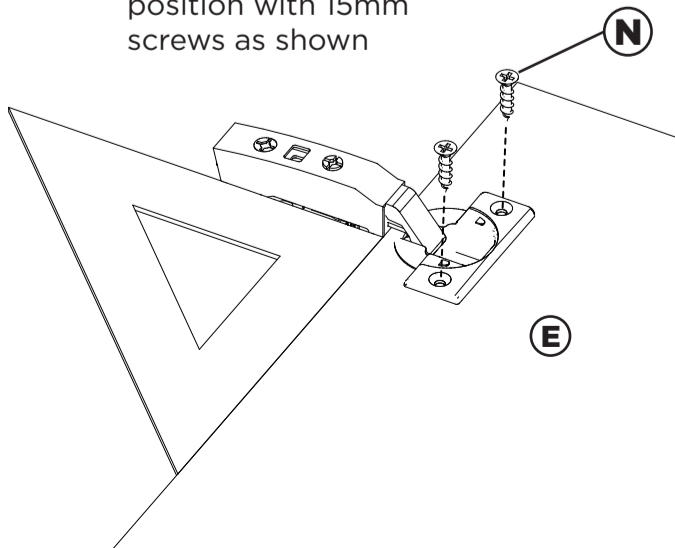

**20**

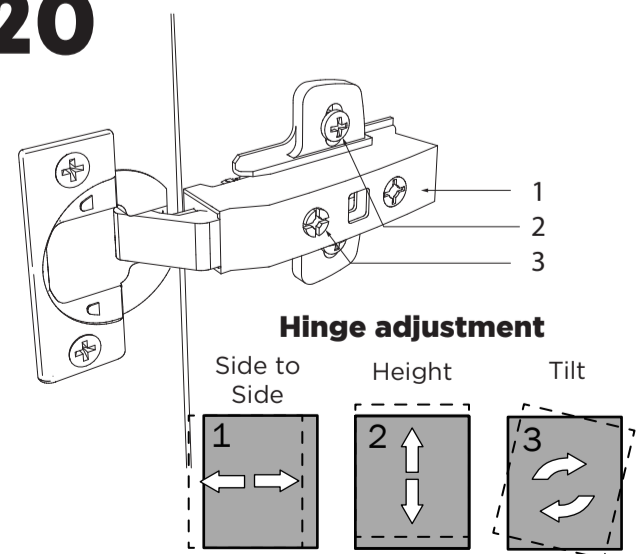

**Hinge adjustment**

