

# ROTHLEY

PO No. 33650

## Instruction Guide

Home office kit





**Accessorising your home**

[www.rothley.com](http://www.rothley.com)

## IMPORTANT INFORMATION

Before Installing please identify that you have all the kit parts as listed on page 2.

---

Proper fitting of this item is **extremely important**.

If the necessary tools and expertise are not available, we would recommend installation by a **qualified tradesperson**.

Ensure your wall is in sound condition prior to fitting.

The screws & wall plugs provided are for plasterboard partitions or masonry walls.


Ensure that no hidden pipes or cables will interfere when installing.

Ensure that **eye protection** is worn throughout the installation.




## Kit Parts

### Included



### Required Extras




### Step 1

Draw 2 - Unobstrusive horizontal pencil lines on the wall positiond **626mm** from floor as shown.


### Step 2

Draw 2 - Unobstrusive vertical pencil lines on the wall positioned **600mm** apart as shown.

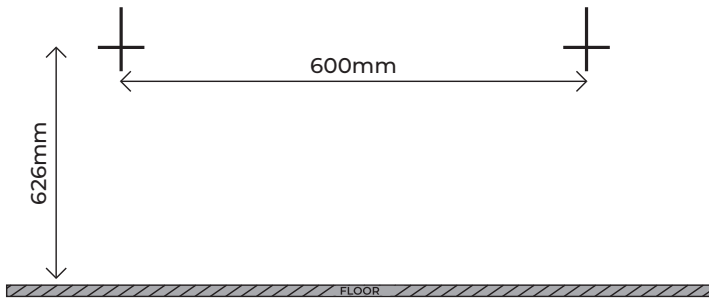

### Step 3


Use a spirit level to ensure the upright is vertical.

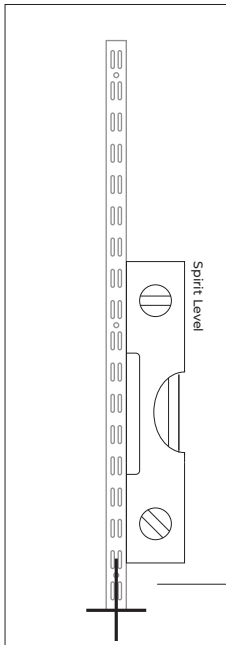

Align the end of the upright against the horizontal and vertical pencil line as shown.


### Step 4

Use the Wall Marker (supplied) to mark all three holes.




## Step 5

Drill  $\text{Ø}8\text{MM}$  X minimum **50MM deep** X 3 holes  
in wall and insert  wall plugs provided in **Pack A**.

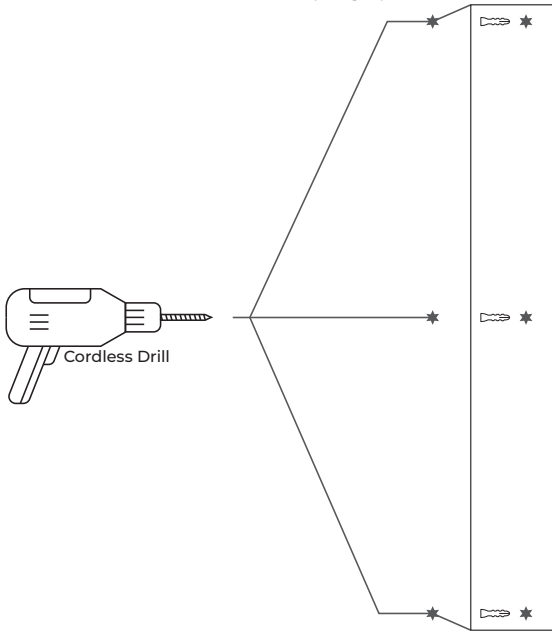


## Step 6

Using screw **pack 'A'**  $\text{Ø}5\text{MM}$  X 60MM long  
screws provided, screw upright to the wall.



## Step 7

Repeat Steps **3/4/5 & 6** to fix the second upright.

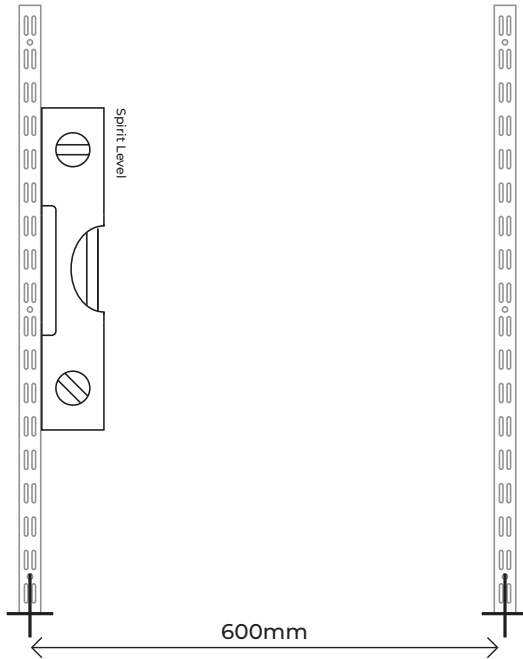

## Step 8


Butt the end of the third upright against the previously fixed upright as shown. *(Use a spirit level to ensure alignment of both uprights and they are positioned vertically)*

## Step 9

Repeat out steps **4/5 & 6** to fix your third upright to the wall.


## Step 10

Repeat steps **8 & 9** to fix your fourth upright to the wall.

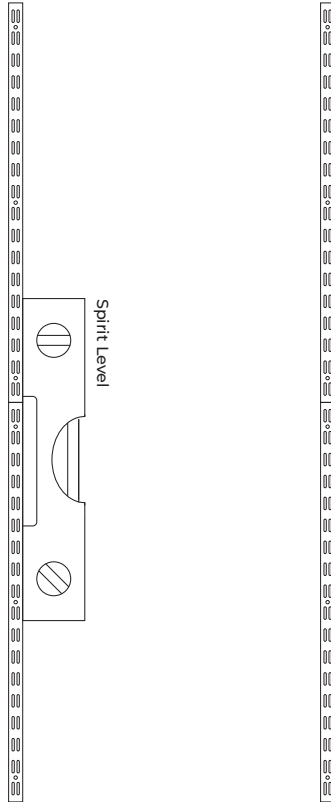

## Step 11



Slot the shelf brackets into the uprights to your chosen height.

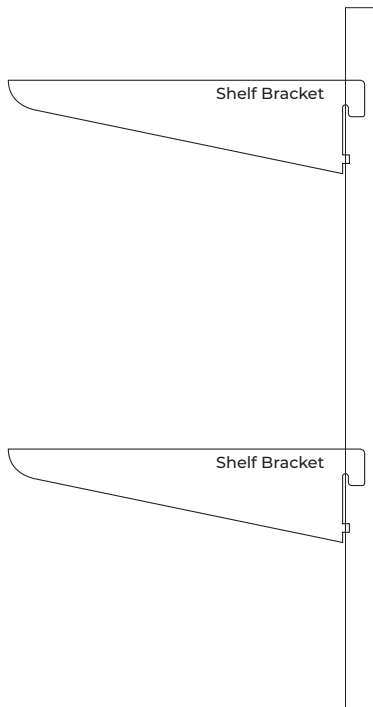

## Step 12

Rest shelves onto brackets  
and using screws provided  
screw shelves to the brackets.

**\*\* SEE SCREW DIAGRAM BELOW  
FOR CORRECT SCREW SELECTION\*\***

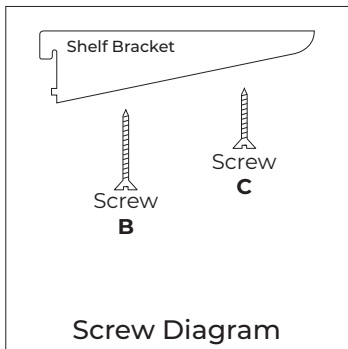
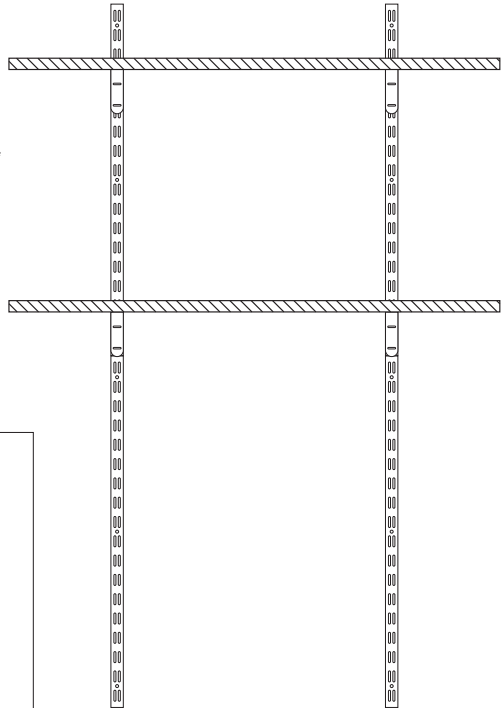


FLOOR




## Step 14

Slot the desktop brackets into the uprights as shown.

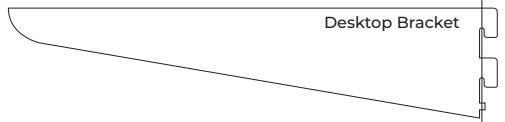


## Step 15

Screw the table legs to the desktop using M5 X 15MM Long screws **pack G**.

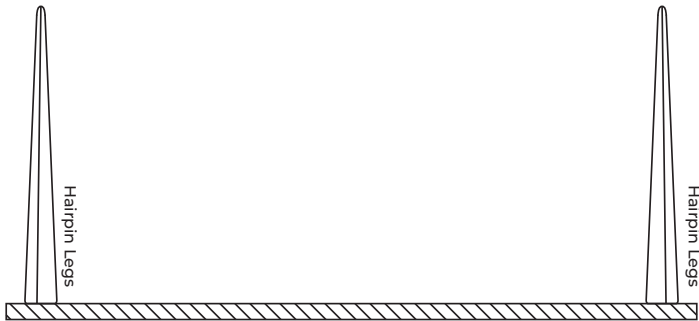

### Note:

Place Hairpin legs over the threaded inserts and use screw **pack G** to attach.

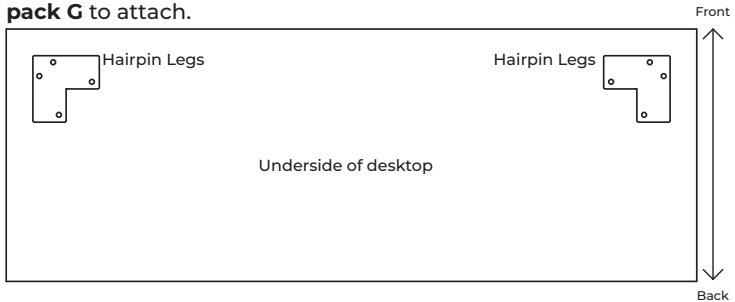





**ROTHLEY**

@RothleyLtd

