


49351

5. Complete the installation. Check whether it leaks. If so, disassemble it and return to the first step again.

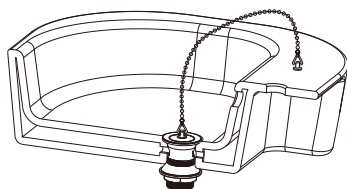

CUSTOMER SUPPORT

www.toolstation.com/contact
 Call us 0808 100 7211
 Mobile friendly 0330 333 3303
 Email info@toolstation.com
 Made in china


Made 4 Trade
 Imported by Toolstation (company number 04372131)
 Toolstation is a Travis Perkins company

TS INST 49351 (Rev.1.0)

Installation Manual

1-1/4" Basin Waste Chain Poly Plug, Slotted


SKU: 49351

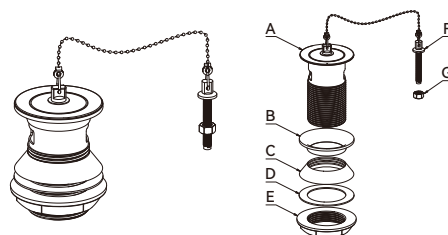


IMPORTANT NOTES

- Please ensure installation is undertaken by an experienced Plumber, as to ensure compliance with all Council and Local Authority requirements.
- Please wear appropriate PPE.
- It is the responsibility of the person who installs the waste to ensure that the installation is watertight.


1. Assemble the fitting as per the picture, ensuring the correct position of washer "B".

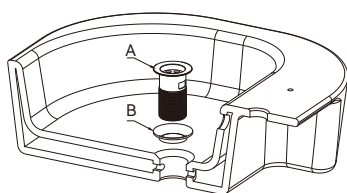


2. Assemble the fittings as per the picture, ensuring the correct position.

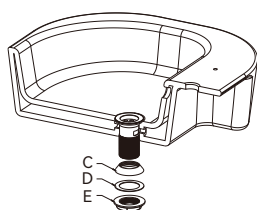

3. Tighten nut "E" as per the picture.

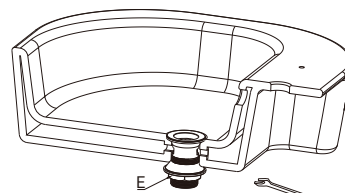

4. Install the screw into the hole that on the basin, tighten nut "G" as per the picture.

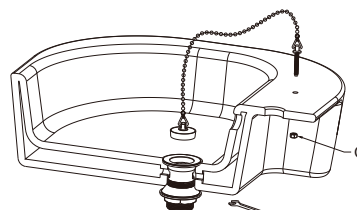

145mm x 105mm