FITTING INSTRUCTIONS FOR FLEXIGLAS 120

COMPONENTS

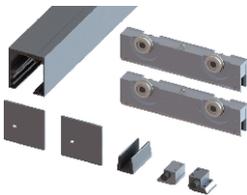51120/30/40/60 - Anodized Aluminium
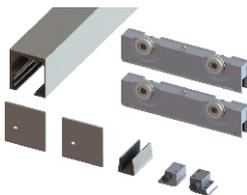
51230/40/60 - Satin Stainless Steel

51176 - Flexiglas fitting set, anodized aluminium, 120kg

51276 - Flexiglas fitting set, satin stainless steel, 120kg

51182/3 - Flexiglas 120 standard kit, anodized aluminium

51282 - Flexiglas 120 standard kit, satin stainless steel

51171 - End caps (set of 2), anodized aluminium

51271 - End caps (set of 2), satin stainless steel

51192 - Flexiglas 120, double soft closing kit, 80kg

Required tools

Allen Key

Spanner

Power screw driver

Posi drive screw bit

Drill bit

Technical Specifications
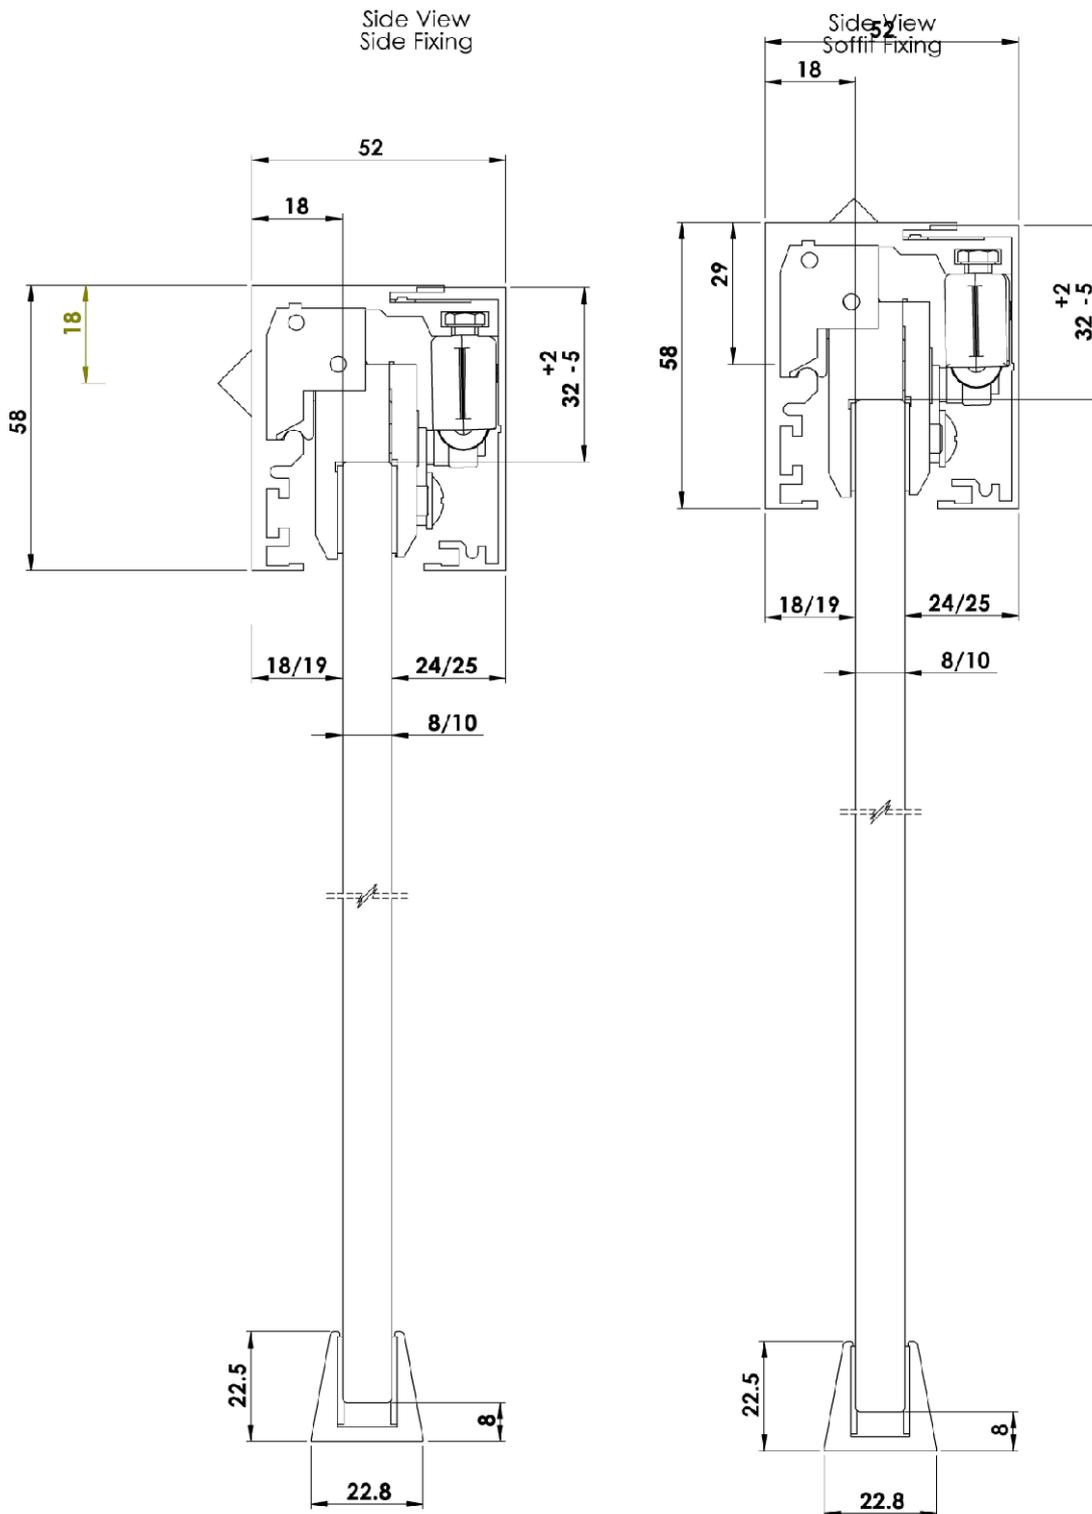
FLEXIGLAS 120

Maximum door weight 120kg

DH - Door height, maximum 2700mm

DWi - Door width

DT - Door thickness, 8mm or 10mm

OW - Opening width

OH - Opening height

Side View
Side Fixing

Side View
Soffit Fixing

Step 1 **Fixing track**

Face Fixed: track comes pre-drilled, mark the position of the levelled track on the wall and fix it with screws

Face Fix

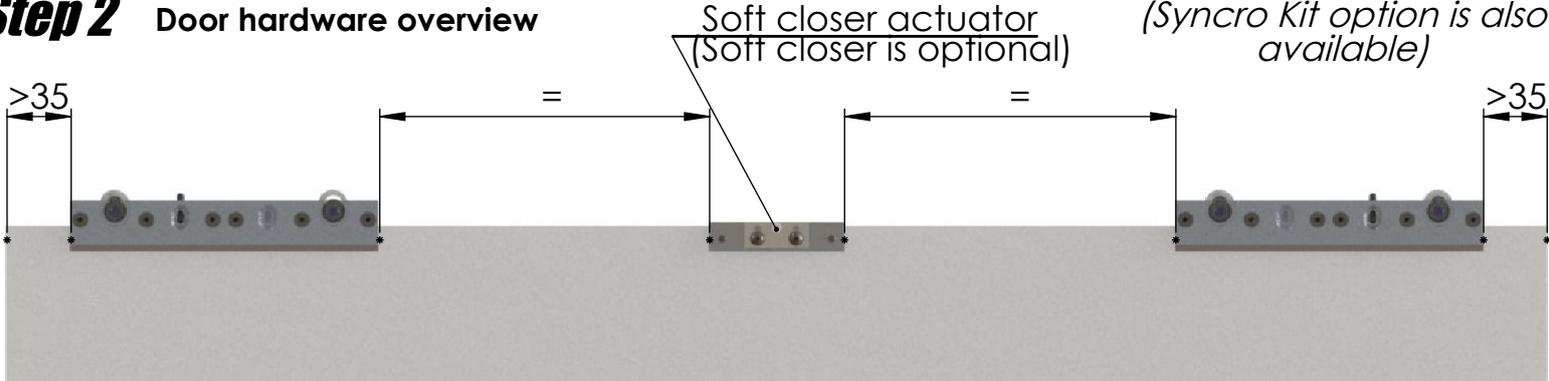**Soffit Fixed: track needs to be pre-drilled, mark the ceiling and fix the track with screws**
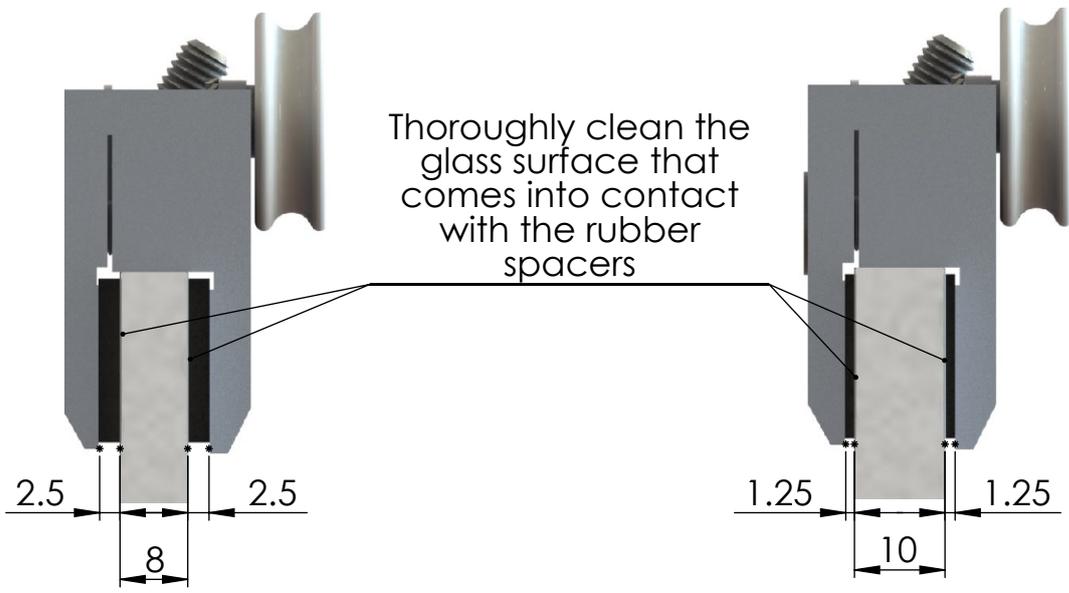
Soffit Fix

Step 2 **Door hardware overview**

Soft closer actuator
(Soft closer is optional)

(Syncro Kit option is also available)

>35   =   =   >35

8mm door

10mm door

Thoroughly clean the glass surface that comes into contact with the rubber spacers

2.5   2.5

8

1.25   1.25

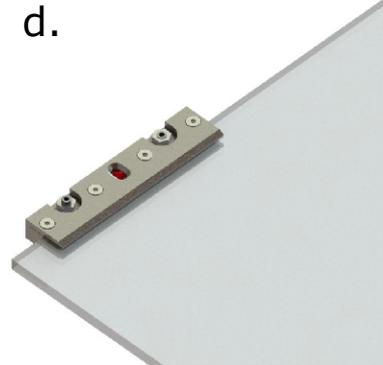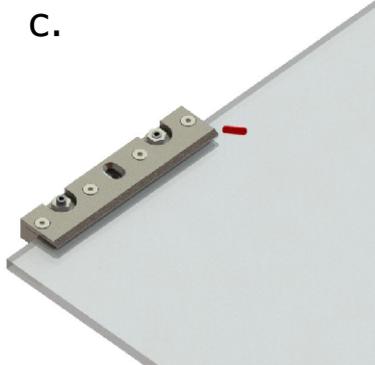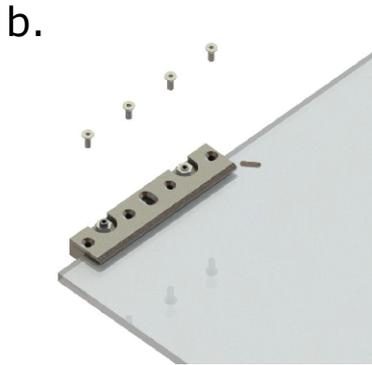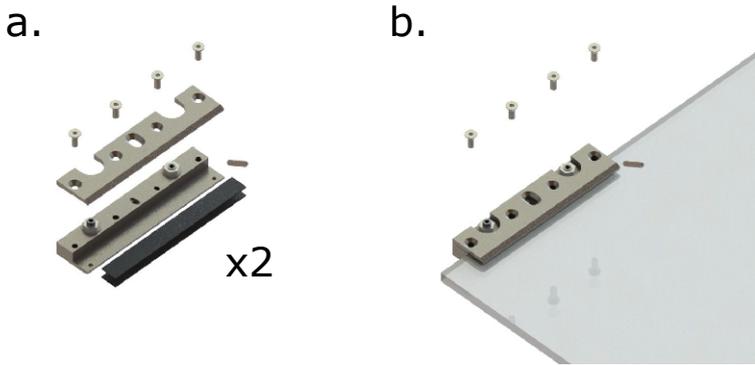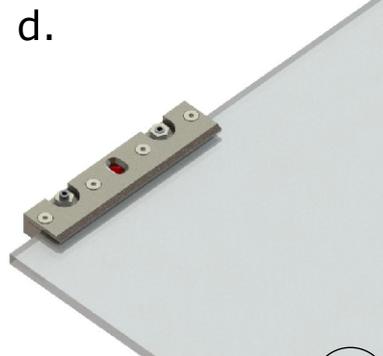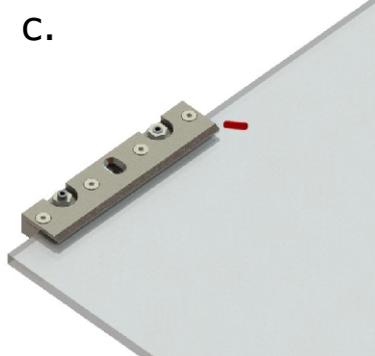10

④

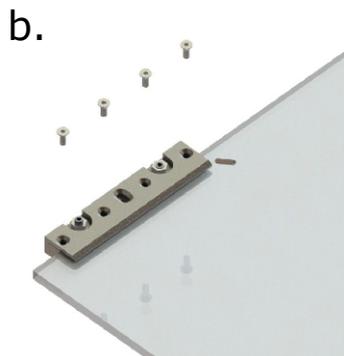# Step 3 Prepare hangers and fix with 8mm door

a. Prepare all required components

b. Insert the rubber spacers on each side between the door and the hanger

DO NOT USE GLUE

c. Tighten the screws with 12Nm force

d. Insert the grub screw

a. x2

b.

c.

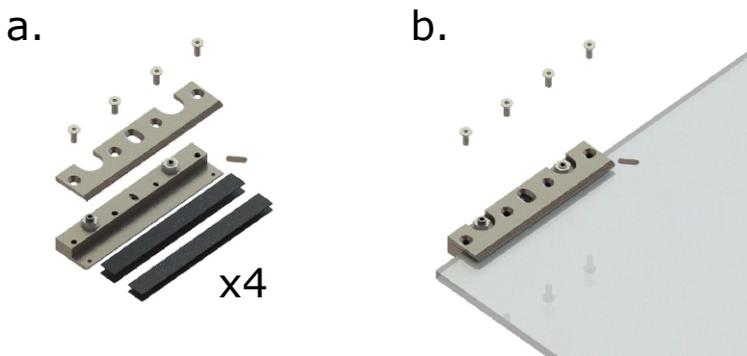d.

Step 4 Prepare hangers and fix with 10mm door

a. Prepare all required components

b. Insert the rubber spacers on each side between the door and the hanger
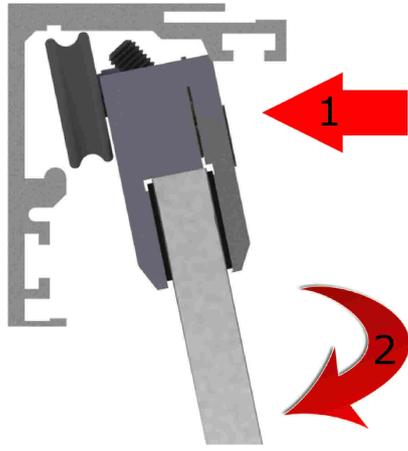
DO NOT USE GLUE

c. Tighten the screws with 12Nm force

d. Insert the grub screw

a. x4

b.

c.
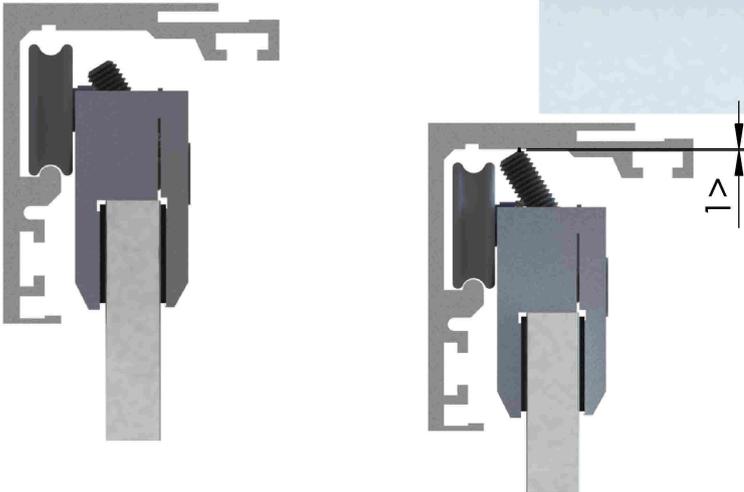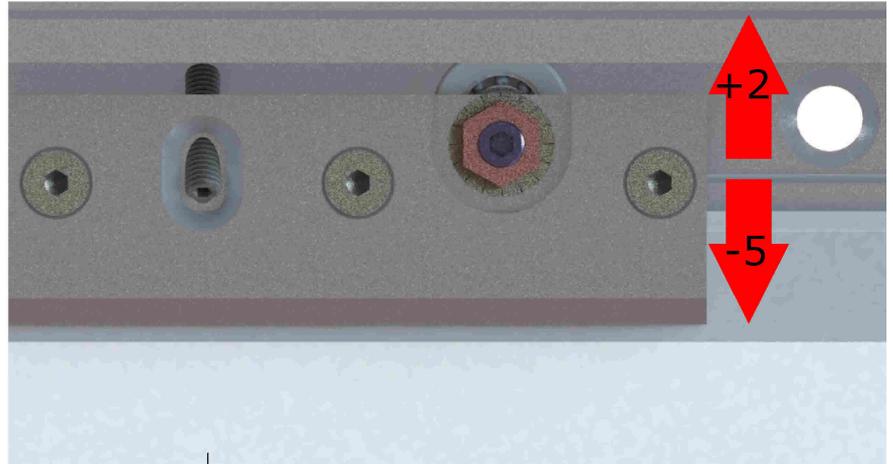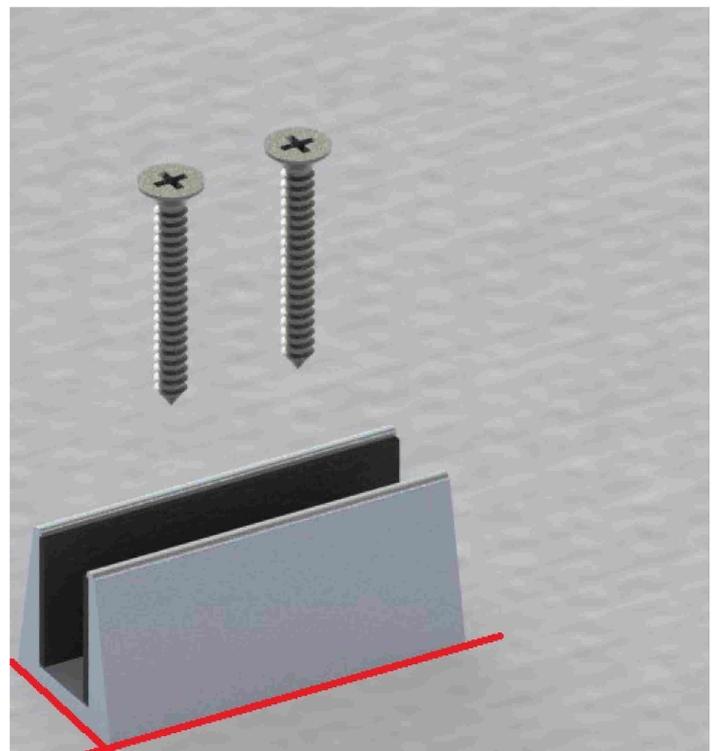
d.

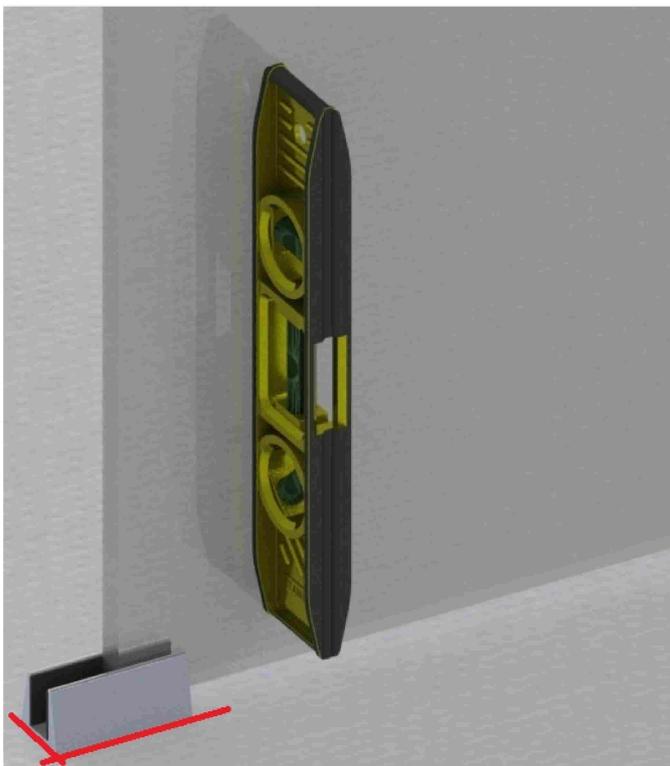# Step 5 Insert door and hangers into track

Adjust the height of the door by holding the **RED** nut with a spanner and rotate the **BLUE** grub screw with an allen key
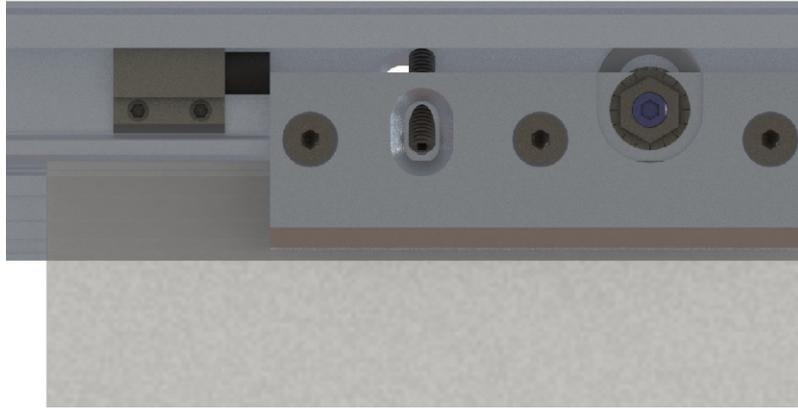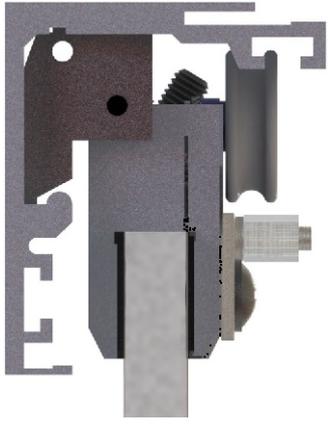

+2

-5

To prevent the hanger from rattling in the track tighten grub screw and leave a 1mm gap or smaller. Try not to obstruct the movement of the hangers.

Step 6 Install the bottom guide

Ensure the door is level, mark the position of the guide and secure it with screws
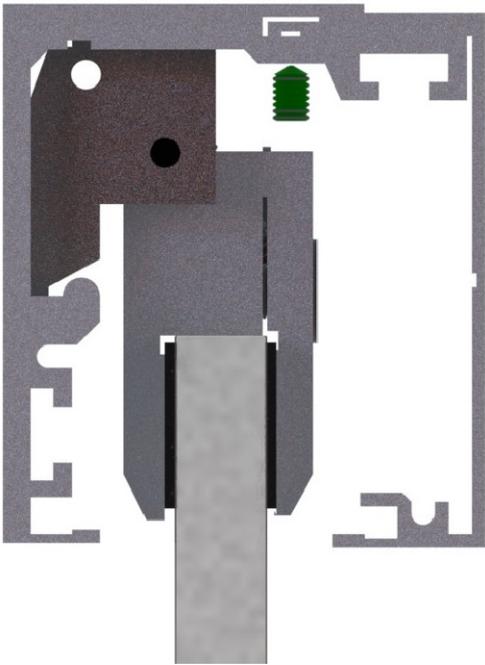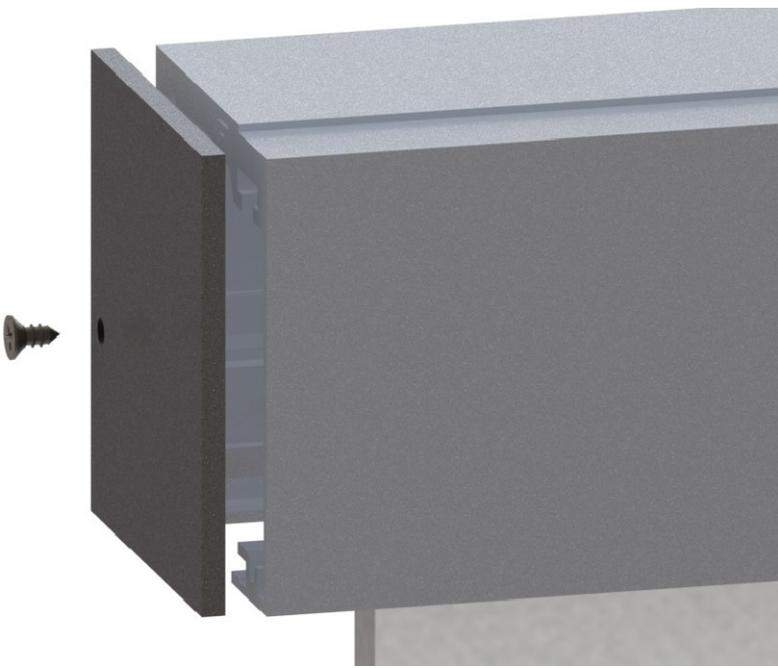
Insert stopper into track and secure it with screws

NOTE: If you opted for a soft closer or syncro kit also refer to the appropriate instructions

Put the track front cover and secure with screws supplied

Put end caps into position and secure with screws

FLEXIGLAS 120

Coburn Sliding Systems Limited

Unit 1, Cardinal West, Cardinal Way,

Godmanchester, PE29 2XN, United Kingdom

Phone: +44 (0)20 8545 6680

Fax: +44 (0)20 8545 6720

E-mail: sales@coburn.co.uk

www.coburn.co.uk