

USER INFORMATION

UK
CA 0321

These products are classed as Category III Personal Protective Equipment (PPE) by the Regulation 2016/425 (as brought into UK law and amended) and have been shown to comply with this Regulation through the Designated Standard(s): EN ISO 21420:2020, EN ISO 374-1:2016+A1:2018, EN ISO 374-5:2016

Product reference: D5000-6

Sizes available 8-10 (M-XL)

Intended Use: Housework
Cleaning work
Beauty salon

Performance and limitation of use –This product has been tested and achieved the following performance levels:

Classification:

EN ISO 374-1:2016+A1:2018 /Type B	Level	EN ISO 374-4:2019 Degradation%	EN ISO 374-1:2016+A1:2018 /Type B
40% Sodium Hydroxide (K)	6	-35.4	
30% Hydrogen Peroxide (P)	3	16.6	
37% Formaldehyde (T)	4	-2.7	

EN ISO 374-5:2016

Protection against Bacteria

Pass

and Fungi

Protection against Viruses

Pass



EN ISO 374-1:2016+A1:2018 Permeation levels are based on breakthrough times as follows:

Permeation performance level	1	2	3	4	5	6
Measured breakthrough time (min)	> 10	> 30	> 60	> 120	> 240	> 480

EN ISO 374-4:2019 Degradation results indicate the change in puncture resistance of the gloves after exposure to the challenge chemical:

EN ISO 374-5:2016 The penetration resistance has been assessed under laboratory conditions and relates only to the tested specimen."

Warning:

"This information does not reflect the actual duration of protection in the workplace and the differentiation between mixtures and pure chemicals"

"The chemical resistance has been assessed under laboratory conditions from samples taken from the palm only (except in cases where the glove is equal to or over 400 mm - where the cuff is tested also) and relates only to the chemical tested. It can be different if the chemical is used in a mixture."

"It is recommended to check that the gloves are suitable for the intended use because the conditions at the workplace may differ from the type test depending on temperature, abrasion and degradation."

"When used, protective gloves may provide less resistance to the dangerous chemical due to changes in physical properties. Movements, snagging, rubbing, degradation caused by the chemical contact etc. may reduce the actual use time significantly. For corrosive chemicals, degradation can be the most important factor to consider in selection of chemical resistant gloves"

"Before usage, inspect the gloves for any defect or imperfections."

Storage and transport: When not in use, store the product in a well-ventilated area away from extremes of temperature







Glove performance quoted is based on laboratory data and may not reflect the actual duration of protection in the workplace due to other factors influencing the performance such as temperature, abrasion, degradation etc.)

The glove does not contain any substances that are known to cause allergies.

For single use only, dispose responsibly.

Check for damage before use, do not use damaged gloves

Donning Instructions :

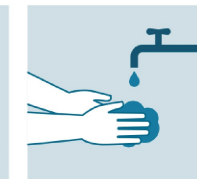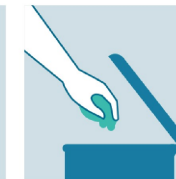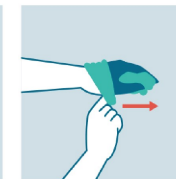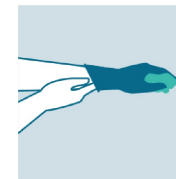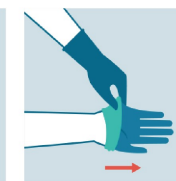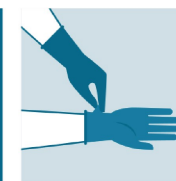

The DoC (declaration of conformity) is available from Toolstation website: www.toolstation.com.

Approved Body responsible for certification and ongoing conformity:	Manufacturer
SATRA Technology Centre	Shandong Xingyu Gloves Co., Ltd
Wyndham Way, Telford Way, Kettering, Northamptonshire, NN16 8SD, UK (Approved Body 0321)	No. 2158 Yaoqian Road, Gaomi, Shandong, China



Bath No.: DS0324A



Expired date: 15/01/2027