

ORIGINAL USER INSTRUCTIONS

135W MULTI TOOL

SKU: AB741






Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

CONTENTS

WHAT'S IN THE BOX	3
SPECIFICATIONS	4
EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS	5
IMPORTANT SAFETY WARNINGS	6
PRODUCT DESCRIPTION AND IDENTIFICATIONS	- 11
ASSEMBLY AND OPERATING INSTRUCTIONS	- 12
CARE AND CLEANING	- 18
• TROUBLESHOOTING	- 18
DECLARATION OF CONFORMITY / PERFORMANCE	- 19
ENVIRONMENTAL INFORMATION	- 20
• WARRANTY	- 20
CUSTOMER SUPPORT	- 24

WHAT'S IN THE BOX

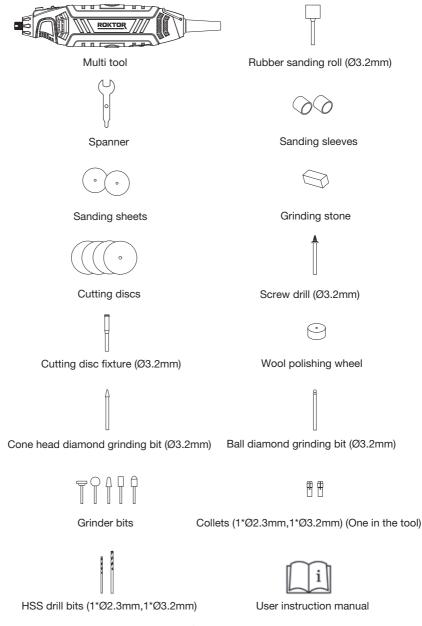

SPECIFICATIONS

- 230V~, 50 Hz
- Variable speed
- Spindle lock
- Replaceable carbon brush
- High quality bearing

TECHNICAL DATA

SKU/Model	AB741 (PDM135N.1)
Rated Voltage	230 V ~ 50 Hz
Rated Power Rate	135W
No-load speed	10000-35000 /min
Plug	BS plug
Protection class	□ /II
Chuck Capacity	3.2mm
Net Weight approx.(kg)	0.55kg
A weighted sound pressure L _{pA} (K _{pA} =3dB(A))	72,57dB(A)
A weighted sound power L _{wA} (K _{wA} =3dB(A))	83,57dB(A)
Vibration level a _h (K=1,5m/s²)	$a_h = 3,267 \text{ m/s}^2$

The declared vibration total value may be used for comparing one tool with another, and may also be used in a preliminary assessment of exposure.

WARNING: The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, especially what kind of workpiece is processed dependant on the following examples and other variations on how the tool is used:

- · How the tool is used and the materials being cut or drilled.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti vibration and noise accessories are used.
- · And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read instruction manual



Class II device - Double Insulation



Risk of damage or injury if the instructions in this manual are not followed



Immediately disconnect the plug from the power outlet if it is damaged, and for all maintenance operations.



Wear eye protection



Wear ear protection



Wear dust mask



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION - To reduce risk of injury, user must read instruction manual

GENERAL SAFETY RULES FOR POWER TOOL

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- 1) Work area safety
- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- 2) Electrical safety
- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- 3) Personal safety
- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dustrelated hazards.
- 4) Power tool use and care
- a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- 5) Service
- a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SAFETY INSTRUCTIONS FOR ALL OPERATIONS

Safety warnings common for grinding, sanding, wire brushing, polishing or abrasive cutting-off operations:

- a) This power tool is intended to function as a grinder, sander, wire brush, polisher or cut-off tool. Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
- b) Operations such as carving is not recommended to be performed with this power tool. Operations for which the power tool was not designed may create a hazard and cause personal injury.
- c) Do not use accessories which are not specifically designed and recommended by the tool manufacturer. Just because the accessory can be attached to your power tool, it does not assure safe operation.

- d) The rated speed of the grinding accessories must be at least equal to the maximum speed marked on the power tool. Grinding accessories running faster than their rated speed can break and fly apart.
- e) The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately controlled.
- f) The arbour size of wheels, sanding drums or any other accessory must properly fit the spindle or collet of the power tool. Accessories that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
- g) Mandrel mounted wheels, sanding drums, cutters or other accessories must be fully inserted into the collet or chuck. If the mandrel is insufficiently held and/or the overhang of the wheel is too long, the mounted wheel may become loose and be ejected at high velocity.
- h) Do not use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks, sanding drum for cracks, tear or excess wear, wire brush for loose or cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.
- i) Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtrating particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.
- j) Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.
- k) Hold power tool by insulated gripping surfaces only, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- Always hold the tool firmly in your hand(s) during the start-up. The reaction torque of the motor, as it accelerates to full speed, can cause the tool to twist.
- m) Use clamps to support workpiece whenever practical. Never hold a small workpiece in one hand and the tool in the other hand while in use. Clamping a small workpiece allows you to use your hand(s) to control the tool. Round material such as dowel rods, pipes or tubing have a tendency to roll while being cut, and may cause the bit to bind or jump toward you.
- n) Position the cord clear of the spinning accessory. If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning accessory.
- o) Never lay the power tool down until the accessory has come to a complete stop. The spinning accessory may grab the surface and pull the power tool out of your control.
- p) After changing the bits or making any adjustments, make sure the collet nut, chuck or any other adjustment devices are securely tightened. Loose adjustment devices can unexpectedly shift, causing loss of control, loose rotating components will be violently thrown.
- q) Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.

- r) Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
- s) Do not operate the power tool near flammable materials. Sparks could ignite these materials.
- t) Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

FURTHER SAFETY INSTRUCTIONS FOR ALL OPERATIONS

Kickback and related warnings

Kickback is a sudden reaction to a pinched or snagged rotating wheel, sanding band, brush or any other accessory. Pinching or snagging causes rapid stalling of the rotating accessory which in turn causes the uncontrolled power tool to be forced in the direction opposite of the accessory's rotation.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- a) Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. The operator can control kickback forces, if proper precautions are taken.
- b) Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory. Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
- c) Do not attach a toothed saw blade. Such blades create frequent kickback and loss of control.
- d) Always feed the bit into the material in the same direction as the cutting edge is exiting from the material (which is the same direction as the chips are thrown). Feeding the tool in the wrong direction causes the cutting edge of the bit to climb out of the work and pull the tool in the direction of this feed.
- e) When using rotary files, cut-off wheels, high-speed cutters or tungsten carbide cutters, always have the work securely clamped. These wheels will grab if they become slightly canted in the groove, and can kickback. When a cut-off wheel grabs, the wheel itself usually breaks. When a rotary file, high-speed cutter or tungsten carbide cutter grabs, it may jump from the groove and you could lose control of the tool.

Safety Warnings Specific for Grinding and Abrasive Cutting-Off Operations:

- a) Use only wheel types that are recommended for your power tool and only for recommended applications. For example: do not grind with the side of a cut-off wheel. Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
- b) For threaded abrasive cones and plugs use only undamaged wheel mandrels with an unrelieved shoulder flange that are of correct size and length. Proper mandrels will reduce the possibility of breakage.
- c) Do not "jam" a cut-off wheel or apply excessive pressure. Do not attempt to make an excessive depth of cut. Overstressing the wheel increases the loading and susceptibility to twisting or snagging of the wheel in the cut and the possibility of kickback or wheel breakage.
- d) Do not position your hand in line with and behind the rotating wheel. When the wheel, at the point of operation, is moving away from your hand, the possible kickback may propel the spinning wheel and the power tool directly at you.


- e) When wheel is pinched, snagged or when interrupting a cut for any reason, switch off the power tool and hold the power tool motionless until the wheel comes to a complete stop. Never attempt to remove the cut-off wheel from the cut while the wheel is in motion otherwise kickback may occur. Investigate and take corrective action to eliminate the cause of wheel pinching or snagging.
- f) Do not restart the cutting operation in the workpiece. Let the wheel reach full speed and carefully re-enter the cut. The wheel may bind, walk up or kickback if the power tool is restarted in the workpiece.
- g) Support panels or any oversized workpiece to minimise the risk of wheel pinching and kickback. Large workpieces tend to sag under their own weight. Supports must be placed under the workpiece near the line of cut and near the edge of the workpiece on both sides of the wheel.
- h) Use extra caution when making a "pocket cut" into existing walls or other blind areas.

 The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.

Safety Warnings Specific for Wire Brushing Operations:

- a) Be aware that wire bristles are thrown by the brush even during ordinary operation. Do not overstress the wires by applying excessive load to the brush. The wire bristles can easily penetrate light clothing and/or skin.
- b) Allow brushes to run at operating speed for at least one minute before using them. During this time no one is to stand in front or in line with the brush. Loose bristles or wires will be discharged during the run-in time.
- c) Direct the discharge of the spinning wire brush away from you. Small particles and tiny wire fragments may be discharged at high velocity during the use of these brushes and may become embedded in your skin.

PRODUCT DESCRIPTION AND IDENTIFICATIONS

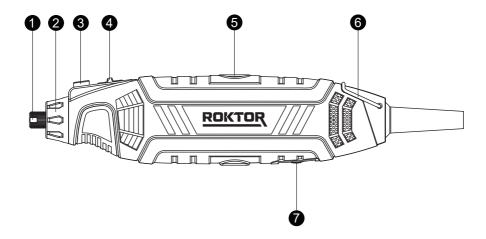

- 1. Collet nut
- 2. Housing cap
- 3. Spindle lock button
- 4. On/Off switch
- 5. Carbon brush holder
- 6. Hook
- 7. Variable speed control

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

The tool is packaged with some parts that are unattached and require a little, simple assembly.

WARNING: Do not operate until fully assembled and with all parts correctly attached.

NOTE: Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

ASSEMBLY

1. CHANGING THE COLLET (SEE FIG. 1)

Different size of collets are provided to accommodate the different accessories shank sizes. When using an accessory with a smaller or larger shaft, you will need to change the collet which matches the shank size of the accessory as follows.

Press the spindle lock button. Loosen the collet nut (a) with the spanner provided. Remove the collet nut (a) and then fully insert the appropriate size collet (b) into the spindle. Reinstall the collet nut (a) tight by finger. Do not over-tighten the nut when there is no accessory in the collet.

NOTE: Always use the collet which matches the shank size of the accessory you plan to use. Do not force a larger diameter shank into a smaller collet.

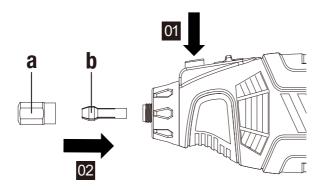


Figure 1

2. FITTING A BIT, FIXTURE OR DRILL (SEE FIG. 2)

Press the spindle lock button. Hold down and rotate the spindle by hand or spanner anti-clockwise to loosen the collet nut. Fully insert the tool shank into the collet. Tighten the collet nut with the spanner. Finally release the spindle lock button.

NOTE: All the accessories should have the shank fully inserted into the collet.

WARNING: Do not engage the spindle lock button while the tool is running.

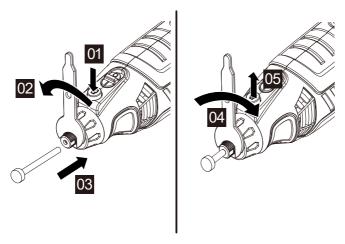


Figure 2

3. FITTING A CUTTING/SANDING WHEEL (SEE FIG. 3)

Loosen the small screw (c) on the cutting disc fixture with the spanner. Insert the screw through the clips and wheel and then tighten the screw into the fixture with the spanner. Make sure the wheel and cutting disc fixture remain level. Do not over-tighten or the wheel may crack.

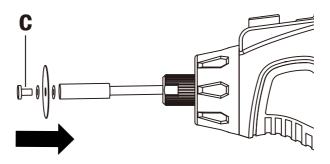


Figure 3

4. ASSEMBLING THE WOOL POLISHING WHEEL (SEE FIG. 4)

The wool polishing wheel is used with the screw drill.

Thread the wheel on to the screw drill carefully. The wool polishing wheel must thread down straight on the screw drill, and be turned all the way to the collar.

After assembling the wool polishing wheel to the screw drill, it can be used to polish plastics, metals, steels, jewellery and small parts with polishing compound, which will give a high luster to the surfaces of the materials. For best results, polishing accessories should be used at speeds not greater than half speed.

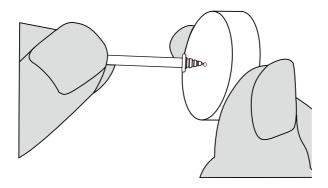


Figure 4

5. FITTING THE SANDING SLEEVE (SEE FIG. 5-1&5-2)

To fit the sanding sleeve, first loosen the small screw on top of the sanding roll, which will allow the rubber to relax. Slide the sanding sleeve onto the holder. To secure, simply tighten the screw and the rubber sanding roll will swell, gripping the sanding sleeve.

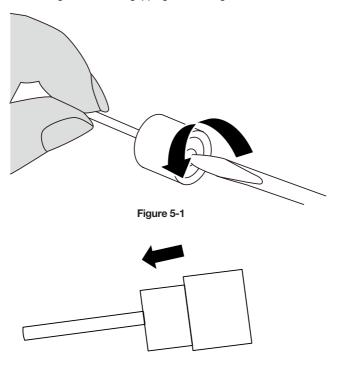


Figure 5-2

OPERATION INTENDED USE

This power tool is intended to function as a grinder, sander, wire brush, polisher or cut-off tool.

1. ON/OFF SWITCH (SEE FIG. 6)

NOTE: This tool has been set to the slowest speed before switching on.

To start the tool, push the switch forward to the "I" (On) position. To stop, push the switch back to the "O" (Off) position.

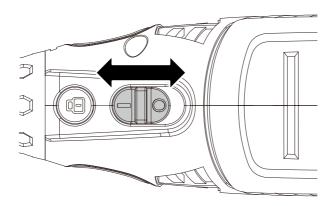


Figure 6

2. SPEED ADJUSTMENT (SEE FIG. 7)

To achieve the best result when working with different materials, you can adjust the tool speed with the variable speed control. The tool has a variable speed control for precise speed adjustment. Set it to the required speed for operation.

NOTE: Select a low speed when working with wood, plastics and polishing. Generally, select higher speed for small tools while lower speed for larger tools.

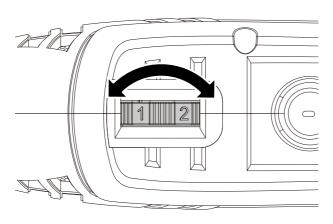


Figure 7

3. DRILLING OPERATION

Turn the tool on until full speed. Apply the tool to the workpiece gently. To obtain a good finish, move the tool in the leftward direction slowly.

NOTE: Apply light pressure on the tool. Excessive pressure will only cause a poor finish and overloading of the motor.

4. HOLDING THE TOOL

For milling or engraving, hold the tool like a pen. Take care not to cover the ventilation slots.


NOTE: The tool will get warm during normal operation. If overheating occurs, stop working and allow the tool to cool.

5. REPLACING THE CARBON BRUSHES (NOT SUPPLIED) (SEE FIG. 8)

The carbon brushes must be checked on a regular basis. There are two brushes in the tool and they must be replaced in pairs.

Remove the carbon brush holders with the spanner and check the brushes. If the length of brush is less than 4mm, replace both brushes. Have the machine run at no load for 15 minutes. **NOTE:** Use only the correct type of carbon brushes.

CAUTION: Using the tool with worn brushes will permanently damage the motor.

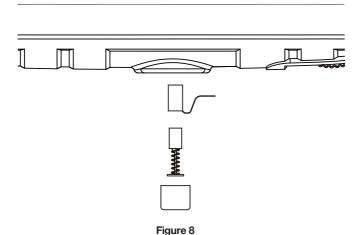

6. USING ACCESSORIES

The chart below lists the description, use speed and scope for some of the small articles supplied together with the tool by category. To achieve best performance of the tool, it is strongly recommended that you read it prior to operation, failure to adhere to this may cause accessories to fail.

NOTE: ALWAYS wear eye protection. Insert the shaft FULLY into the collet. Use ONLY up to the speeds stated below.

Picture	Description	Speed	For use on
	Grinder bits Various head styles on shafts	Full speed	Metal Mild steel
	Diamond grinding bits Various head styles	Full speed	Wood Zinc Plastic Nickel Copper Mild steel
	Wool polishing wheel Mounted to screw drill	Half speed	Metal Mild steel
	Sanding/Cutting wheel Mounted to cutting disc fixture NOTE: DO NOT over tighten screw	Half speed	Metal Mild steel Wood
	Sanding sleeve Mounted to rubber sanding roll	Full speed	Metal Mild steel

CARE AND CLEANING

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance. Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Disconnect the power and allow the tool rotation to stop.
- Use only a damp cloth to clean the enclosure.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with soft cloth. If the dust is uneasy to wipe away, rub it with soap water.
- · WARNING! unplug the tool before cleaning.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
The tool is not operating.	The plug is not fully	Make sure that the plug is fully
	inserted into the wall outlet.	inserted into the base AC wall outlet.
	Faulty power switch	Contact Customer Service Centre.
The tool has low	• Inappropriate tool speed or	Change the tool speed and
efficiency.	type of accessory.	accessory.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AB741 (PDM135N.1)
Product Description: 135W Multi Tool & 25pc Accessories

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations
- 3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):
- BS EN 60745-1
- BS EN 60745-2-23
- BS EN IEC 55014-1
- BS EN IEC 55014-2
- BS EN IEC 61000-3-2
- BS EN 61000-3-3
- BS EN IEC 63000
- 4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China