




ORIGINAL USER INSTRUCTIONS

1600W 190mm CIRCULAR SAW

SKU: AB747

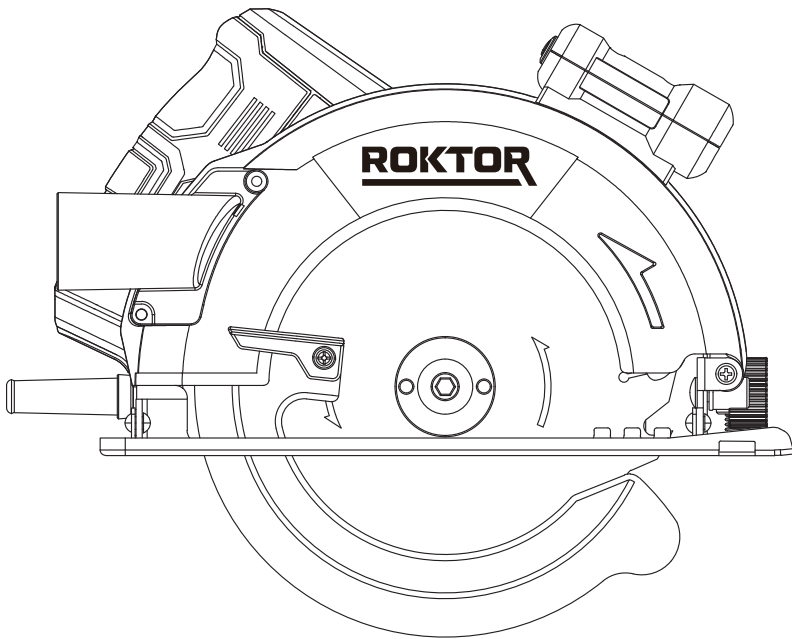

READ BEFORE USE

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER REFERENCE


Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com


CONTENTS

• WHAT'S IN THE BOX-----	3
• SPECIFICATIONS-----	4
• EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS-----	5
• IMPORTANT SAFETY WARNINGS-----	6
• PRODUCT DESCRIPTION AND IDENTIFICATIONS-----	11
• ASSEMBLY AND OPERATING INSTRUCTIONS-----	13
• CARE AND CLEANING-----	21
• TROUBLESHOOTING-----	21
• DECLARATION OF CONFORMITY / PERFORMANCE-----	22
• ENVIRONMENTAL INFORMATION-----	23
• WARRANTY-----	23
• CUSTOMER SUPPORT-----	24


WHAT'S IN THE BOX

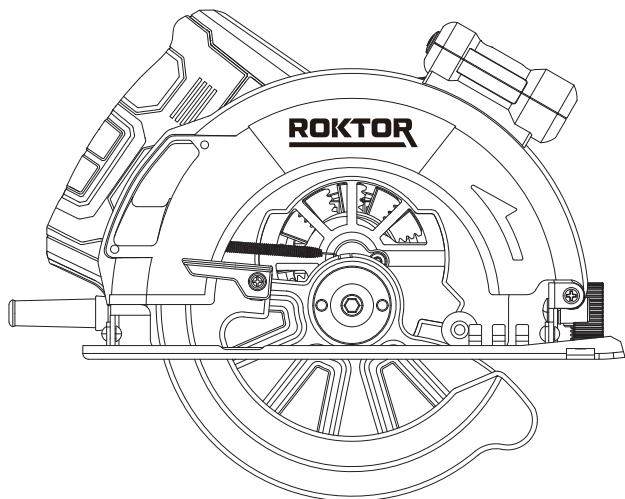

Circular saw

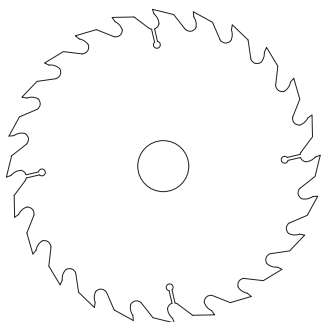

Wood blade

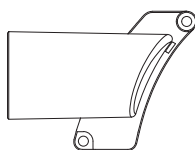


Vacuum adaptor



Hex key



User instruction manual

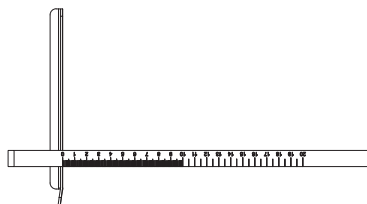

Parallel guide


SPECIFICATIONS

- 230V~, 50Hz
- Steel base and lower guard
- Laser guide
- Aluminium upper guard

TECHNICAL DATA

SKU/Model		AB747 (PSC190G10)
Rated voltage		230V ~ 50Hz
Rated power rate		1600W
No-load speed		5000 /min
Plug		BS plug
Protection class		□ /II
Blade size		190mm*30mm*24T
Bevel capacity		0-45°
Max. cutting depth	45°	46mm
	90°	65mm
Laser		Class 2, λ 650nm P<1mW
Net weight approx.(kg)		4.05 kg
A weighted sound pressure L_{pA} (K_{pA} = 3 dB(A))		102 dB(A)
A weighted sound power L_{wA} (K_{wA} = 3 dB(A))		110 dB(A)
Vibration level a_h (K=1,5 m/s ²)		$a_{h,W}$ = 3,5 m/s ²
Cutting wood		

The declared vibration total value and the declared noise emission value have been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value and the declared noise emission value may also be used in a preliminary assessment of exposure.

 **WARNING:** The vibration and noise emissions during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used, especially what kind of workpiece is processed dependant on the following examples and other variations on how the tool is used:

- How the tool is used and the materials being cut.
- The tool being in good condition and well maintained.
- The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
- The tightness of the grip on the handles and if any anti vibration and noise accessories are used.
- And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

WARNING: To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle, such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period, helping to minimise your vibration and noise exposure risk.

Always use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti vibration and noise accessories.

Plan your work schedule to spread any high vibration tool use across a number of days.

EXPLANATIONS AND SYMBOLS, CAUTIONS AND WARNINGS



To reduce the risk of injury, user must read instruction manual



Class II device - Double Insulation



Risk of damage or injury if the instructions in this manual are not followed



Immediately disconnect the plug from the power outlet if it is damaged, and for all maintenance operations.



Wear eye protection



Wear ear protection



Wear dust mask



Always wear gloves



Do not stare into beam



Laser radiation



The product complies with the applicable European Directives and an evaluation method of conformity for these Directives was carried out.



UK Conformity Assessed

IMPORTANT SAFETY WARNINGS



CAUTION – To reduce risk of injury, user must read instruction manual

GENERAL POWER TOOL SAFETY WARNINGS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
 - e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
 - f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
 - g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
 - h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*
- 4) Power tool use and care**
- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
 - b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
 - c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
 - d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
 - e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
 - f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
 - g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
 - h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
- 5) Service**
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

SAFETY INSTRUCTIONS FOR ALL SAWS

Cutting procedures

- a) **⚠ DANGER: Keep hands away from cutting area and the blade. Keep your second hand on auxiliary handle, or motor housing. If both hands are holding the saw, they cannot be cut by the blade.**
- b) **Do not reach underneath the workpiece. The guard cannot protect you from the blade below the workpiece.**
- c) **Adjust the cutting depth to the thickness of the workpiece. Less than a full tooth of the blade teeth should be visible below the workpiece.**
- d) **Never hold the workpiece in your hands or across your leg while cutting. Secure the workpiece to a stable platform. It is important to support the work properly to minimise body exposure, blade binding, or loss of control.**
- e) **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will also make exposed metal parts of the power tool "live" and could give the operator an electric shock.**
- f) **When ripping, always use a rip fence or straight edge guide. This improves the accuracy of cut and reduces the chance of blade binding.**
- g) **Always use blades with correct size and shape (diamond versus round) of arbour holes. Blades that do not match the mounting hardware of the saw will run off-centre, causing loss of control.**
- h) **Never use damaged or incorrect blade washers or bolt. The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.**

FURTHER SAFETY INSTRUCTIONS FOR ALL SAWS

Kickback causes and related warnings

- Kickback is a sudden reaction to a pinched, jammed or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator;
- When the blade is pinched or jammed tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator;
- If the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator.

Kickback is the result of saw misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- a) **Maintain a firm grip with both hands on the saw and position your arms to resist kickback forces. Position your body to either side of the blade, but not in line with the blade. Kickback could cause the saw to jump backwards, but kickback forces can be controlled by the operator, if proper precautions are taken.**
- b) **When blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or kickback may occur. Investigate and take corrective actions to eliminate the cause of blade binding.**
- c) **When restarting a saw in the workpiece, centre the saw blade in the kerf so that the saw teeth are not engaged into the material. If a saw blade binds, it may walk up or kickback from the workpiece as the saw is restarted.**
- d) **Support large panels to minimise the risk of blade pinching and kickback. Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.**
- e) **Do not use dull or damaged blades. Unsharpened or improperly set blades produce narrow kerf causing excessive friction, blade binding and kickback.**

- f) **Blade depth and bevel adjusting locking levers must be tight and secure before making the cut.** *If blade adjustment shifts while cutting, it may cause binding and kickback.*
- g) **Use extra caution when sawing into existing walls or other blind areas.** *The protruding blade may cut objects that can cause kickback.*

SAFETY INSTRUCTIONS FOR SAWS (CIRCULAR SAW WITH INNER PENDULUM GUARD)

Lower guard function

- a) **Check the lower guard for proper closing before each use. Do not operate the saw if the lower guard does not move freely and close instantly. Never clamp or tie the lower guard into the open position.** *If the saw is accidentally dropped, the lower guard may be bent. Raise the lower guard with the retracting handle and make sure it moves freely and does not touch the blade or any other part, in all angles and depths of cut.*
- b) **Check the operation of the lower guard spring. If the guard and the spring are not operating properly, they must be serviced before use.** *Lower guard may operate sluggishly due to damaged parts, gummy deposits, or a build-up of debris.*
- c) **The lower guard may be retracted manually only for special cuts such as “plunge cuts” and “compound cuts.”** *Raise the lower guard by retracting handle and as soon as the blade enters the material, the lower guard must be released. For all other sawing, the lower guard should operate automatically.*
- d) **Always observe that the lower guard is covering the blade before placing the saw down on bench or floor.** *An unprotected, coasting blade will cause the saw to walk backwards, cutting whatever is in its path. Be aware of the time it takes for the blade to stop after switch is released.*

ADDITIONAL SAFETY RULES FOR YOUR CIRCULAR SAW

1. Use only saw blades recommended by the manufacturer, which conform to EN 847-1, if intended for wood and analogous materials.
2. Do not use any abrasive wheels.
3. Use only blade diameter(s) in accordance with the markings.
4. Identify the correct saw blade to be used for the material to be cut.
5. Use only saw blades that are marked with a speed equal or higher than the speed marked on the tool.

GENERAL SAFETY WARNINGS FOR YOUR LASER



WARNING: Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in serious injury.*

Save all warnings and instructions for future reference.

These lasers do not normally present an optical hazard although staring at the beam may cause flash blindness.

Do not stare directly at the laser beam. A hazard may exist if you deliberately stare into the beam, please observe all safety rules as follows:


1. The laser shall be used and maintained in accordance with the manufacturer's instructions.
2. Never aim the beam at any person or an object other than the work piece.
3. The laser beam shall not be deliberately aimed at another person and shall be prevented from being directed towards the eye of a person for longer than 0.25 seconds.
4. Always ensure the laser beam is aimed at a sturdy work piece without reflective surfaces, e.g. wood or rough-coated surfaces are acceptable. Bright shiny reflective sheet steel or similar is not suitable for laser applications as the reflective surface may direct the laser beam back at the operator.
5. Do not change the laser device with a different type. The manufacturer or an authorised agent must carry out repairs.
6. CAUTION: Use of controls or adjustments other than those specified herein may result in hazardous radiation exposure.

ADDITIONAL SAFETY WARNING FOR CLASS 2 LASER


The laser device fitted to this tool is CLASS 2 with a maximum radiation of 1mW and 650nm wavelength.

CLASS 2 LASER RADIATION DO NOT STARE INTO BEAM

PRODUCT DESCRIPTION AND IDENTIFICATIONS

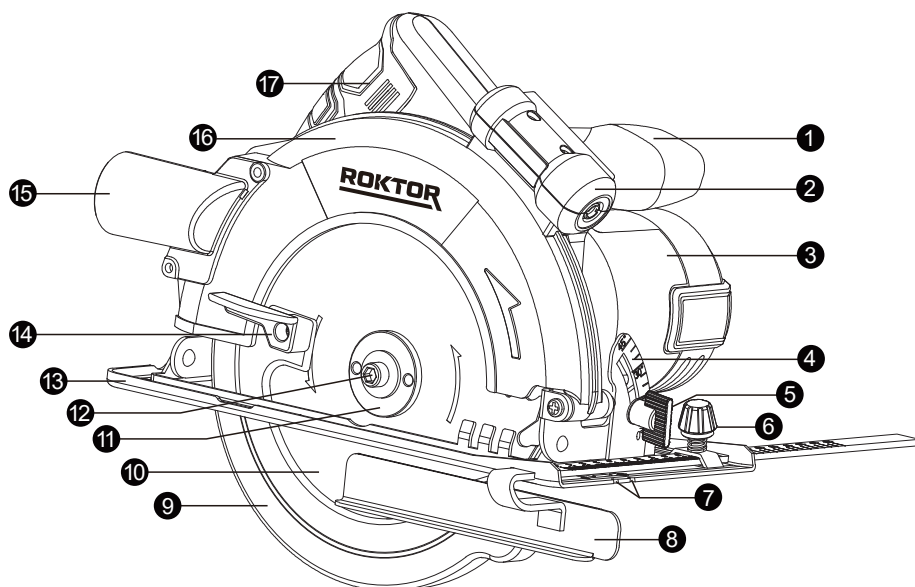

1. Front handle
2. Laser guide
3. Motor housing
4. Base plate angle scale base
5. Base plate bevel lock knob
6. Parallel guide lock knob
7. Cutting guide notch
8. Parallel guide
9. Lower blade guard
10. Saw blade
11. Outer flange
12. Blade bolt
13. Base plate
14. Lower guard lever
15. Vacuum adaptor
16. Fixed guard
17. Rear handle

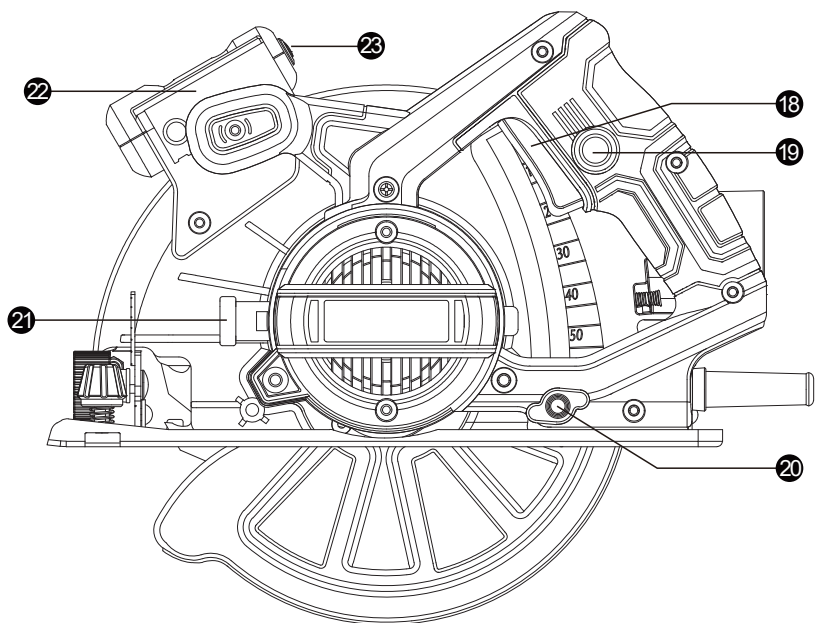

- 18. Safety on/off switch**
- 19. Lock-off button**
- 20. Cutting depth adjustment lock knob**
- 21. Spindle lock button**
- 22. Laser battery cover**
- 23. Laser on/off switch**

ASSEMBLY AND OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

The tool is packaged with some parts that are unattached and require a little, simple assembly.



WARNING: Do not operate until fully assembled and with all parts correctly attached. Blade teeth are very sharp. Handle with extreme care.

ASSEMBLY



WARNING: Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

1. INSTALLING OR REMOVING SAW BLADE



WARNING: Wear protective gloves when mounting the saw blade. Danger of injury when touching the saw blade.



WARNING: Blade teeth are very sharp. For best cutting results, ensure you use a saw blade suited to the material and cut quality you need.

- To install (See Fig. 1 - 4)

Press the spindle lock button and use the hex key to loosen and remove the blade bolt. Remove the washer and the outer flange.

Tilt back the lower blade guard and hold it firmly with the lower guard lever. Place the saw blade onto the inner flange and ensure that the blade bore is located on the inner flange and the blade direction arrow points in the same direction as the fixed guard arrow. Place the outer flange, the washer and the blade bolt onto the blade bore. Press the spindle lock again and use the hex key to tighten the bolt. Check if the blade is securely clamped.

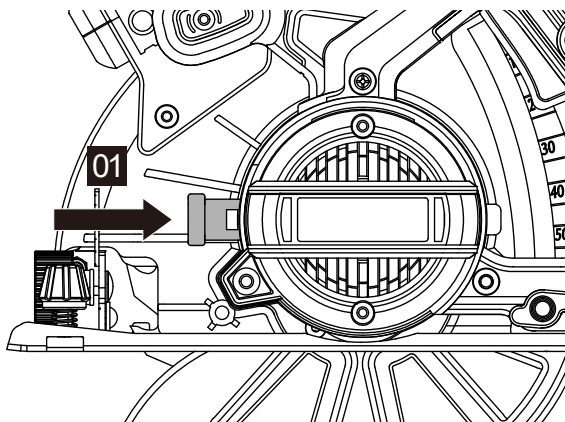


Figure 1

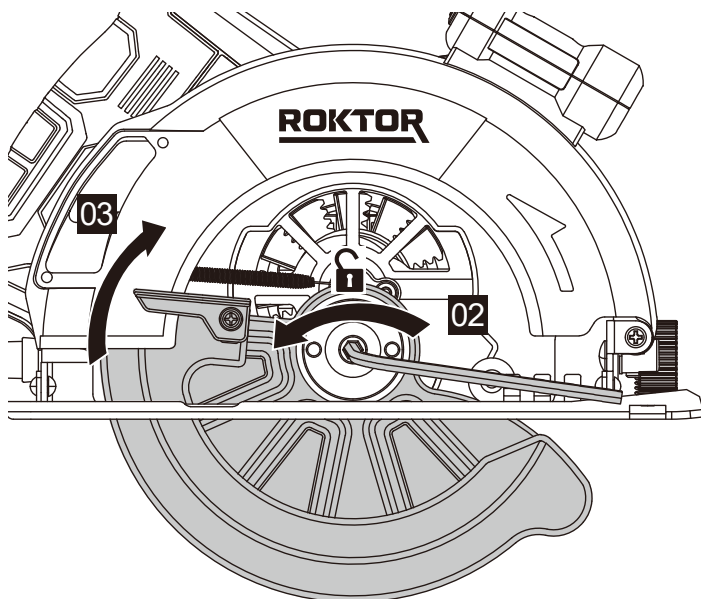


Figure 2

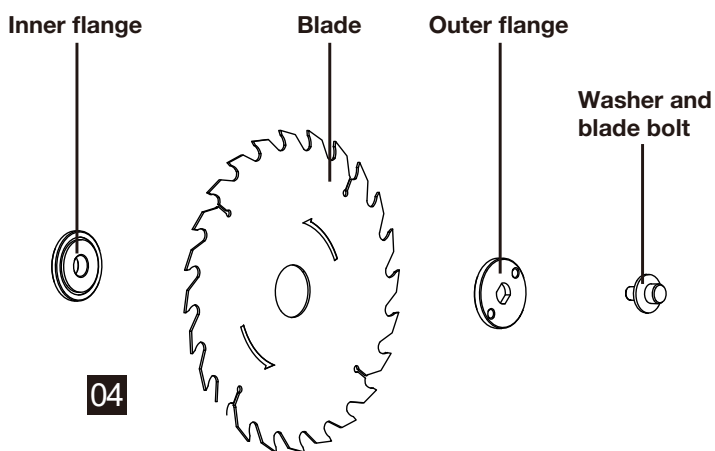


Figure 3

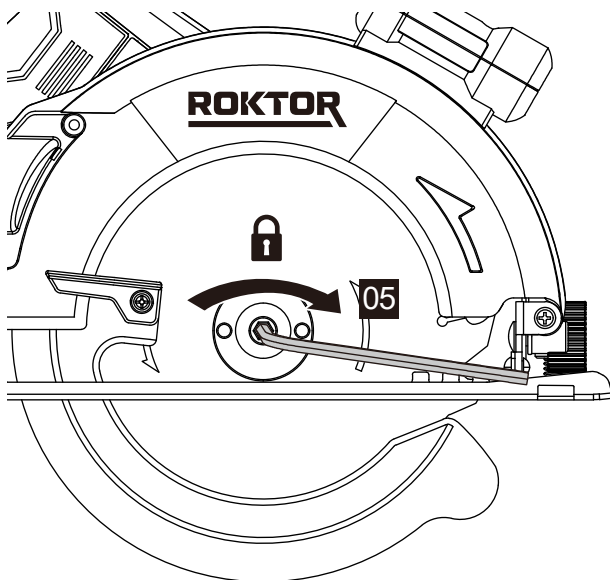


Figure 4

- To remove

Press the spindle lock button and use the hex key to loosen and remove the blade bolt. Remove the washer and the outer flange.

Tilt back the lower blade guard and hold it firmly with the lower guard lever. Now you can remove the saw blade.

NOTE: If the machine is not in use temporarily, the blade bolt, washer and outer flange can be cleaned and installed back on the machine to avoid loss.

2. VACUUM ADAPTOR FITTING (SEE FIG. 5)

Fasten the vacuum adaptor onto the dust extraction outlet until it latches. Additionally fasten the vacuum adaptor to the fixed guard with the two screws. Directly connect a suitable vacuum hose to the adaptor.



WARNING: The vacuum adaptor must not be mounted when no external dust extraction is connected. Otherwise there is danger of the extraction system becoming clogged. Clean the vacuum adaptor regularly to ensure optimum dust extraction. The vacuum cleaner must be suitable for the material to be worked.

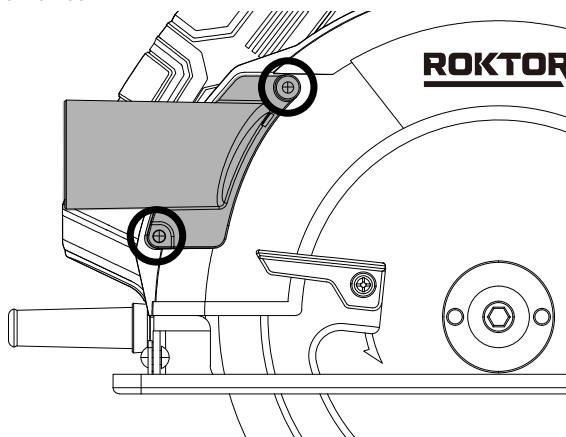


Figure 5

3. PARALLEL GUIDE FITTING (SEE FIG. 6)

It is used for making cuts parallel to a workpiece edge at a chosen distance. First loosen the lock knob to enlarge the hole, then slide the parallel guide arm through the fixture to achieve the required cutting distance and tighten the lock knob to clamp. It can be used from both sides of the base plate.

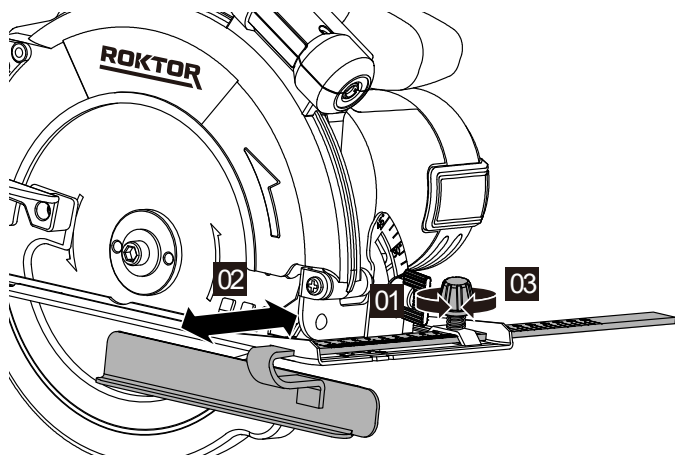


Figure 6

OPERATION

INTENDED USE

The machine is intended for lengthways and crossways cutting of wood with straight cutting lines as well as bevel angles to 45° while resting firmly on the work piece.

1. CUTTING DEPTH ADJUSTMENT (SEE FIG. 7)

Loosen the cutting depth adjustment lock knob. Set the depth of cut with the scale and tighten the knob. Always add 3mm to your depth of cut so that the blade can cut through the material.

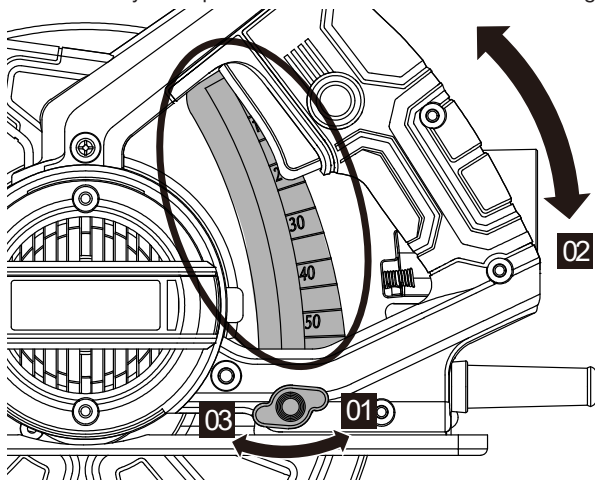


Figure 7

2. BASE PLATE ANGLE ADJUSTMENT (SEE FIG. 8)

Turn the base plate bevel lock knob in anti-clockwise direction to loosen the angle scale. Tilt the base plate away from the machine until the required cutting angle is adjusted on the angle scale. Tighten the bevel lock knob by turning it in clockwise direction. Do not use the depth of cut scale when making bevel cuts due to possible inaccuracy.

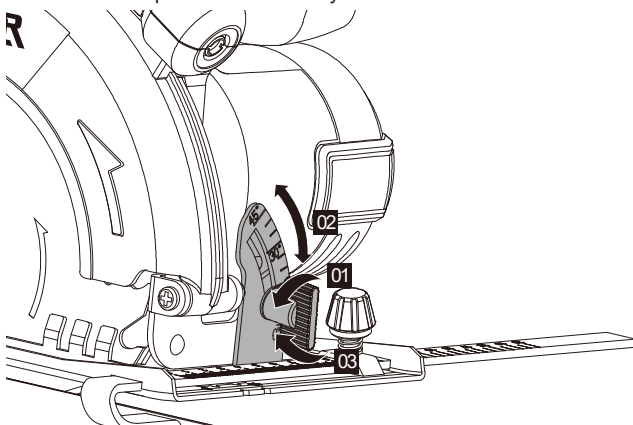


Figure 8

3. SAFETY ON/OFF SWITCH (SEE FIG. 9)

Your switch is locked off to prevent accidental starting. Depress the lock off button then the on/off switch and release the lock off button. Your switch is now on. To switch off, just release the on/off switch.



WARNING: The blade may continue to rotate after switching off. Wait until the machine comes to a complete stop before setting down.

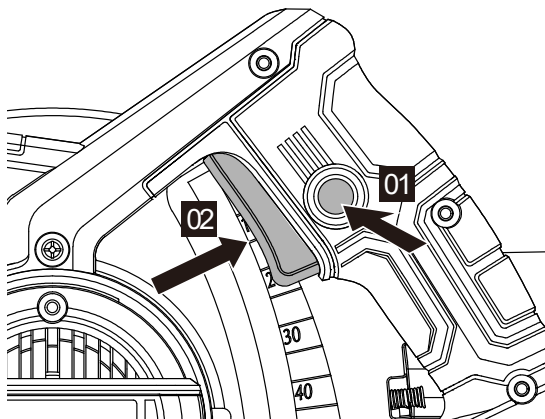


Figure 9

4. HAND GRIP AREAS (SEE FIG. 10)

Always hold your saw firmly with both hands when operating.

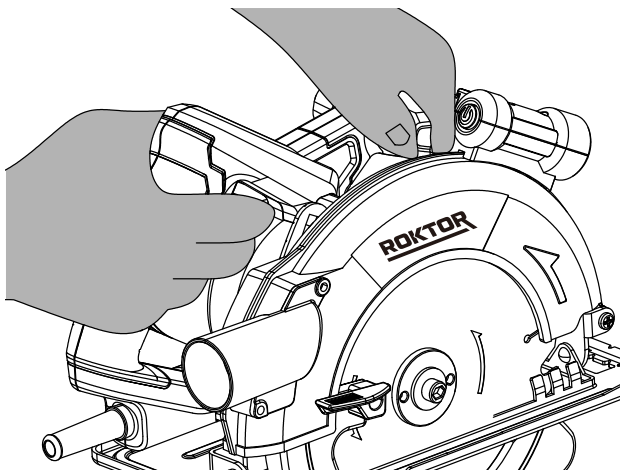


Figure 10

5. CUTTING GUIDE (SEE FIG. 11)

There is a cutting guide notch on the front of the base plate for use with a parallel guide.

For straight cuts, use the 0° guide mark to align with your parallel guide scale.

For a 45° bevel cut, use the 45° guide mark to align with your parallel guide scale. Securely clamp the parallel guide. Always make a trial cut to check the setting.

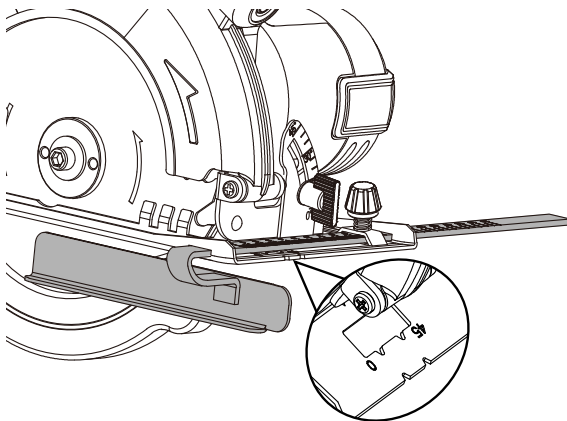


Figure 11

6. LASER GUIDE (SEE FIG. 12 & 13)



WARNING: Never stare directly into the laser beam and never point the beam at anybody. The laser beam energy is extremely harmful to your eyes.

- 1) The laser guide is for the purpose of precision cutting. Make sure the batteries are fitted in the laser guide before carrying out precision cutting. To fit the batteries, remove the battery storage cover as shown, insert 2 AAA batteries (not supplied), then replace cover.

NOTE: Ensure correct battery polarity.

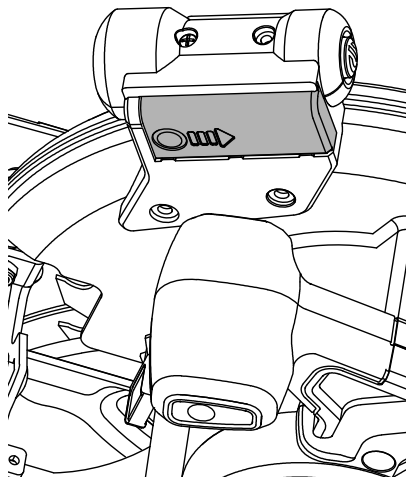


Figure 12

2) Depress the laser on/off switch button, the laser guide then projects a visible red line on the workpiece surface; make your cut along the red line.

NOTE: The sawdust may block the laser beam, clean the laser generator periodically.

Switch off the laser when you stop the machine. The laser does not turn off automatically.

Take out batteries if you do not need to use the laser for a long time.

Never stare directly into the laser beam and never point the beam at anybody.

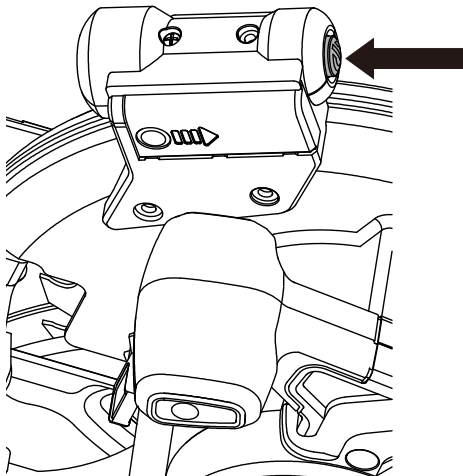


Figure 13

7. WORKING HINTS FOR YOUR CIRCULAR SAW

If your power tool becomes too hot, run your circular saw no load for 2-3 minutes to cool the motor. Avoid prolonged usage at very low speeds.

Always use a blade suited to the material and material thickness to be cut. The quality of cut will improve as the number of blade teeth increase.

Always ensure the work-piece is firmly held or clamped to prevent movement. Support large panels close to the cut line. Any movement of the material may affect the quality of the cut. The blade cuts on the upward stroke and may chip the uppermost surface or edges of your work piece.

When cutting, ensure your uppermost surface is a nonvisible surface when your work is finished. Feeding too fast significantly reduces the performance of the machine and shortens the life of the saw blade. Always face the good side of the work-piece down, to ensure minimum splintering. Only use sharp saw blades of the correct type.

CARE AND CLEANING

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Disconnect the power and allow the tool rotation to stop.
- Use only a damp cloth to clean the enclosure.
- Do not use any chemical or abrasive cleaners.
- When the tool is not used for long periods of time, it should be protected from dust and stored in a clean dry place.
- Clean it with soft cloth. If the dust is uneasy to wipe away, rub it with soap water.
- **CAUTION:** Blade teeth are very sharp. Handle with extreme care.
- **WARNING!** unplug the tool before cleaning.

TROUBLESHOOTING

Use this section to help you to try and solve any problems you may have:

PROBLEM	POSSIBLE CAUSES	REMEDIES
Tool will not start when operating the on/off switch.	<ul style="list-style-type: none">• Power cord not plugged in.• Power cord is broken.	<ul style="list-style-type: none">• Make sure that the plug is fully inserted into the base AC wall outlet.• Contact Customer Service Centre.
Cutting depth is less than that is set.	<ul style="list-style-type: none">• Sawdust accumulated at the rear of the base.	<ul style="list-style-type: none">• Shake out sawdust. Consider connecting a vacuum for dust collection.
Blade spins or slips.	<ul style="list-style-type: none">• Blade is not tightly engaged with the spindle.	<ul style="list-style-type: none">• Remove the blade, and reassemble it as described in INSTALLING OR REMOVING SAW BLADE section.
Blade will not cut a straight line.	<ul style="list-style-type: none">• Blade is worn.• Blade is not mounted properly.• Saw is not being guided properly.	<ul style="list-style-type: none">• Mount a new, sharp blade on the saw.• Check that blade is properly mounted.• Use a parallel guide.
Blade kicks back when beginning a cut.	<ul style="list-style-type: none">• Blade is not spinning fast enough.	<ul style="list-style-type: none">• Allow the saw blade to reach full speed prior to beginning a cut in the material.

NOTE: IF YOU EXPERIENCE A PROBLEM WITH YOUR POWER TOOL, PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE POWER TOOL YOURSELF. DOING SO MAY VOID THE WARRANTY AND COULD CAUSE DAMAGE OR PERSONAL INJURY. IF THE PROBLEM STILL PERSISTS, PLEASE CONTACT US BY REFERRING TO THE SERVICE & SUPPORT INFORMATION ON THE FOLLOWING PAGE.

DECLARATION OF CONFORMITY / PERFORMANCE



Product Code: AB747 (PSC190G10)

Product Description: 1600W 190mm Circular Saw

1. Toolstation (company number 04372131)

This declaration of conformity is issued under the sole responsibility of Toolstation

2. Object of the declaration

The object of the declaration described above is in conformity with the relevant Community harmonisation legislation:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations

3. References to the relevant standards used (or references to the specifications in relation to which conformity is declared):

- BS EN 62841-1
- BS EN 62841-2-5
- BS EN IEC 55014-1
- BS EN IEC 55014-2
- BS EN IEC 61000-3-2
- BS EN 61000-3-3
- BS EN IEC 63000
- EN 60825-1:2014+A11:2021

4. Additional information:

Signed for and on behalf of Toolstation Limited

ENVIRONMENTAL INFORMATION



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

WARRANTY

Toolstation products deliver reliable service for normal, household use in domestic settings. All Toolstation products are individually tested before leaving the factory.

Your product is under warranty for 2 years from the date of purchase or the date of delivery of the product, if later.

The warranty is subject to the following provisions:

- The warranty does not cover accidental damage, misuse, parts, knobs, or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The warranty will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The warranty is in addition to, and does not diminish your statutory or legal rights.

CUSTOMER SUPPORT

Helpline: +44 3331 880059

Email: roktor.support@positecgroup.com

Made in China